
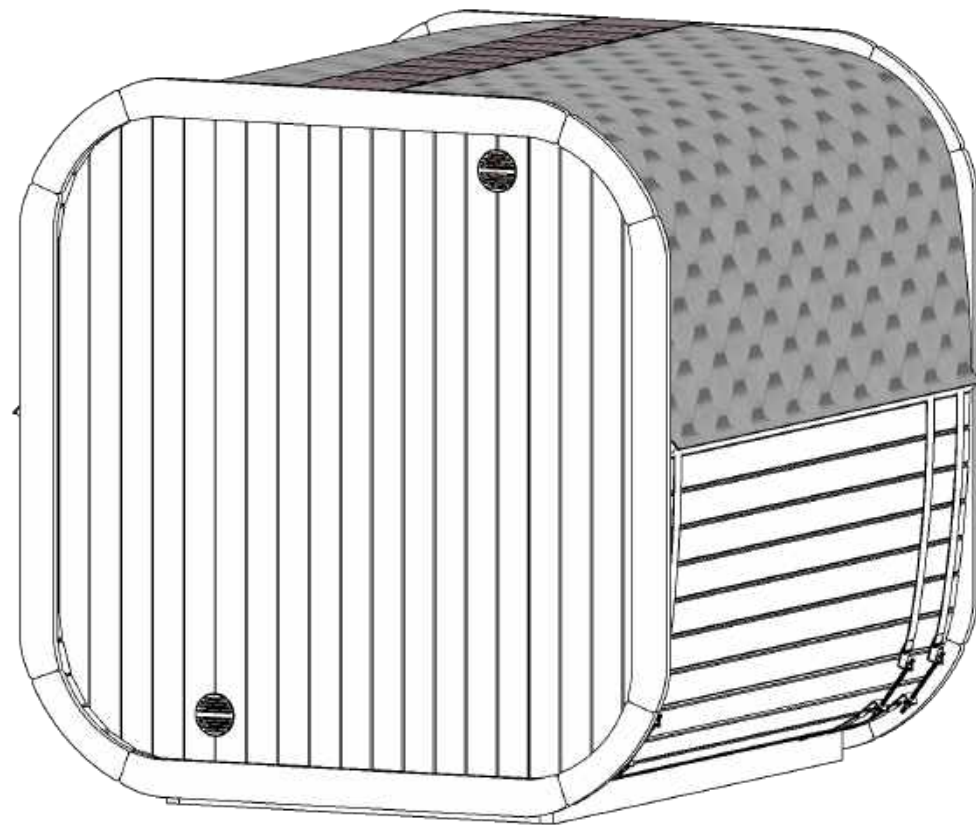


Sauna "Icon" 220,Ø226


**NB! Please read whole manual
before start.**



**All given measurements
are in millimeters!**

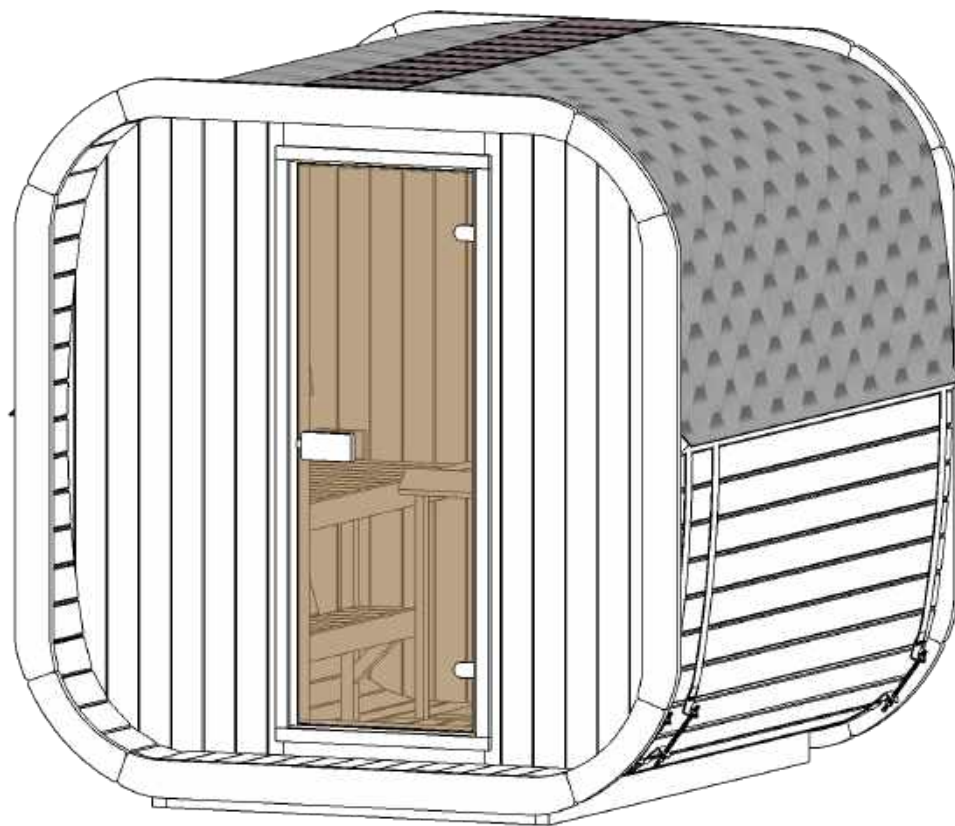

Sauna "Icon" 220,Ø226




Details list 1.

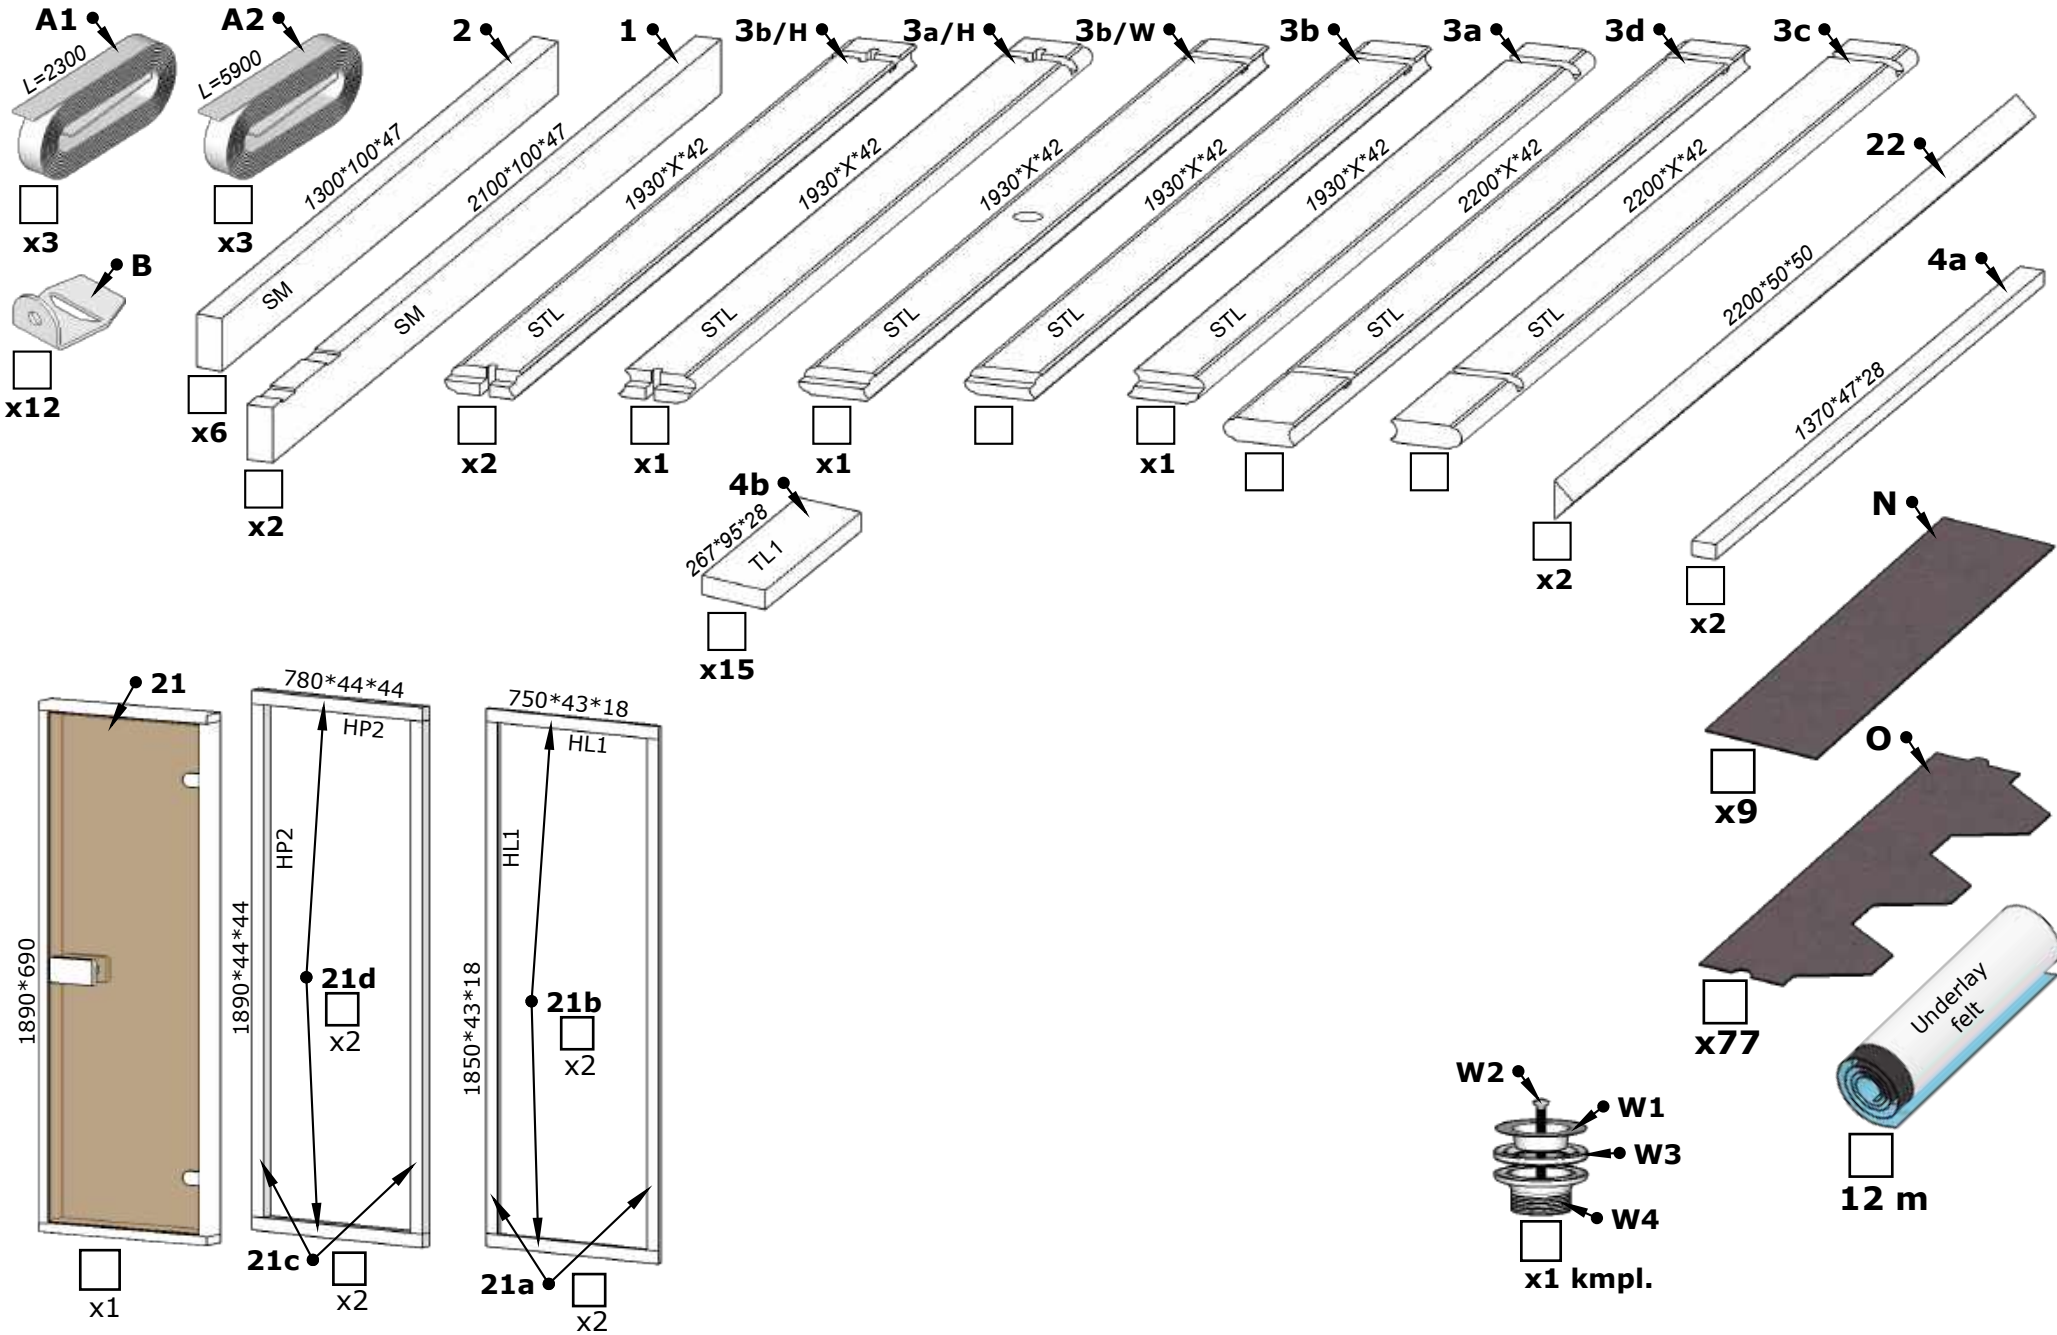

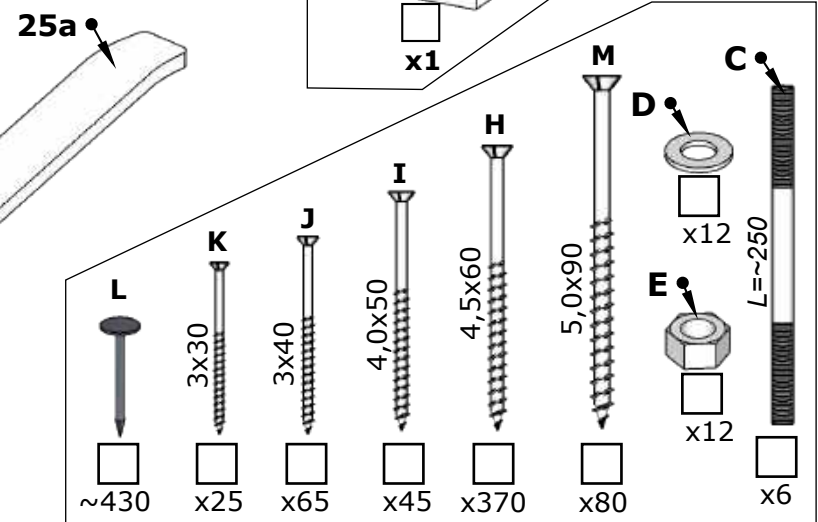
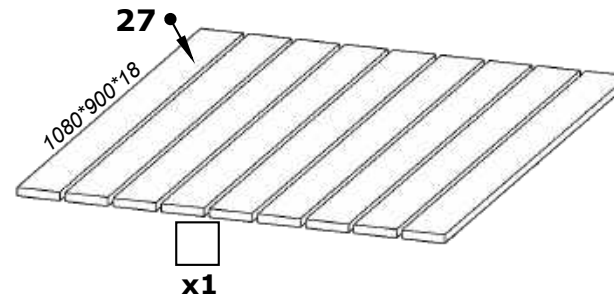


(ICO-26-PES-PTS-001)

Icon Ø226 Wooden front wall assembly

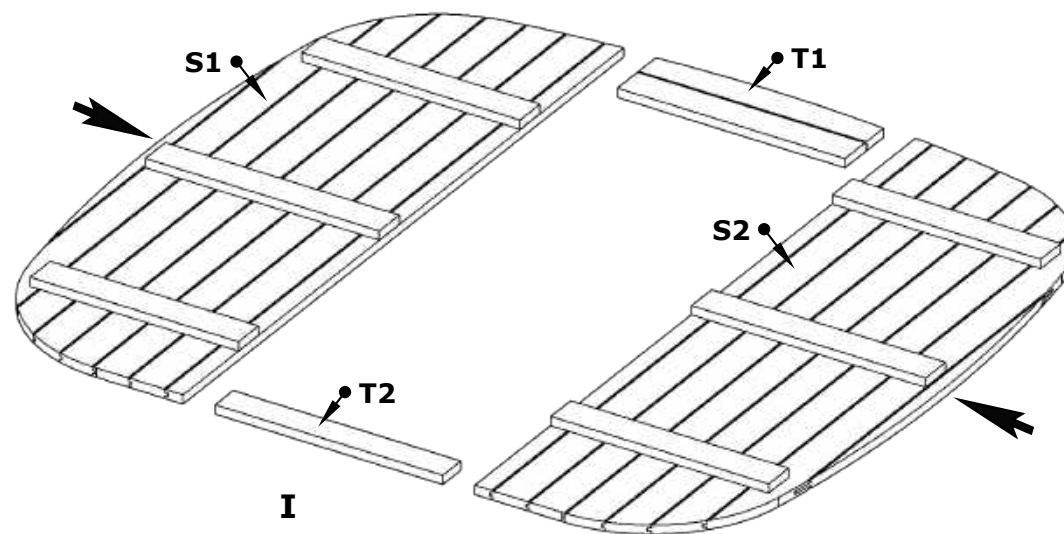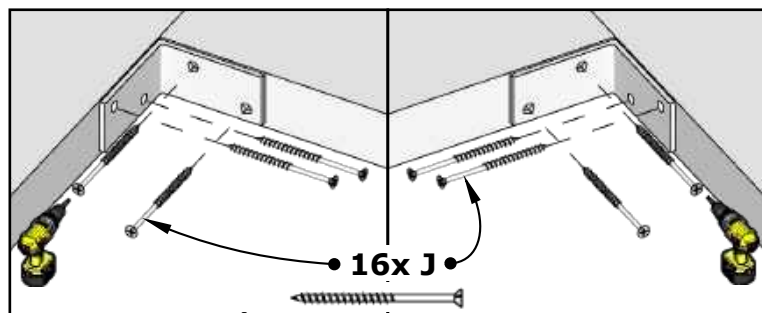
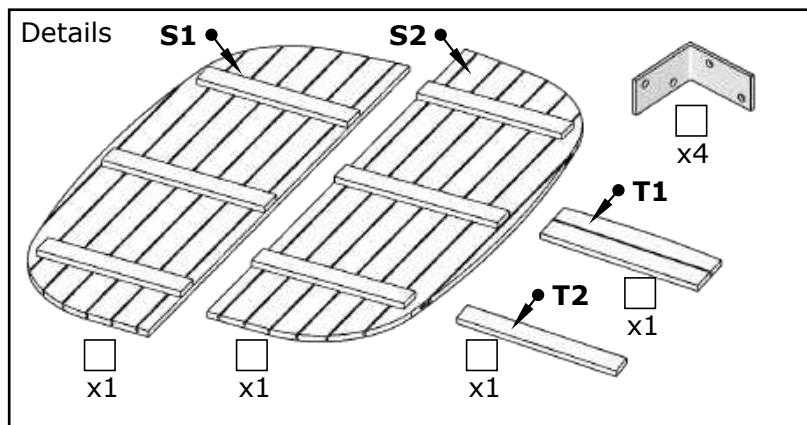


Cut board from pallet L= $\sim$ 2100mm.
Fix it diagonally to make wall
more rigid during the installation.

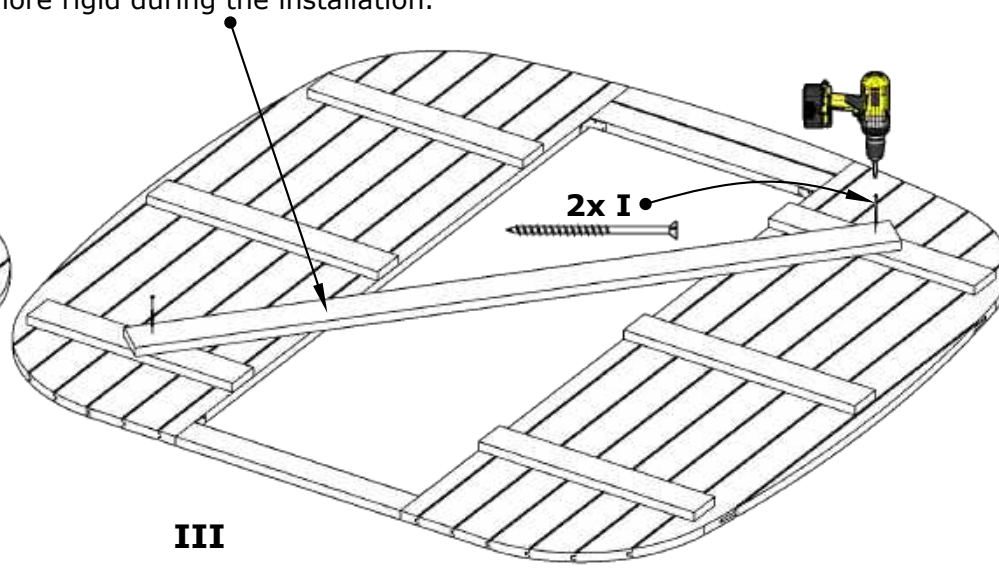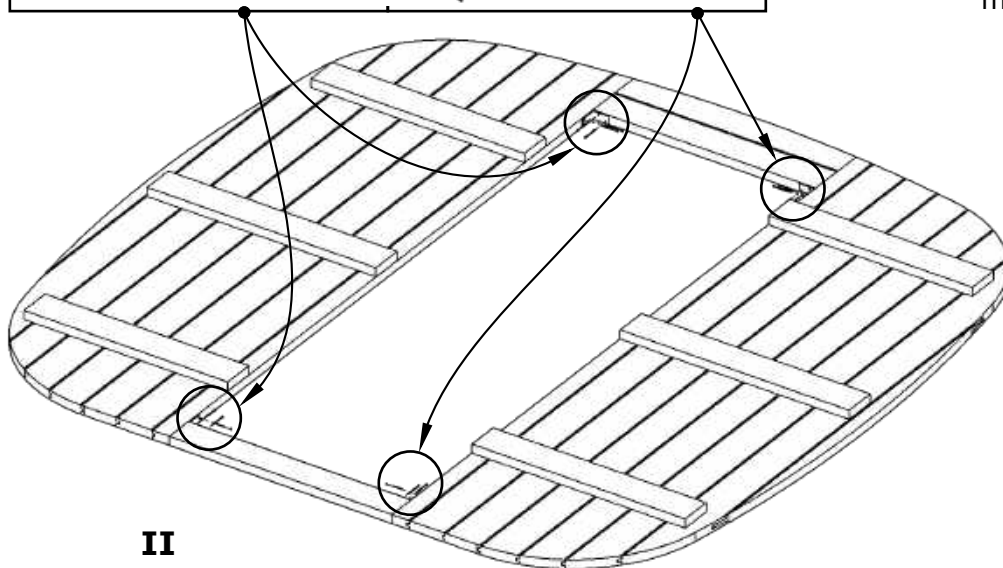


Icon Ø226 Wooden back wall assembly

Details

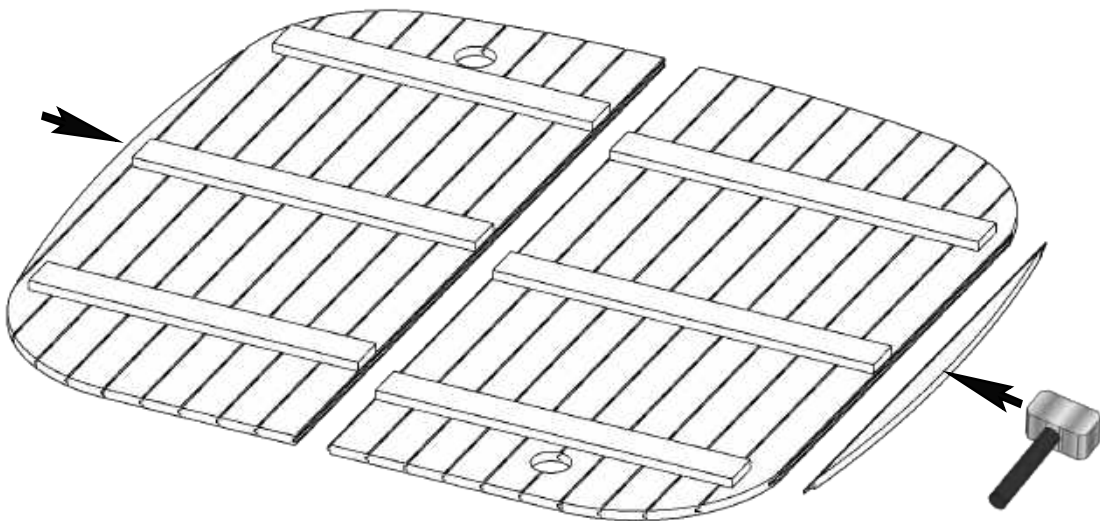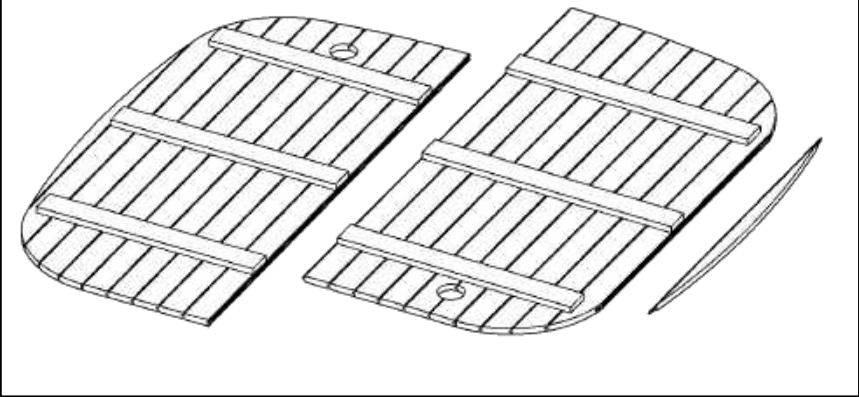


I


Cut board from pallet
L=~2100 mm.

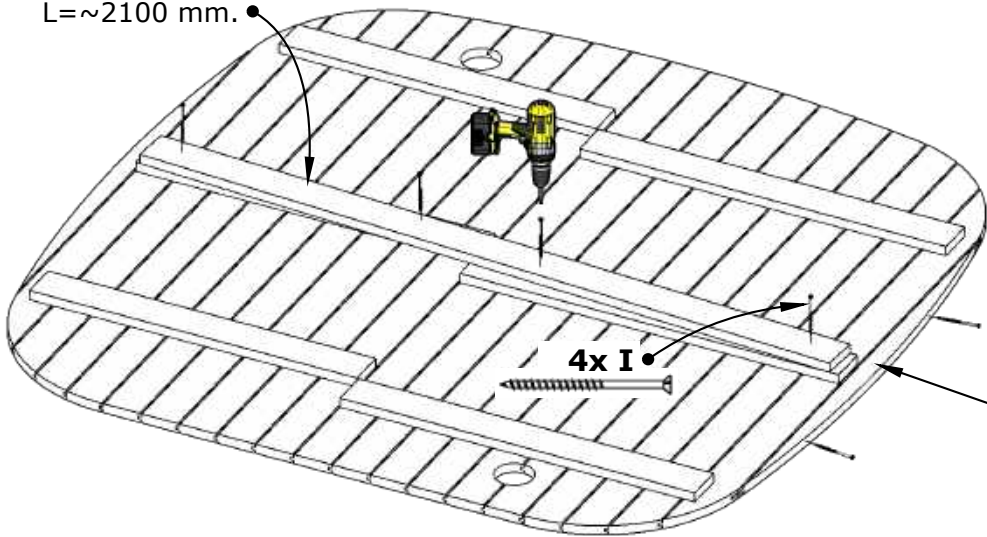


II

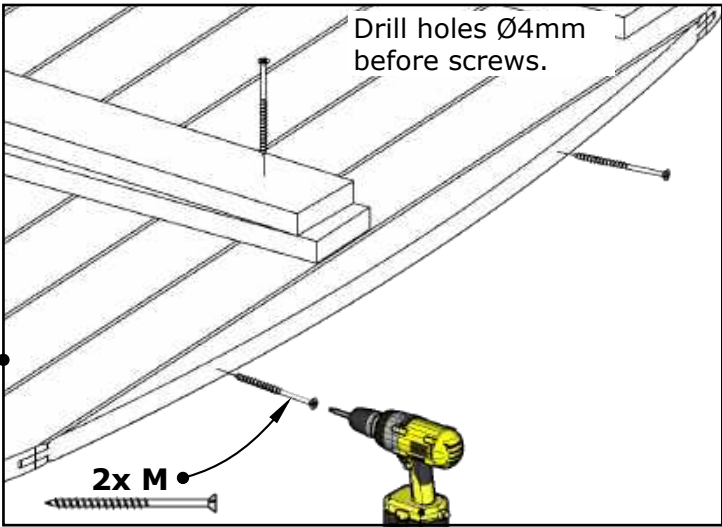

Sauna "Icon" 220,Ø226

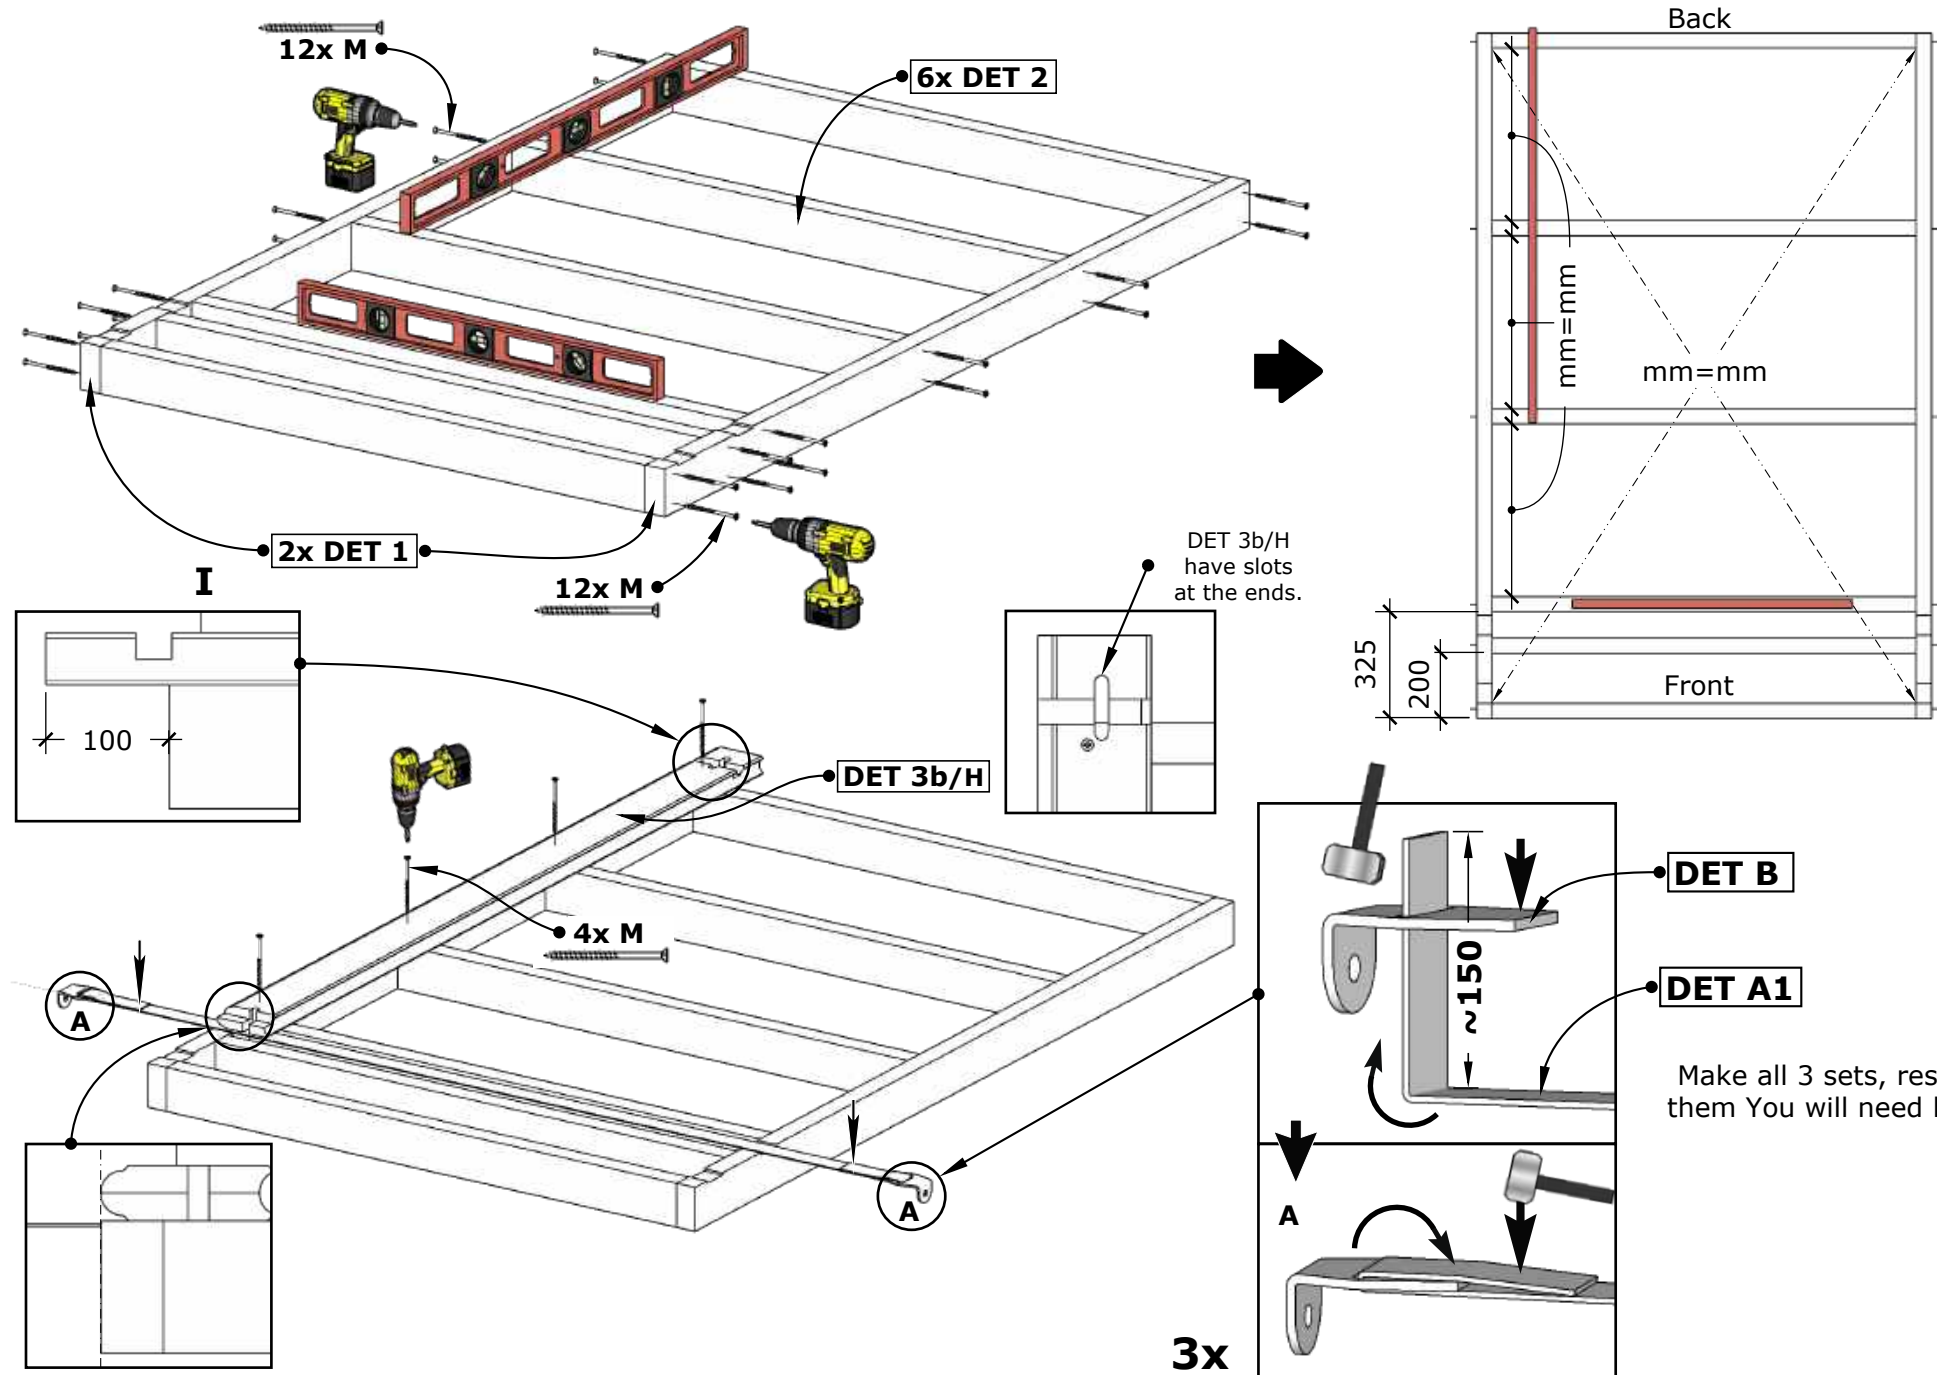

Sauna "Icon" 220,Ø226


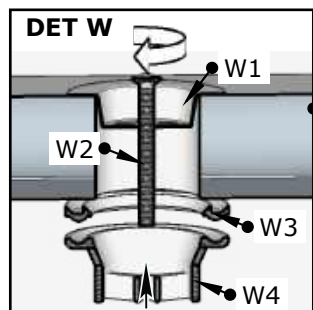


Fix screws over the one board, diagonally in every board.

Place DET 3b/W and DET 3b/H side by side about in the middle of the floor.


DET 3a/H have slots at the ends.

Don't fix board yet!

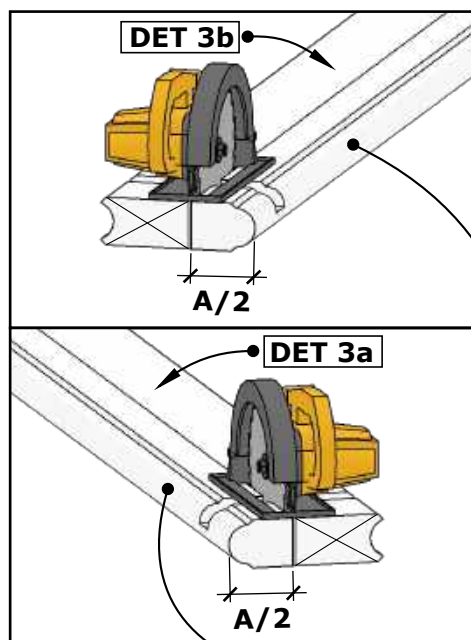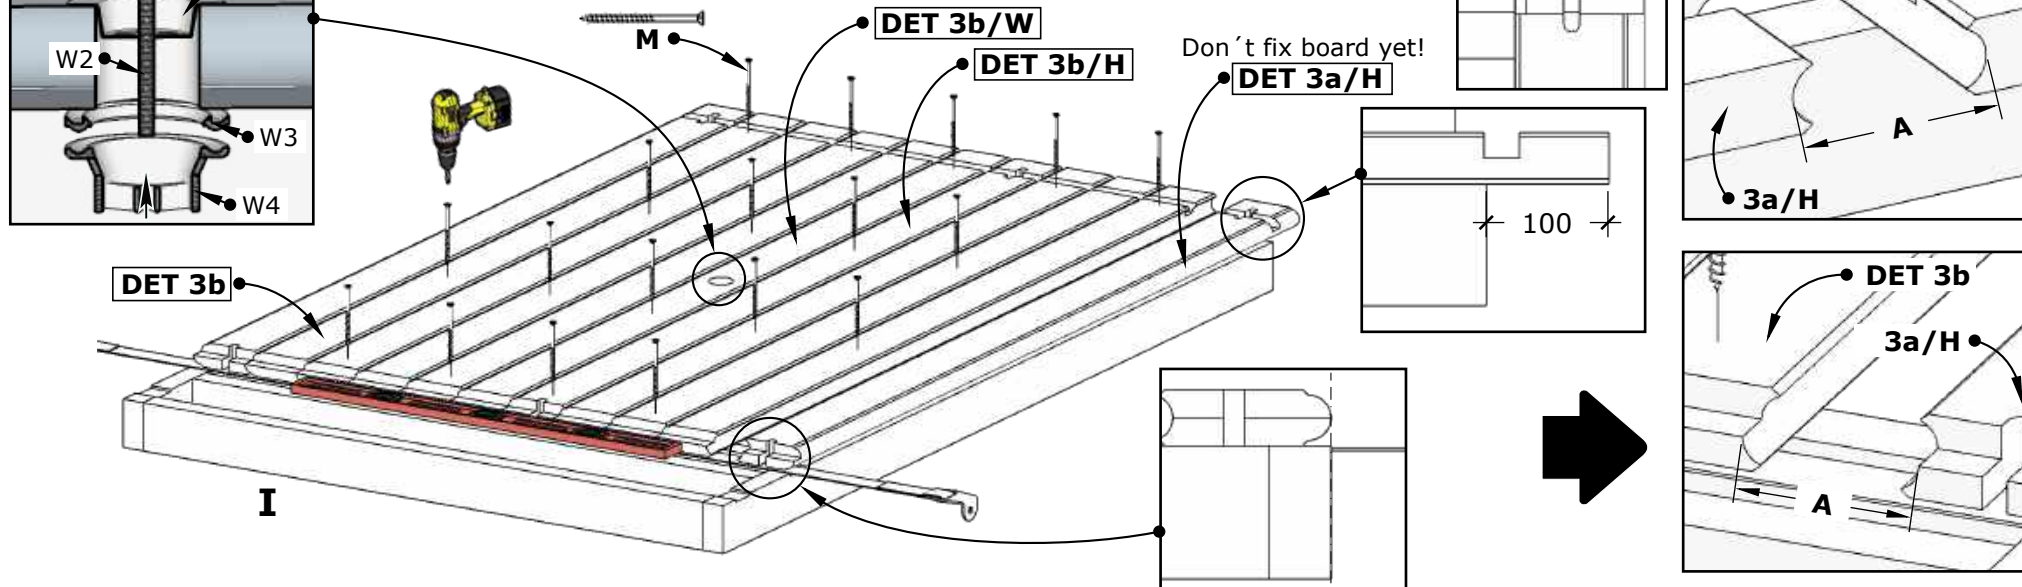

Connect two halves, use proper size screws.(5 pc.)

Drill holes Ø4mm before screws.

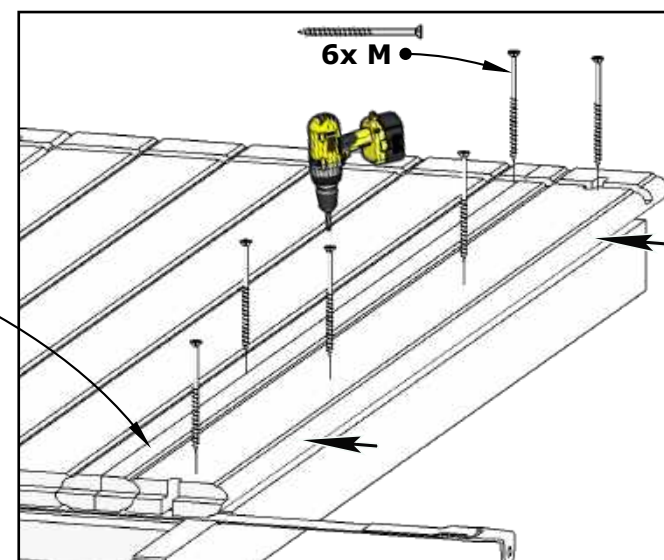





Sauna "Icon" 220,Ø226

Use waterlevel




**Check walls installation
manual on extra pages!**


**Sauna wall configuration
depends on Your model!**

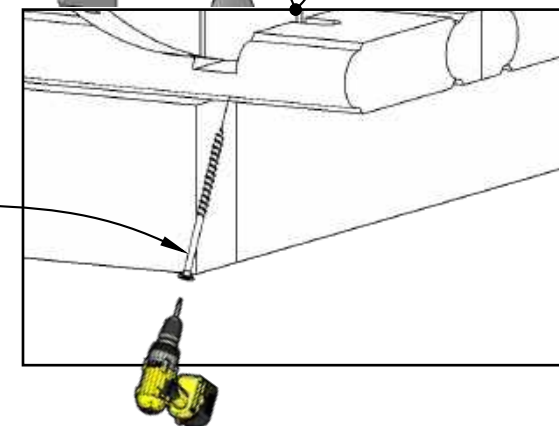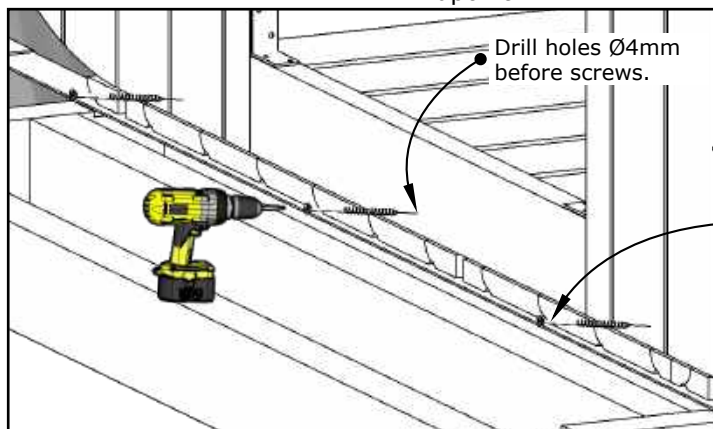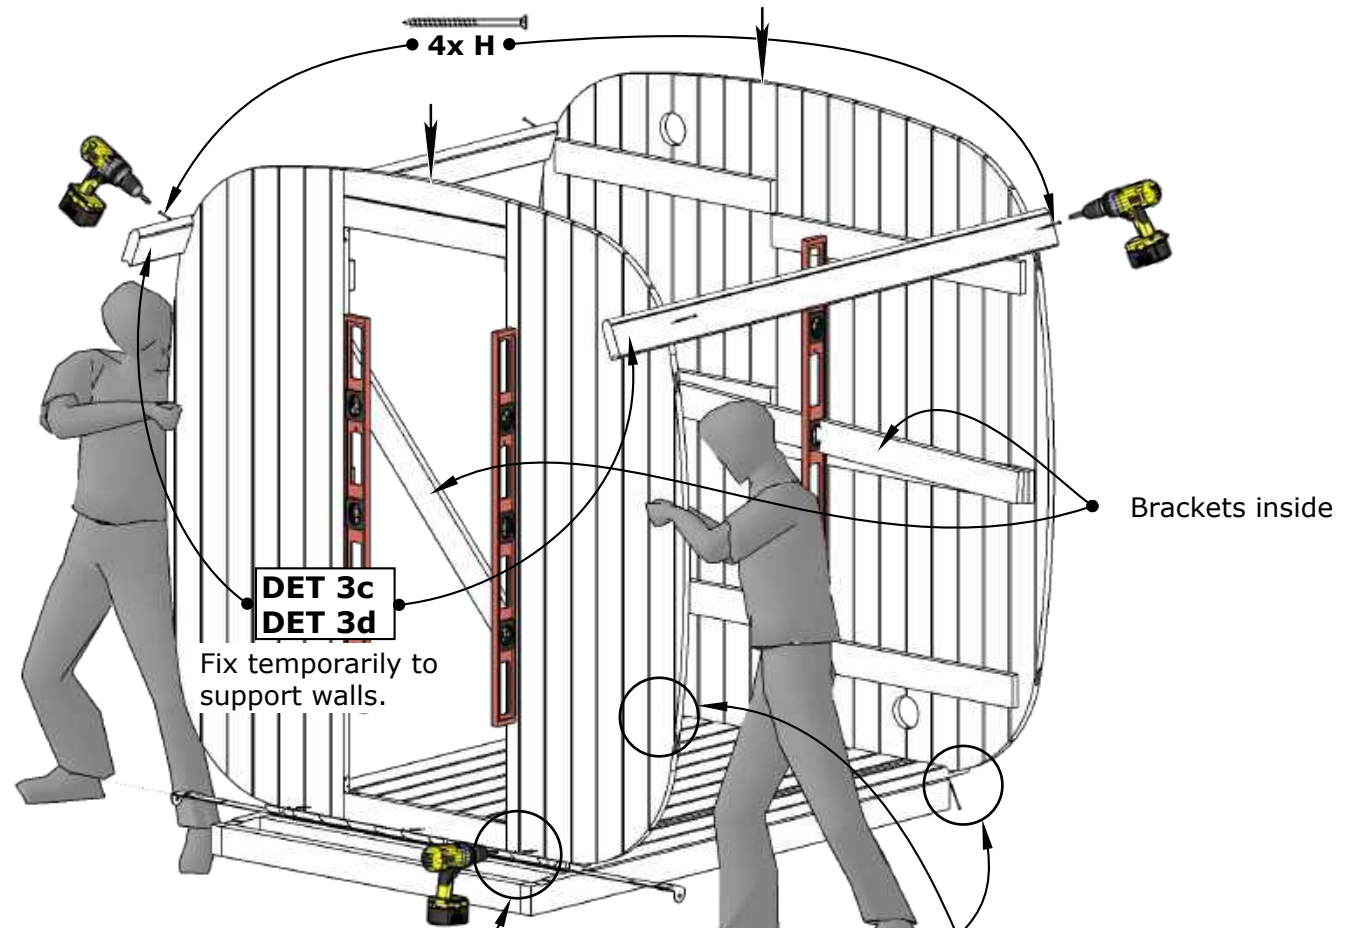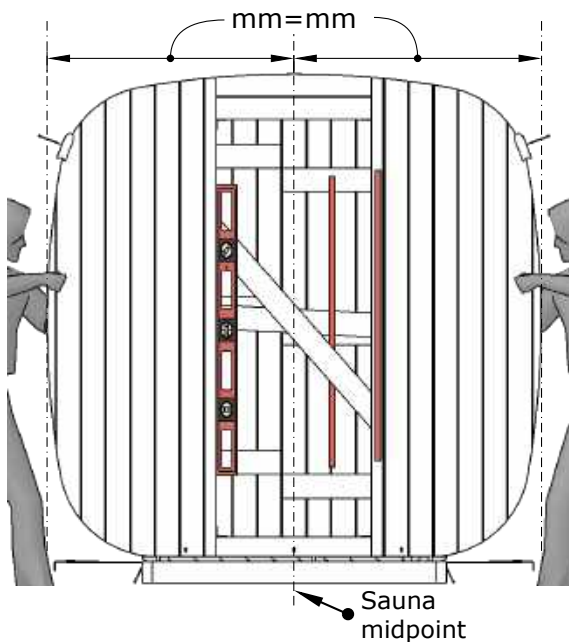

Sauna "Icon" 220,Ø226

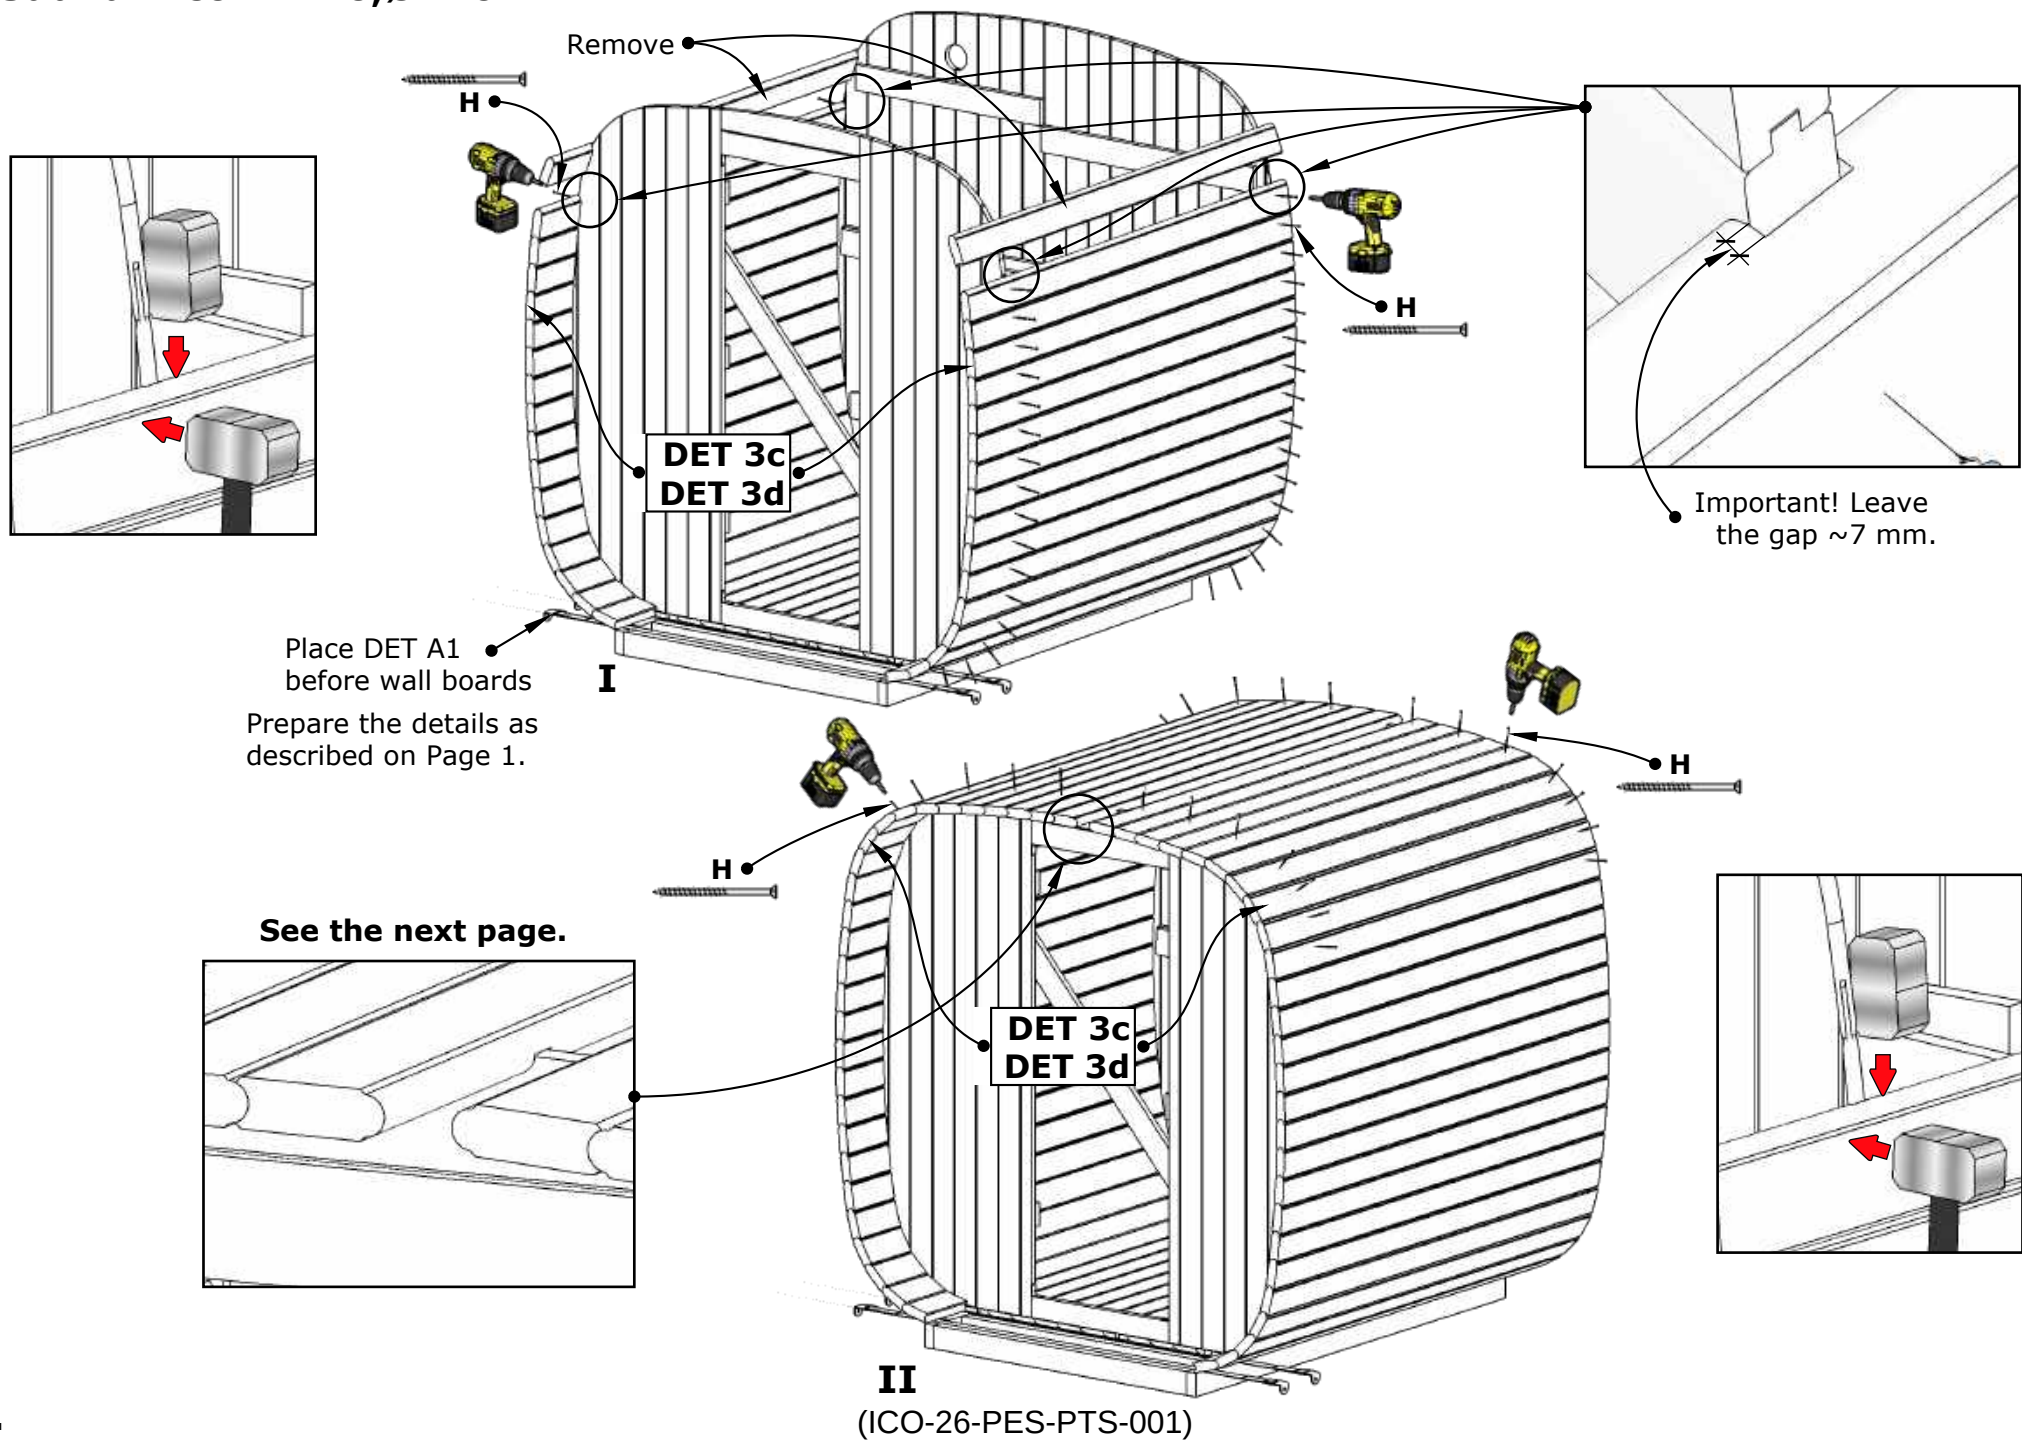


Sauna "Icon" 220,Ø226

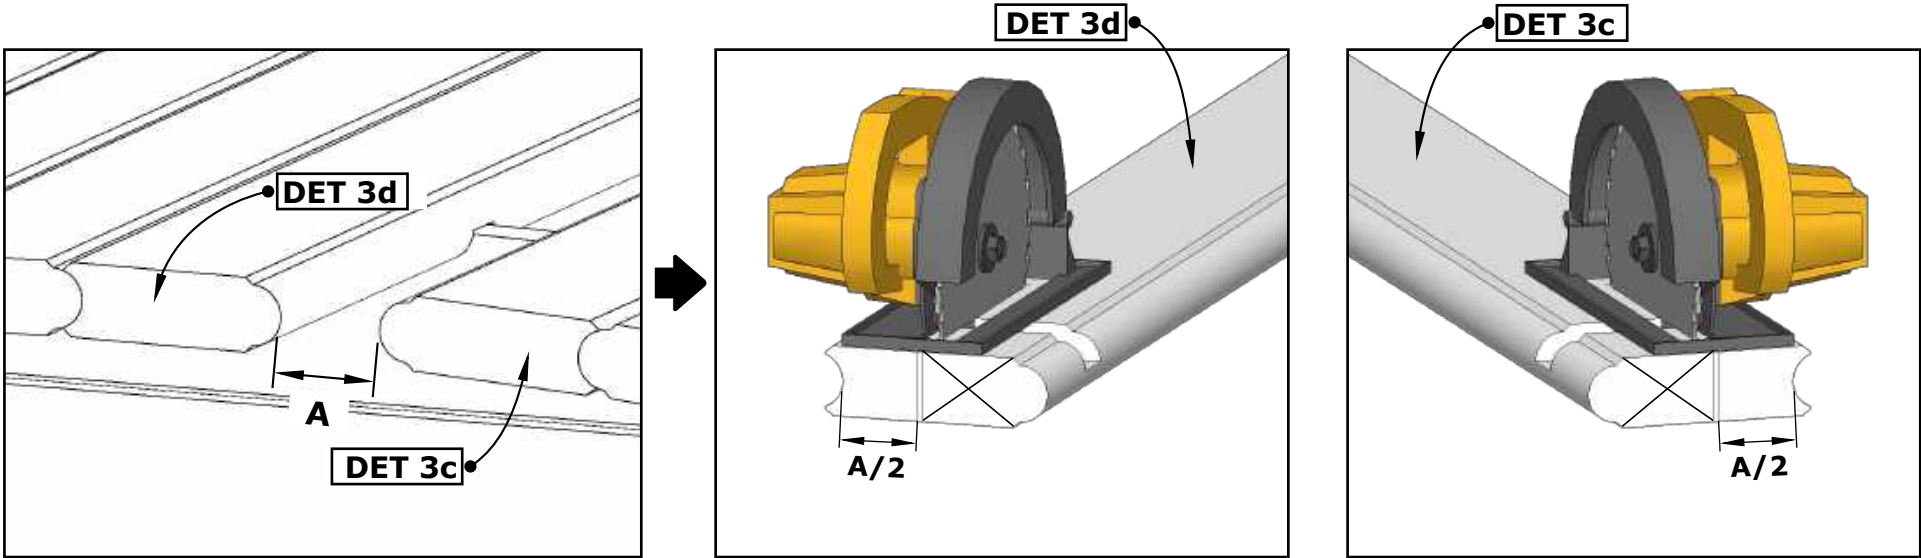

I

Lift nose slightly up before installing combined detail.






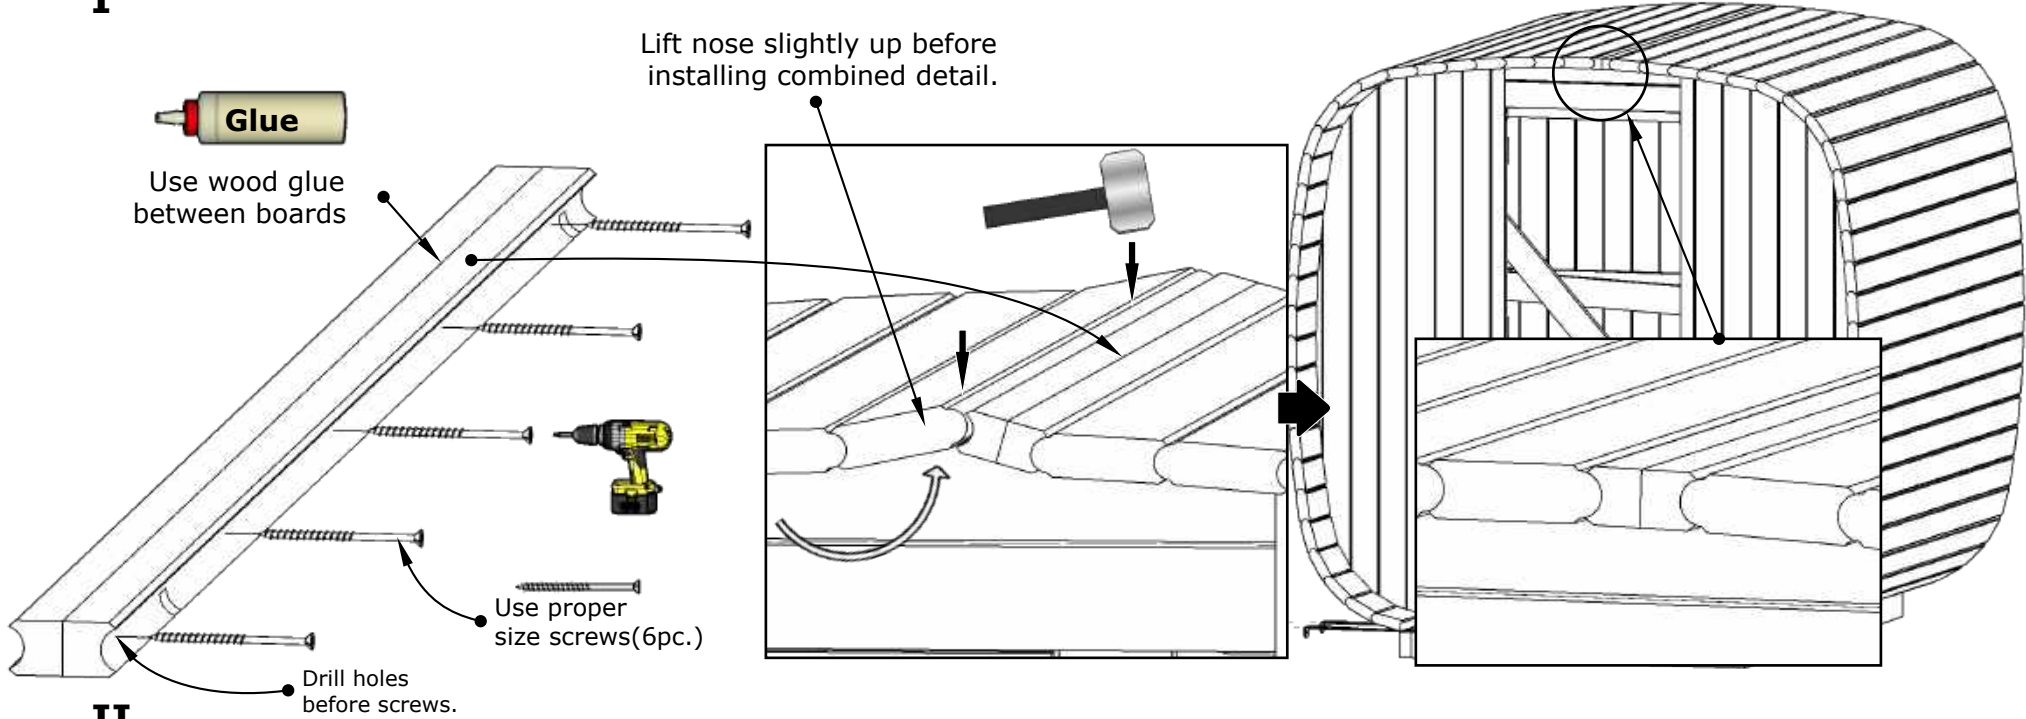


II




5.

(ICO-26-PES-PTS-001)



Sauna "Icon" 220,Ø226

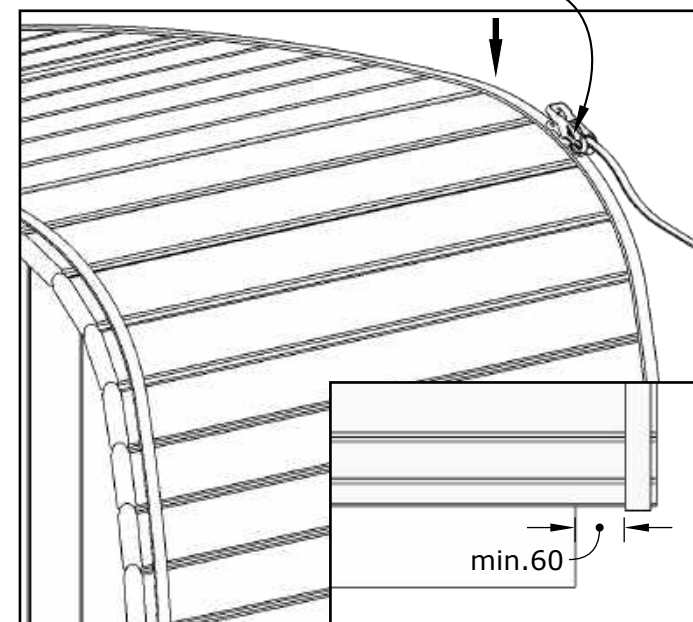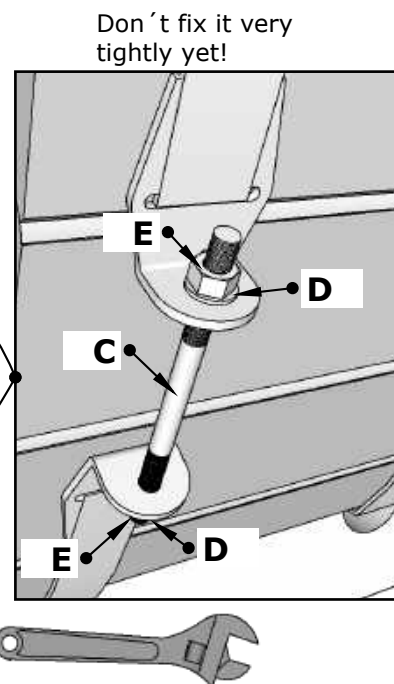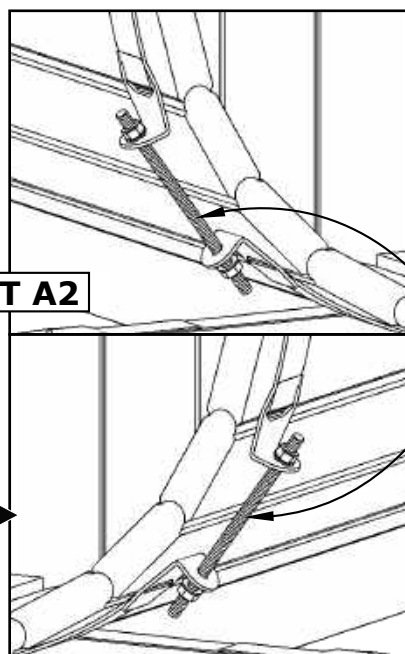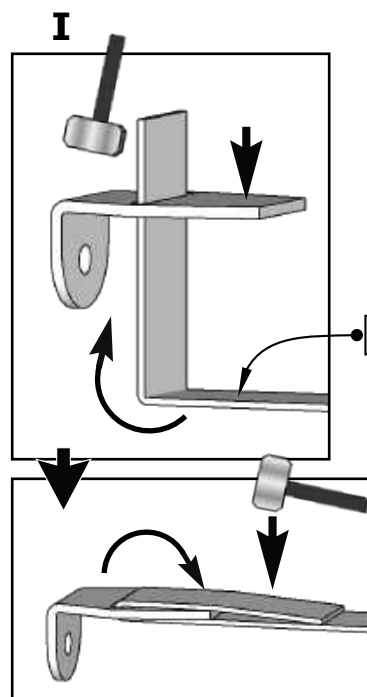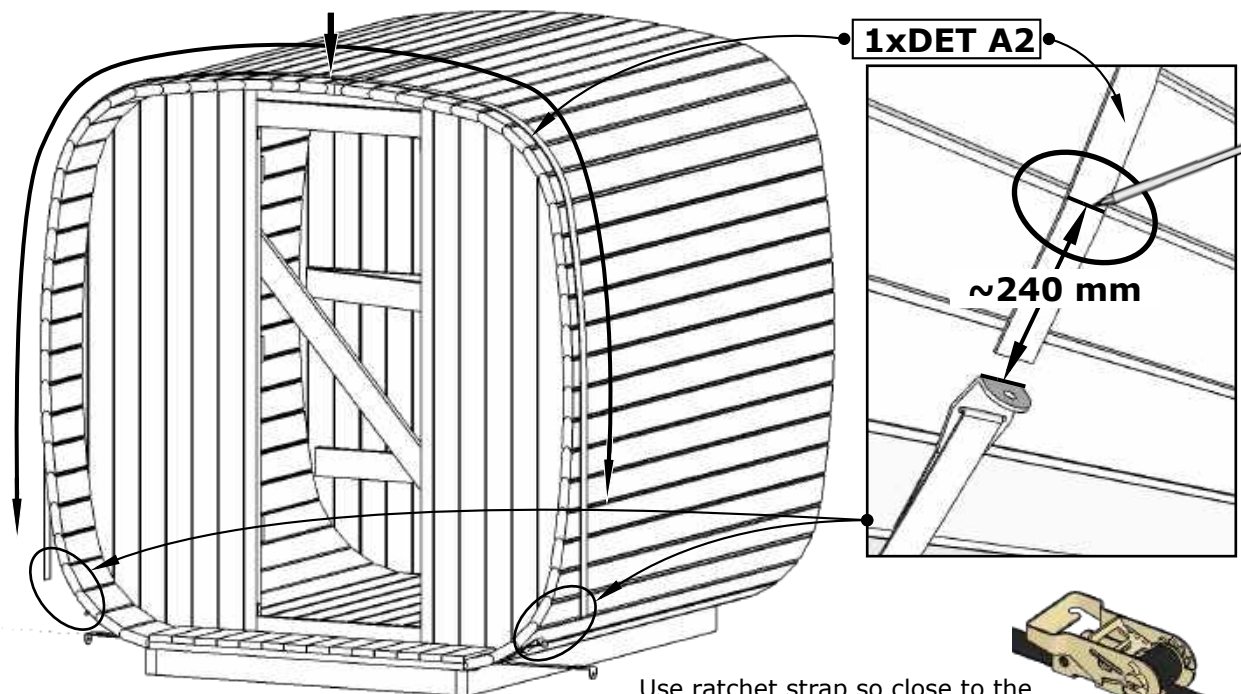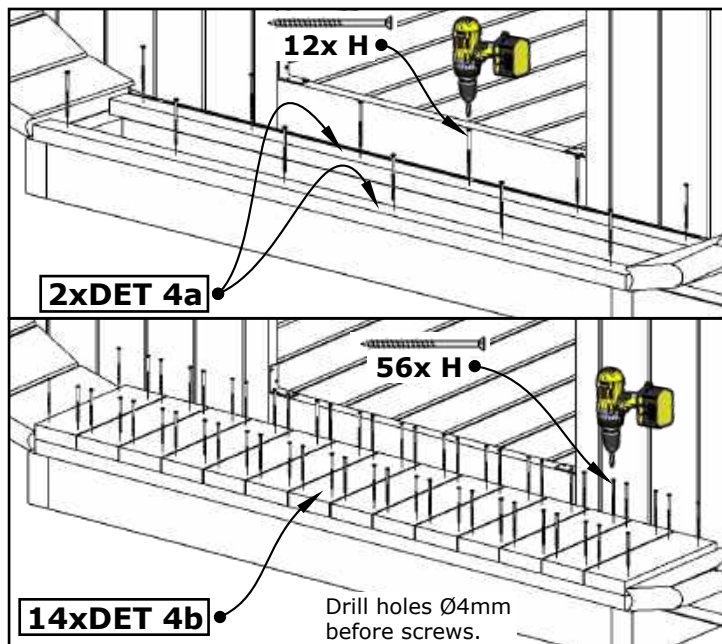




Sauna "Icon" 220,Ø226

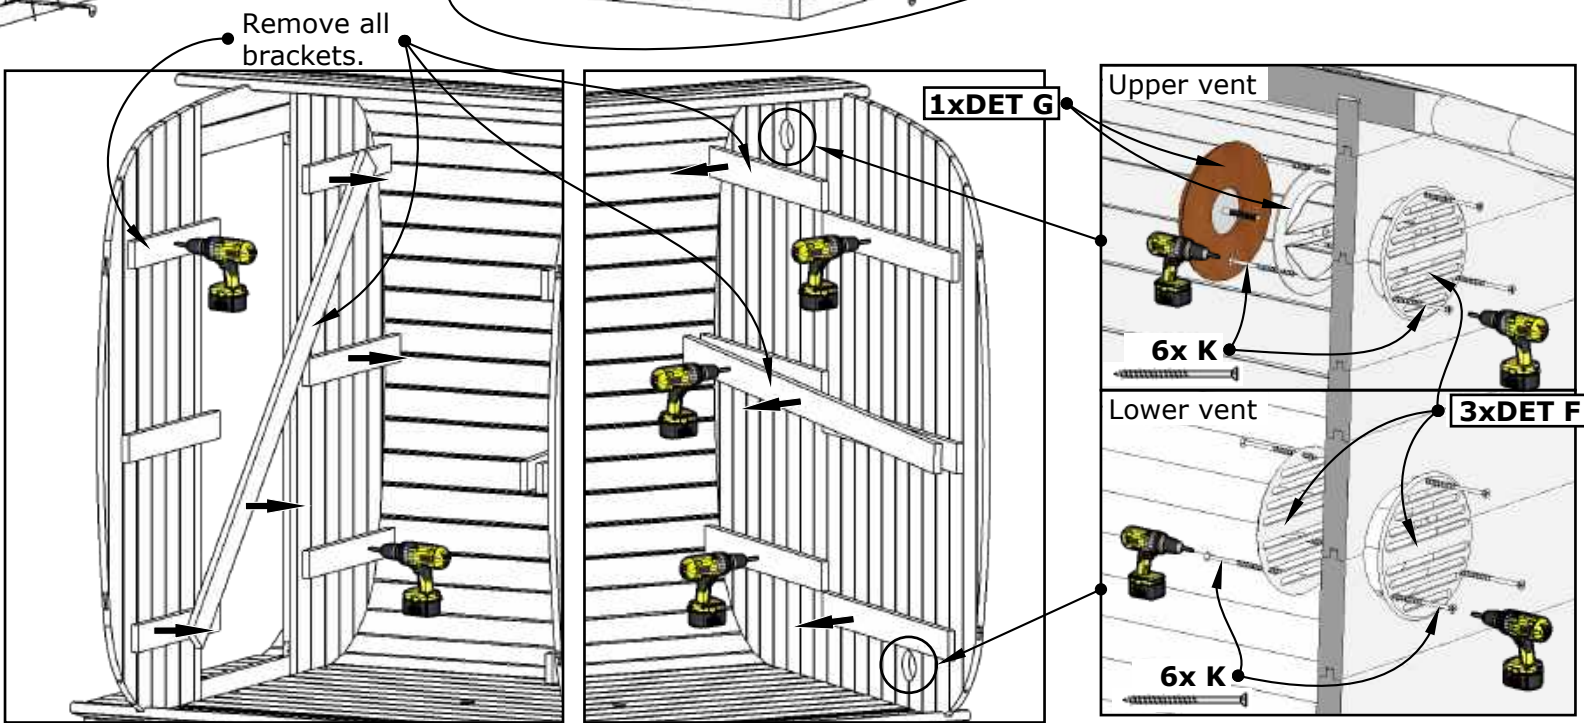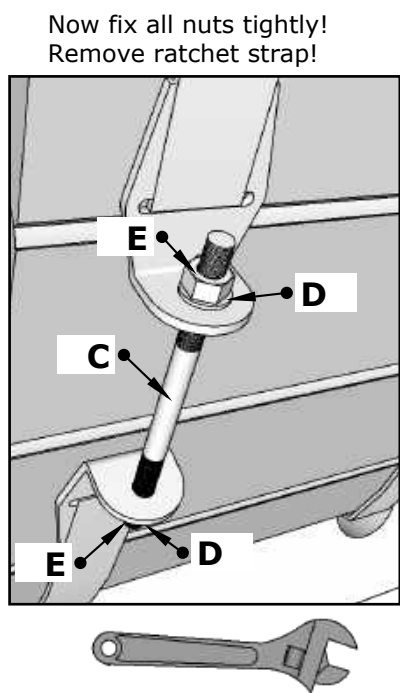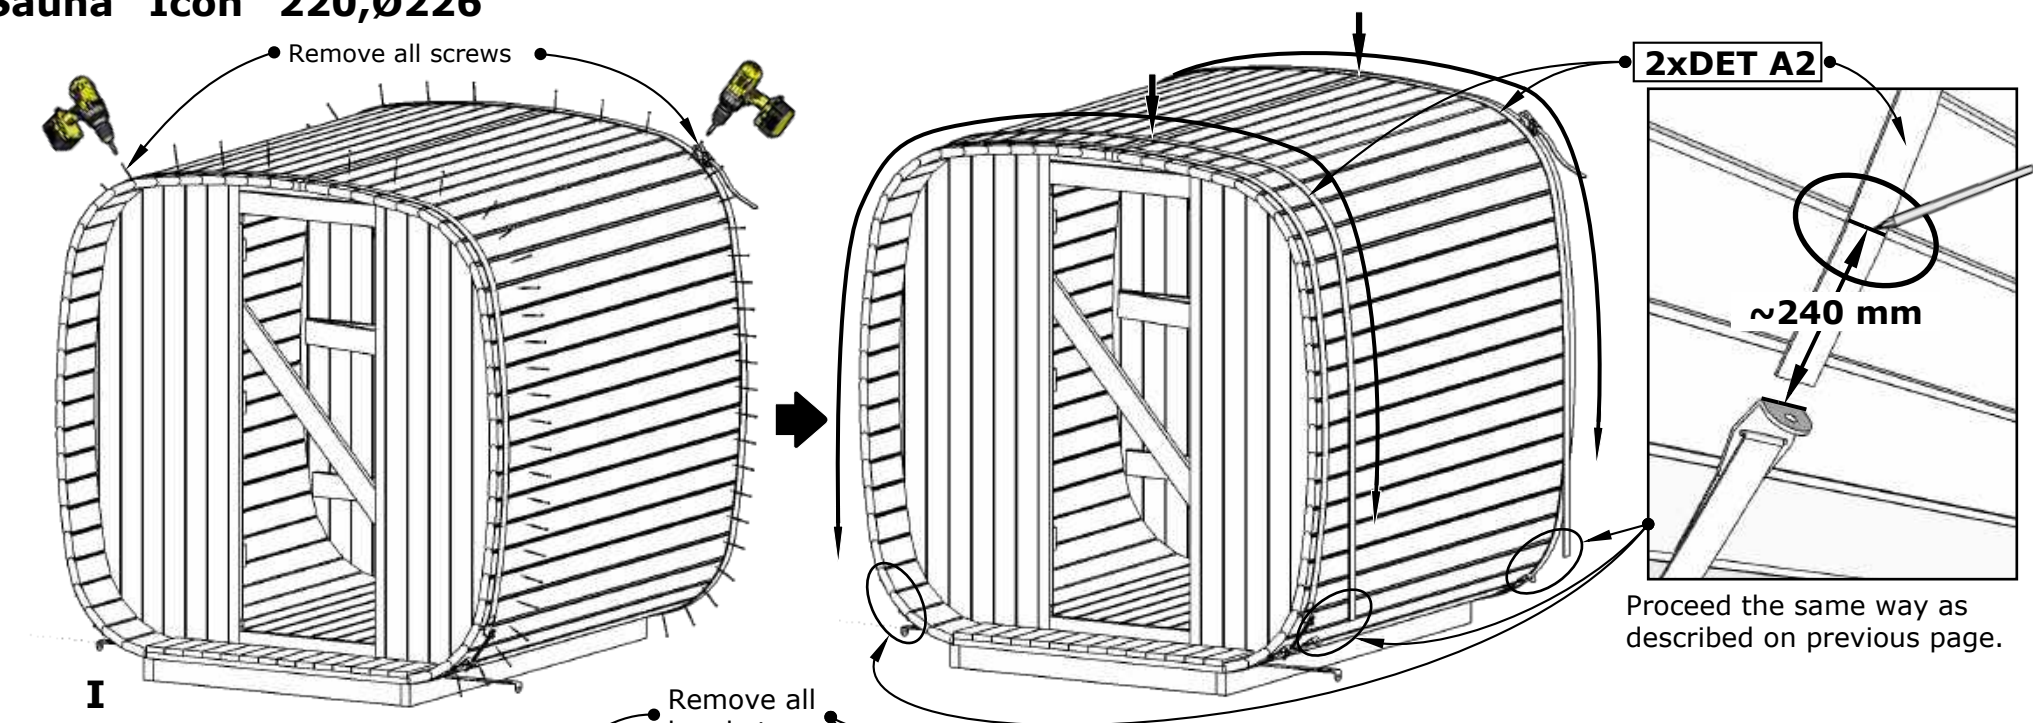


Sauna "Icon" 220,Ø226

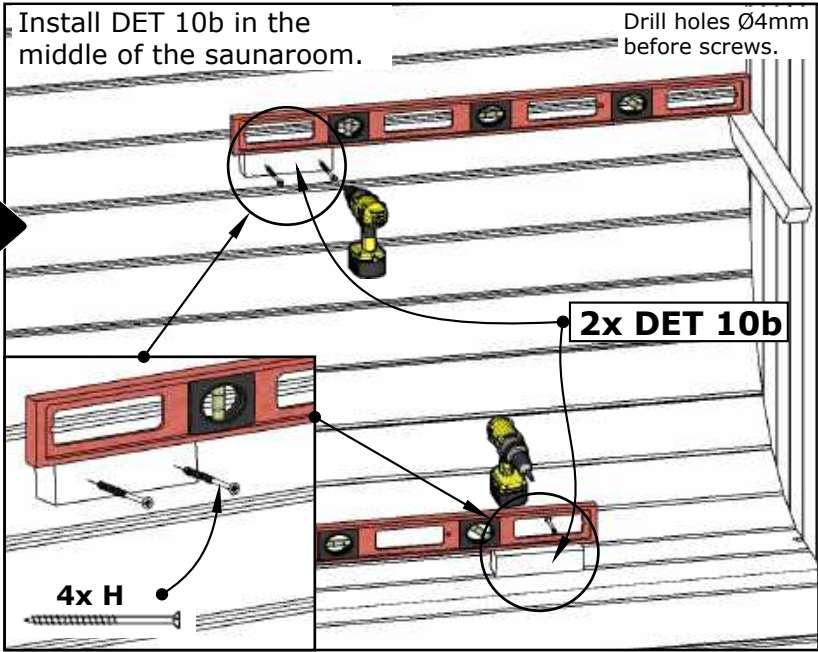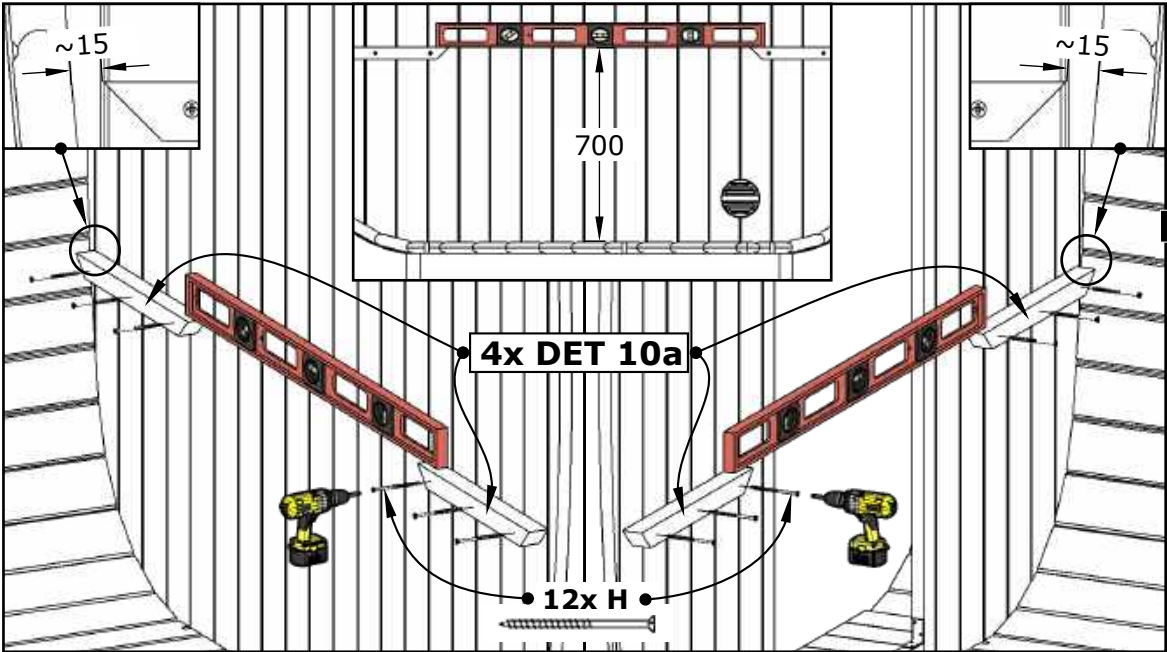


NB! If Your sauna equipped with front glass-wall, the sauna benches installation manual included in front glass-wall installation manual.

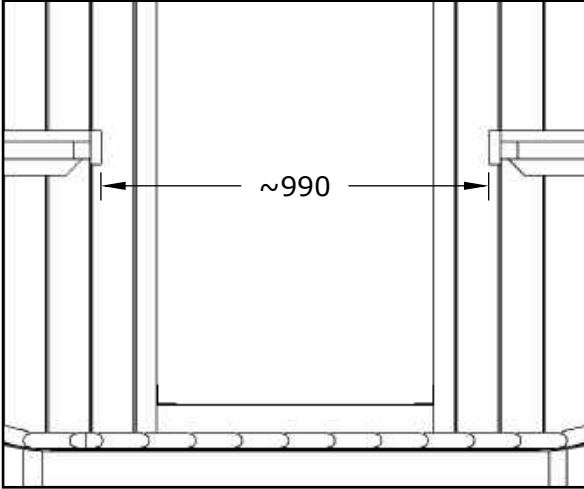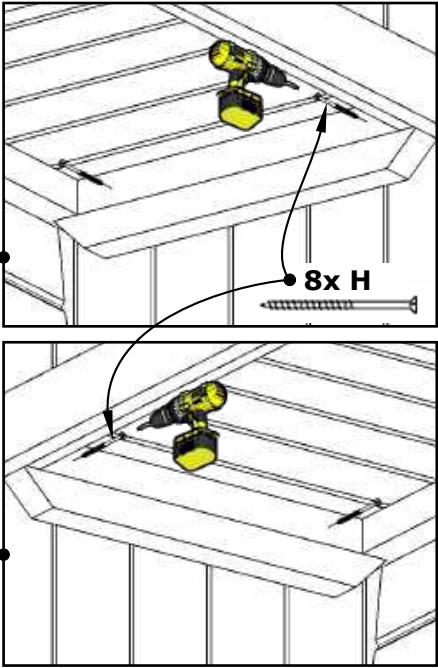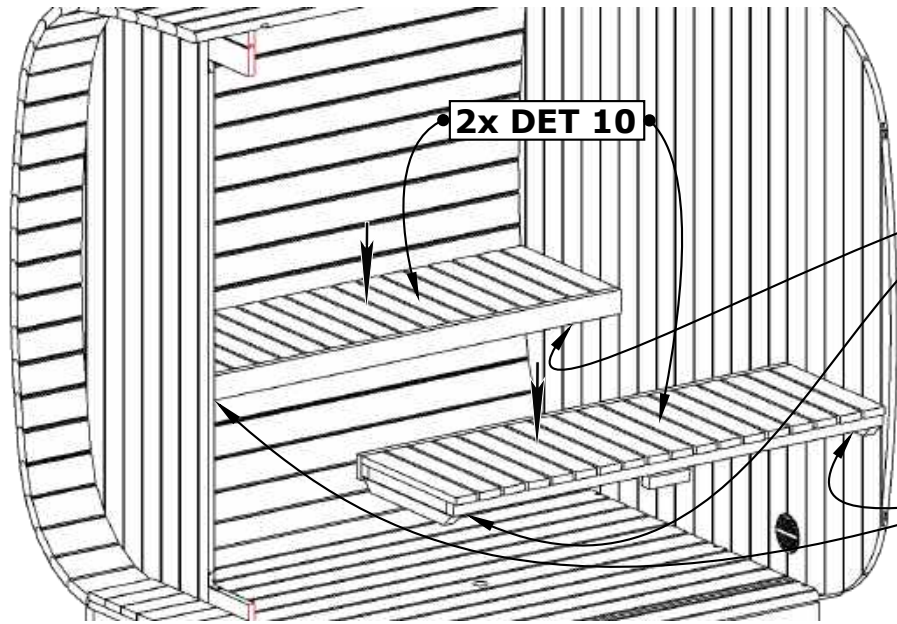


Sauna "Icon" 220,Ø226

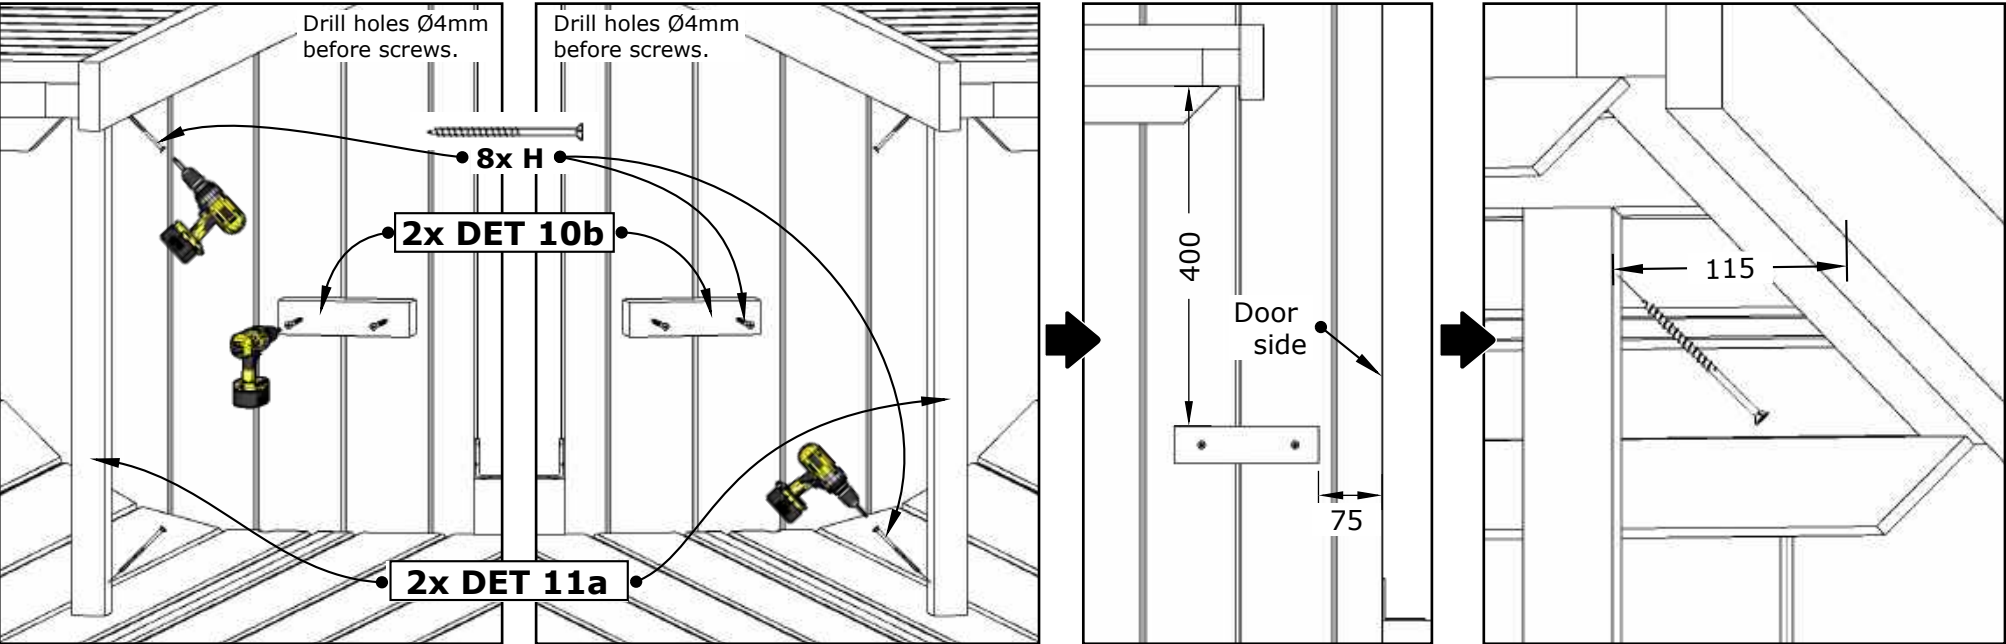


I

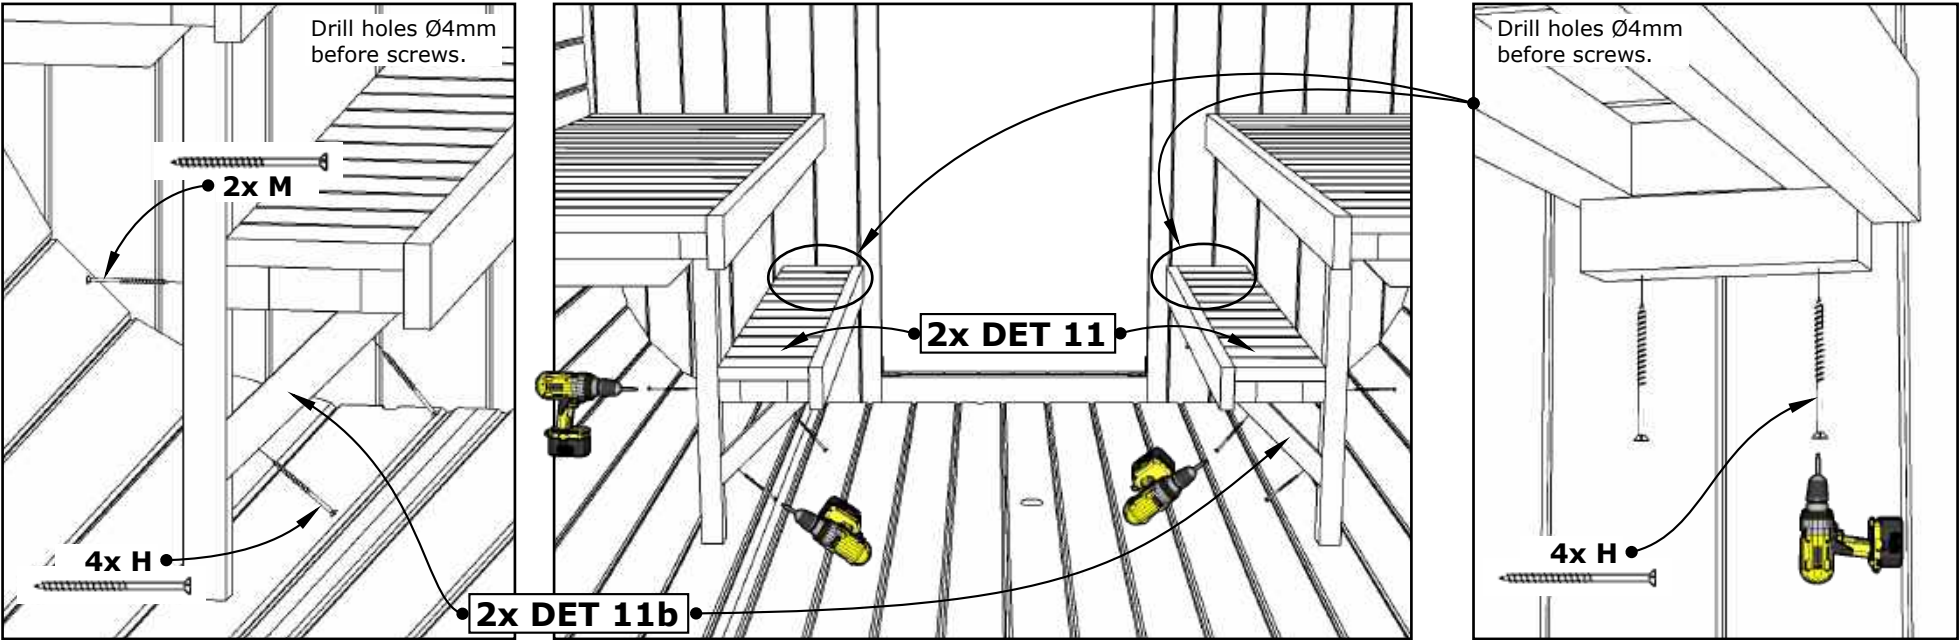


Sauna "Icon" 220,Ø226

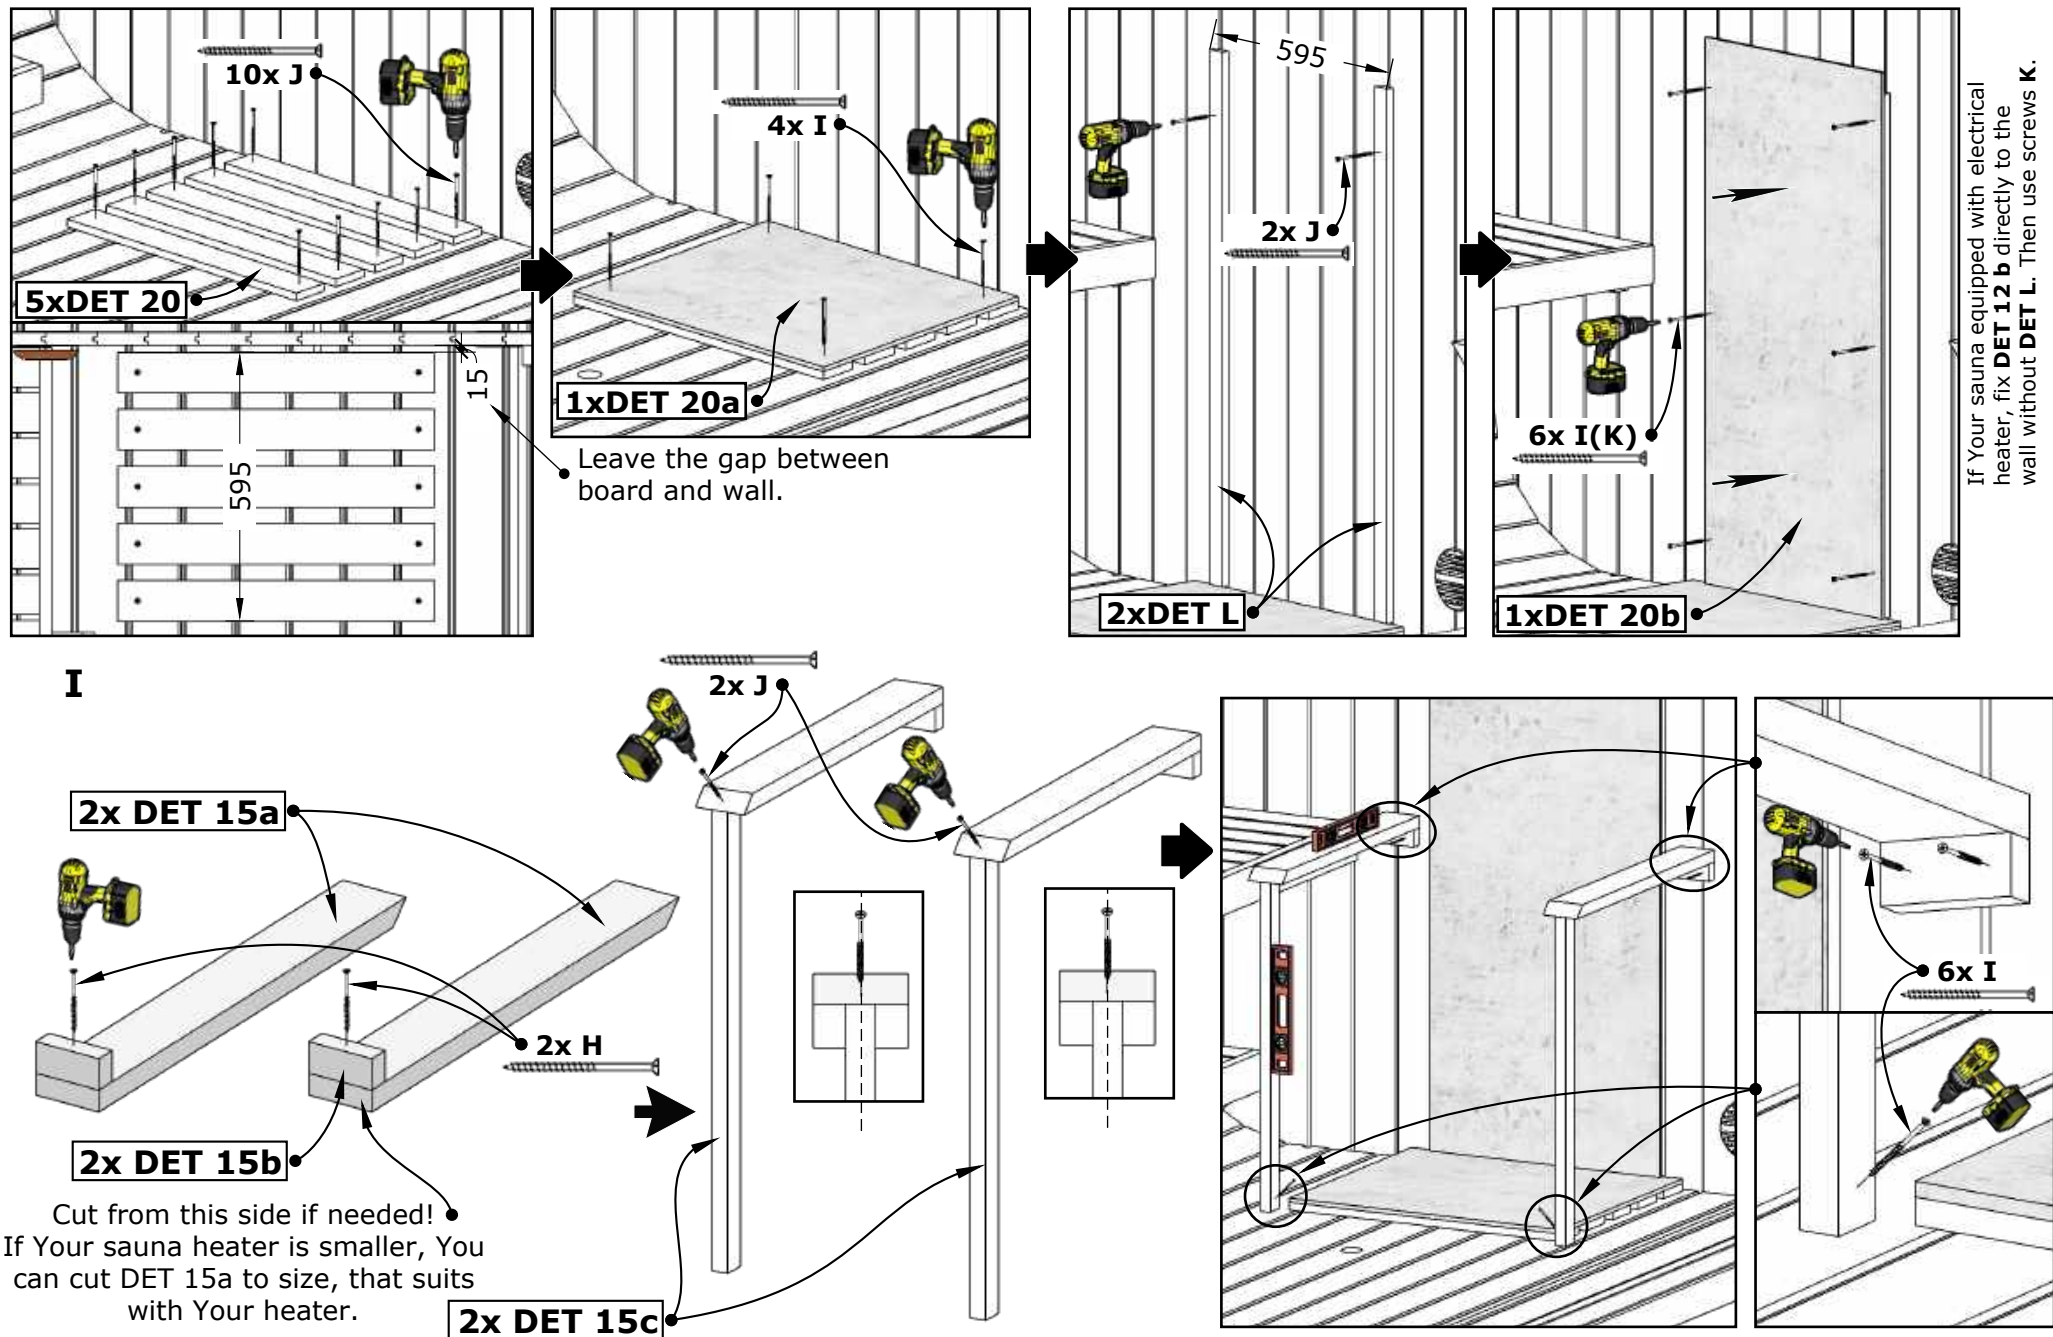

Sauna "Icon" 220,Ø226

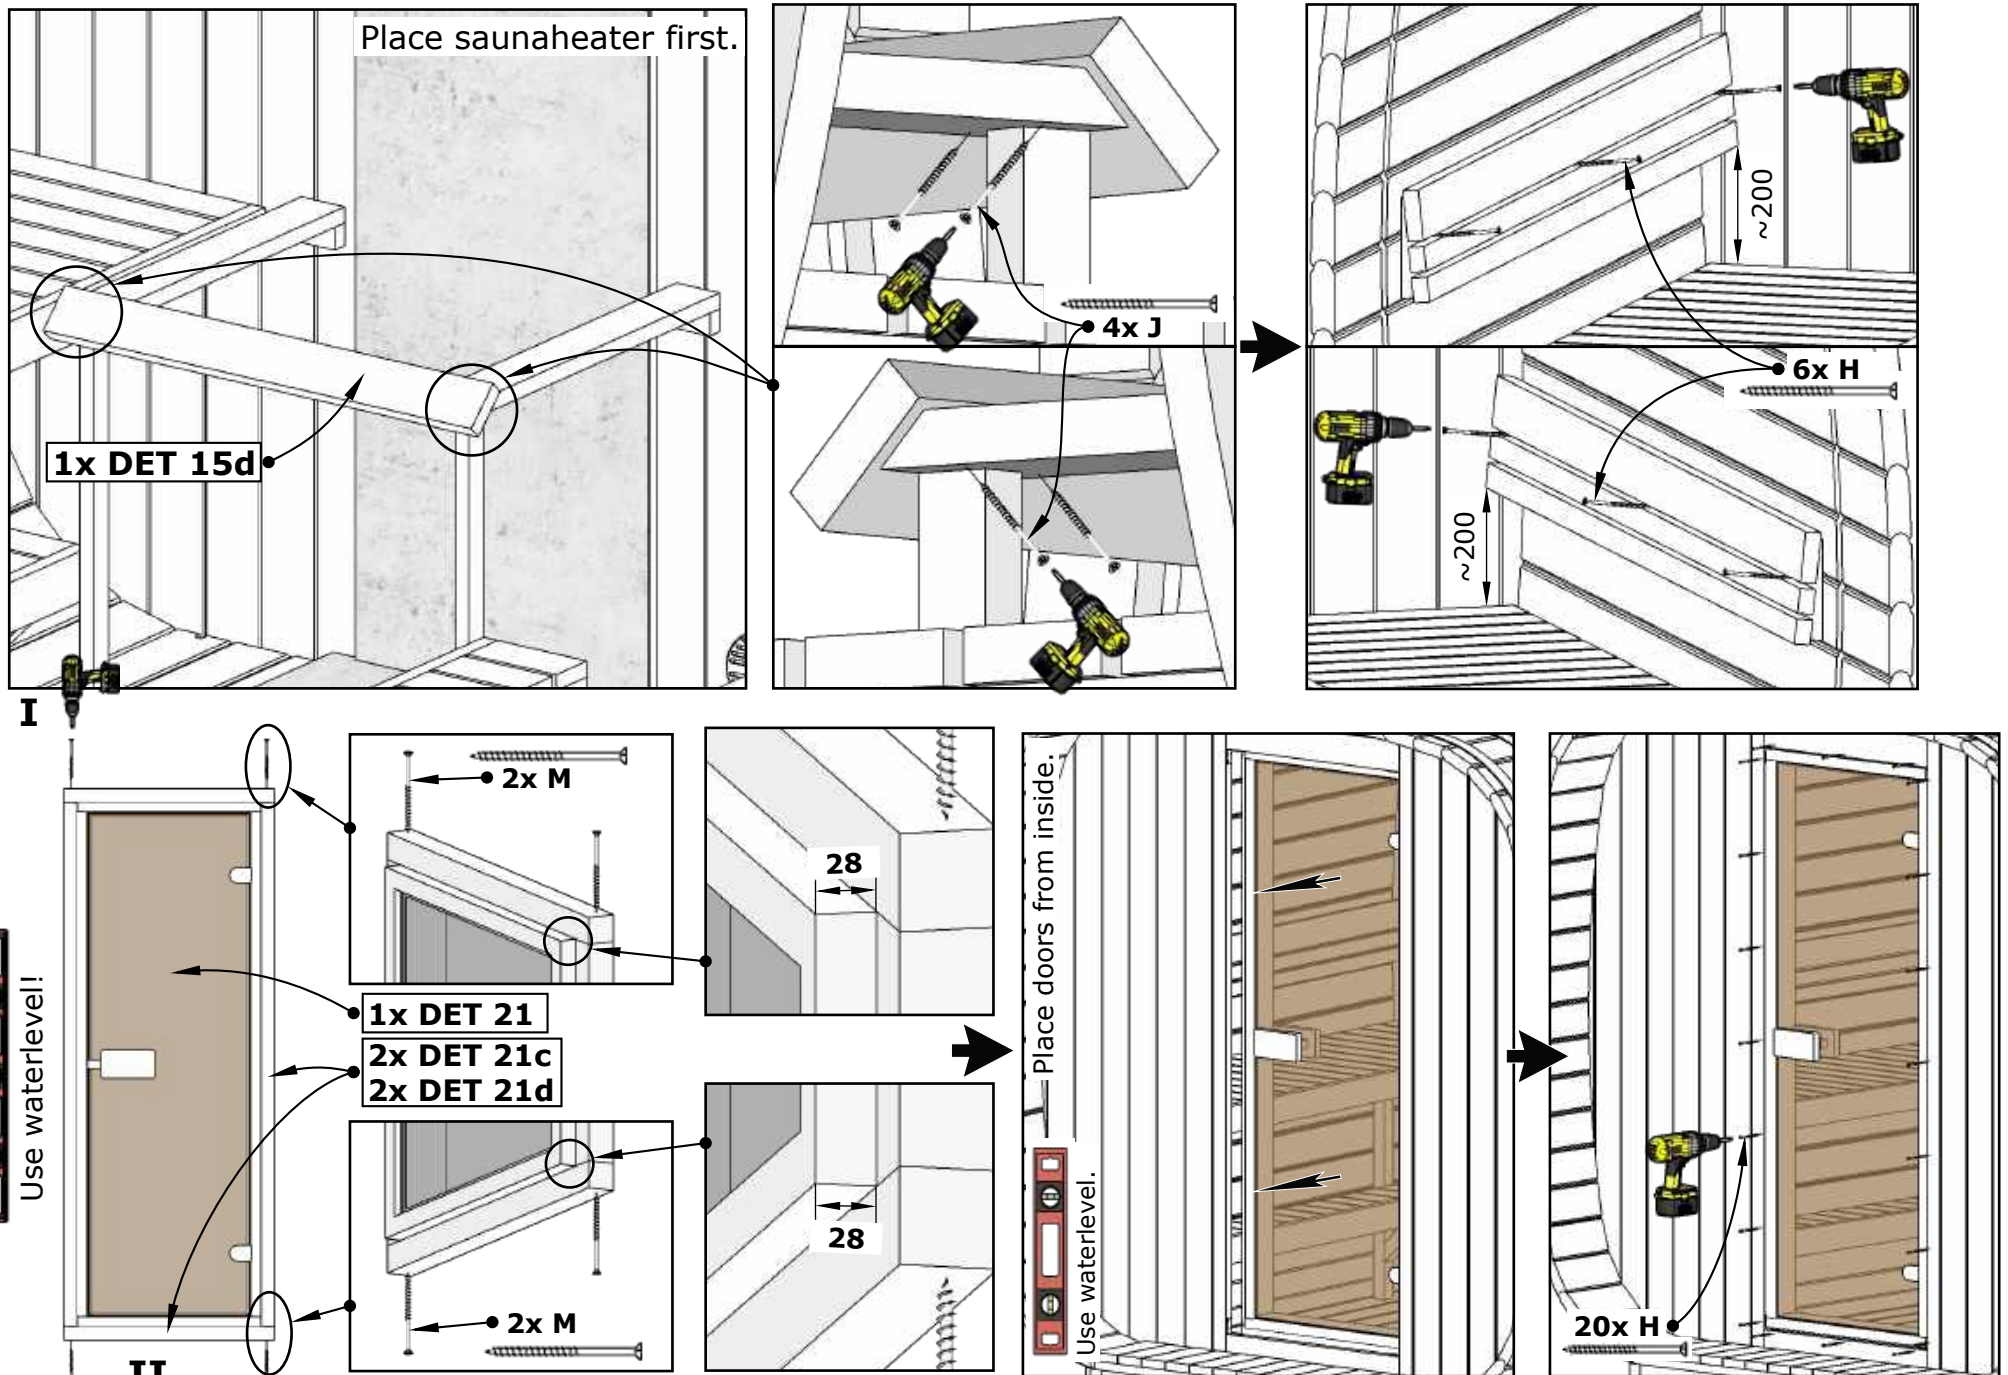

Sauna "Icon" 220,Ø226

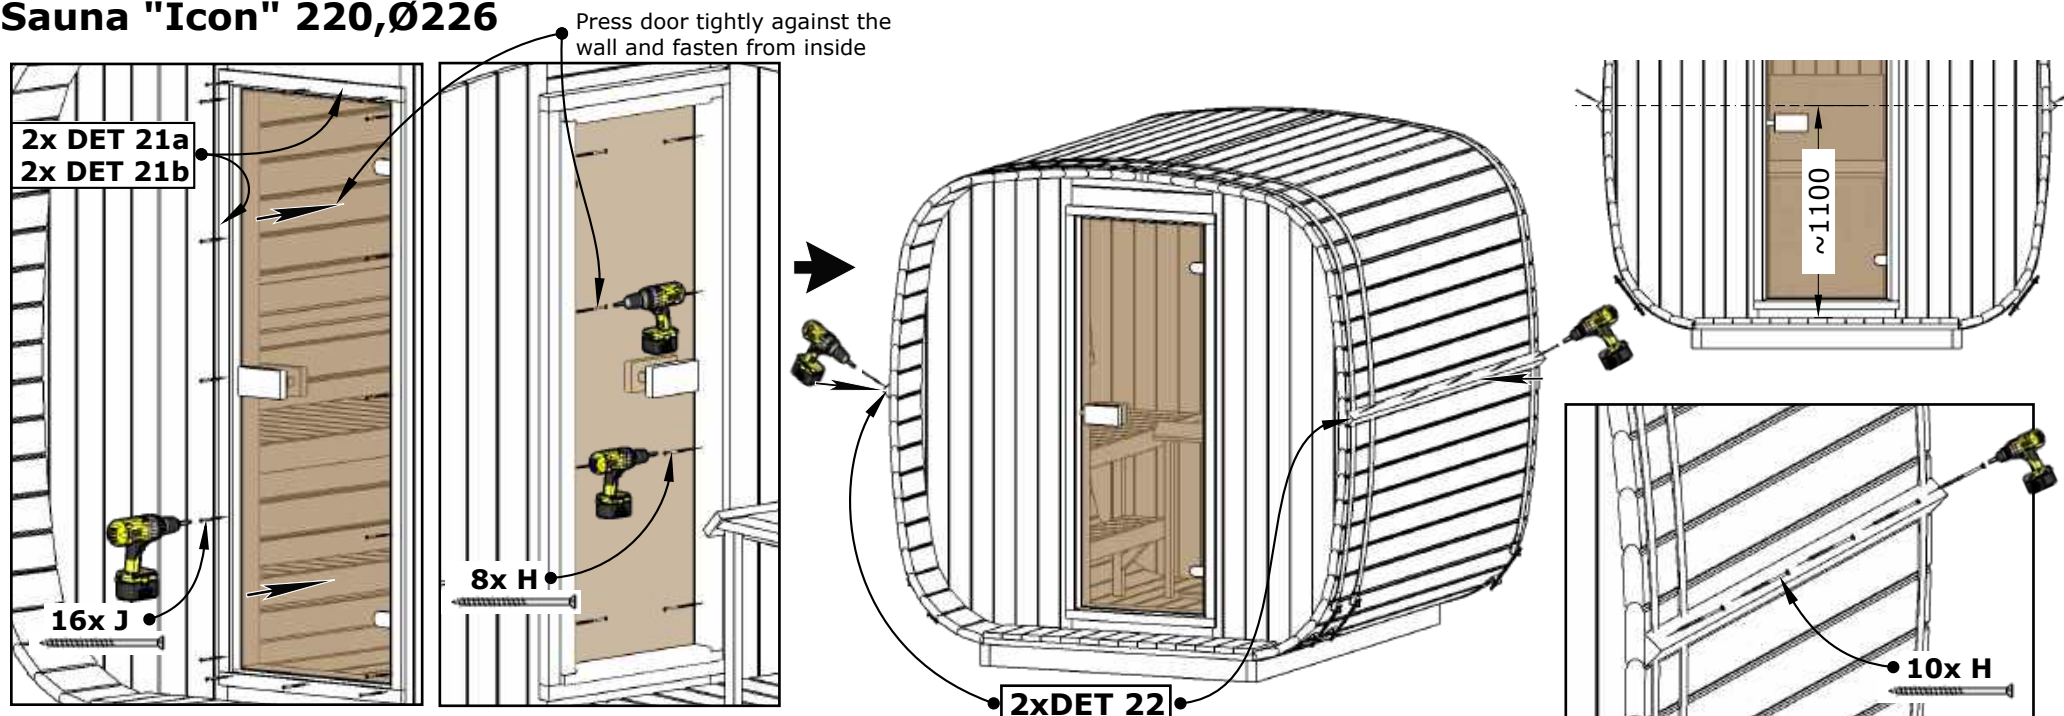


I

NB! Before roof shingles, install underlay felt. Check underlay felt installation manual on extra pages.



Check also roof shingles installation manual inside package.





II

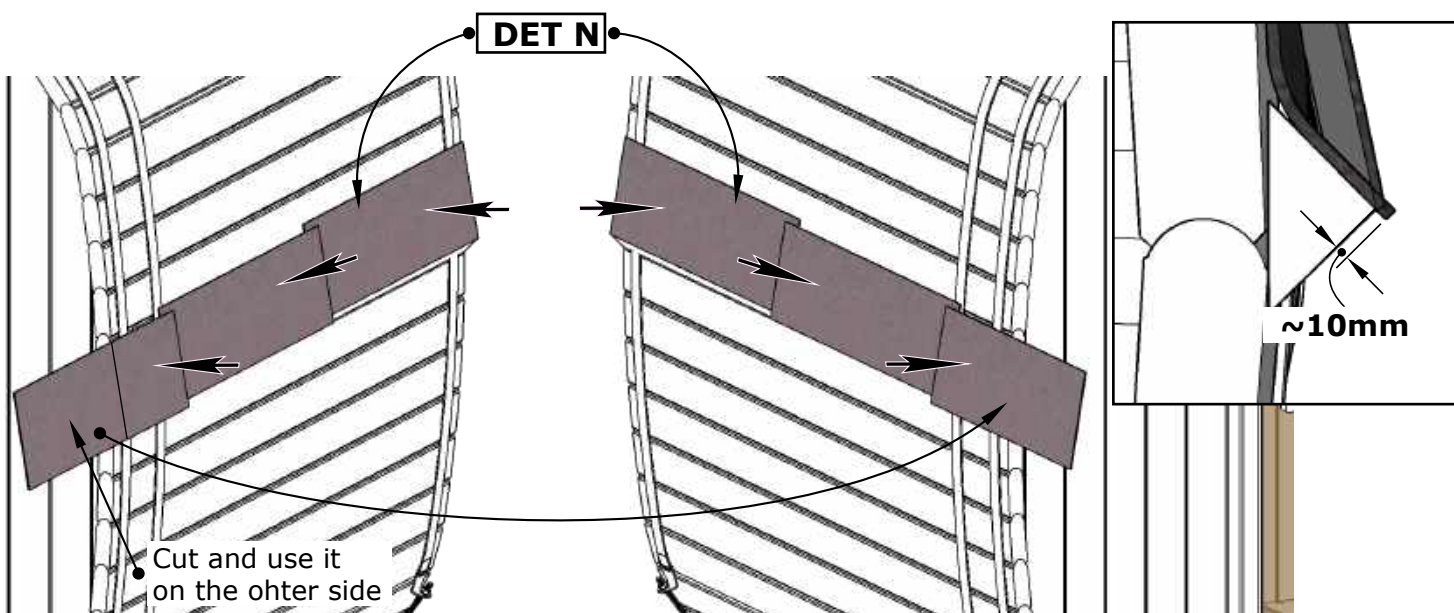

Sauna "Icon" 220,Ø226

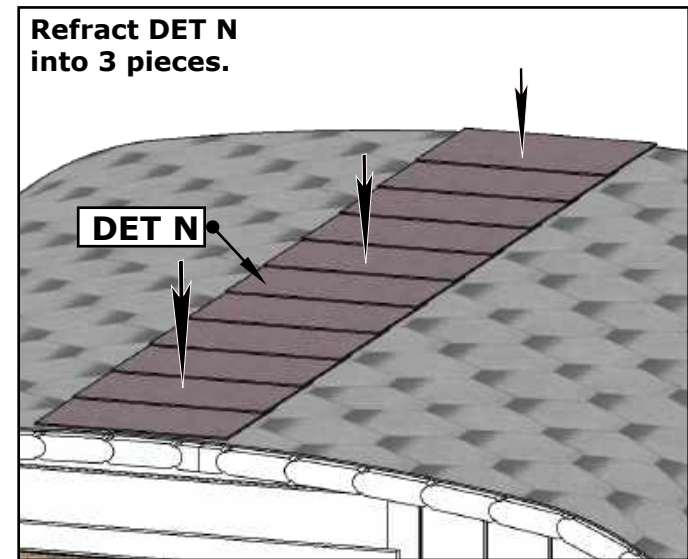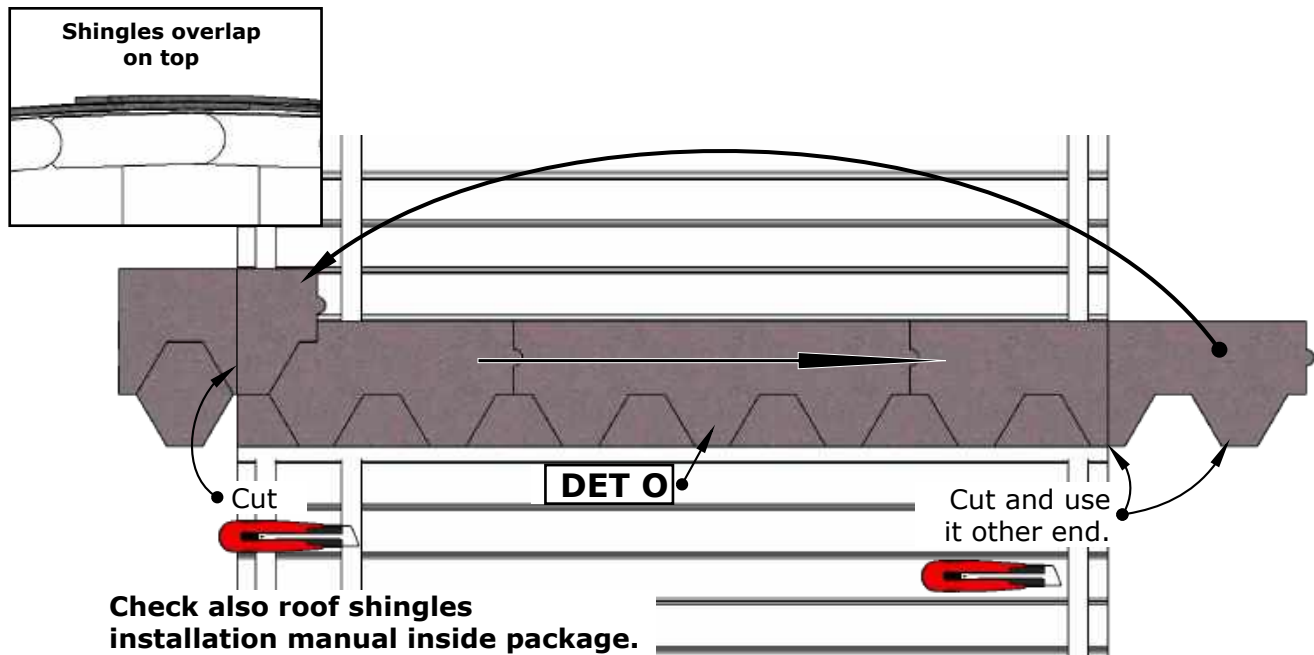

I

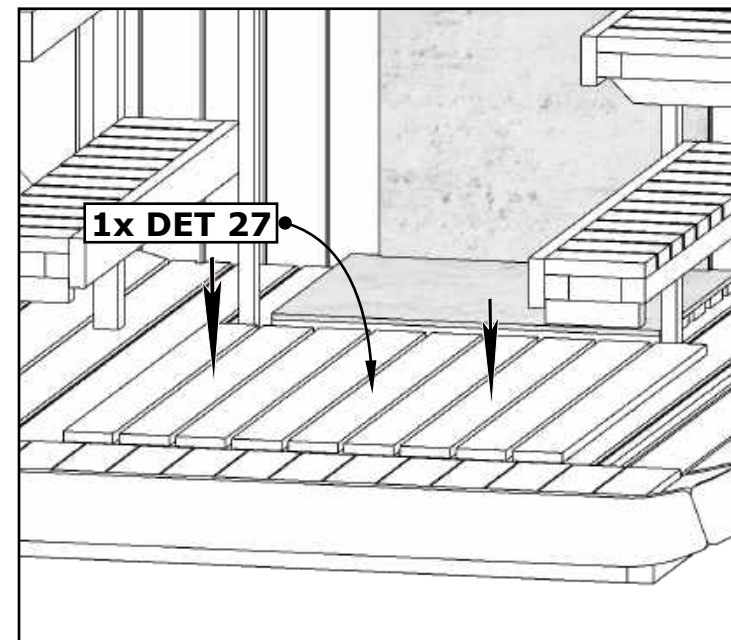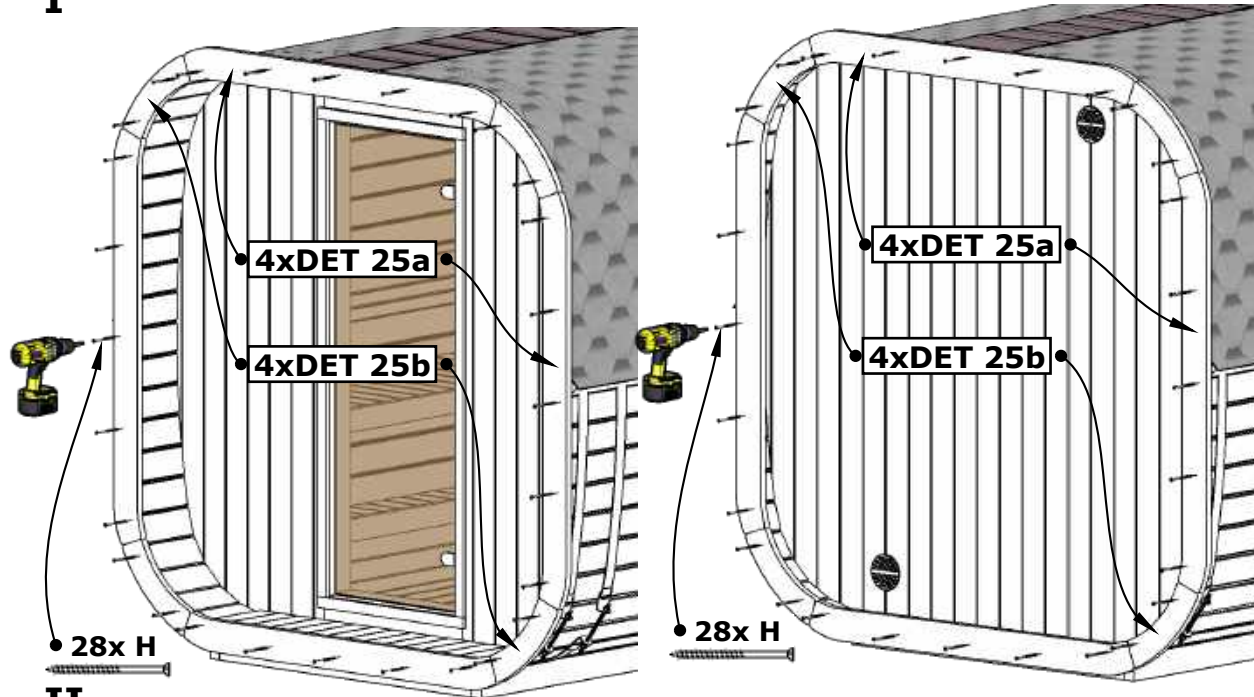

13. II

(ICO-26-PES-PTS-001)

Underlay felt installation manual.

