
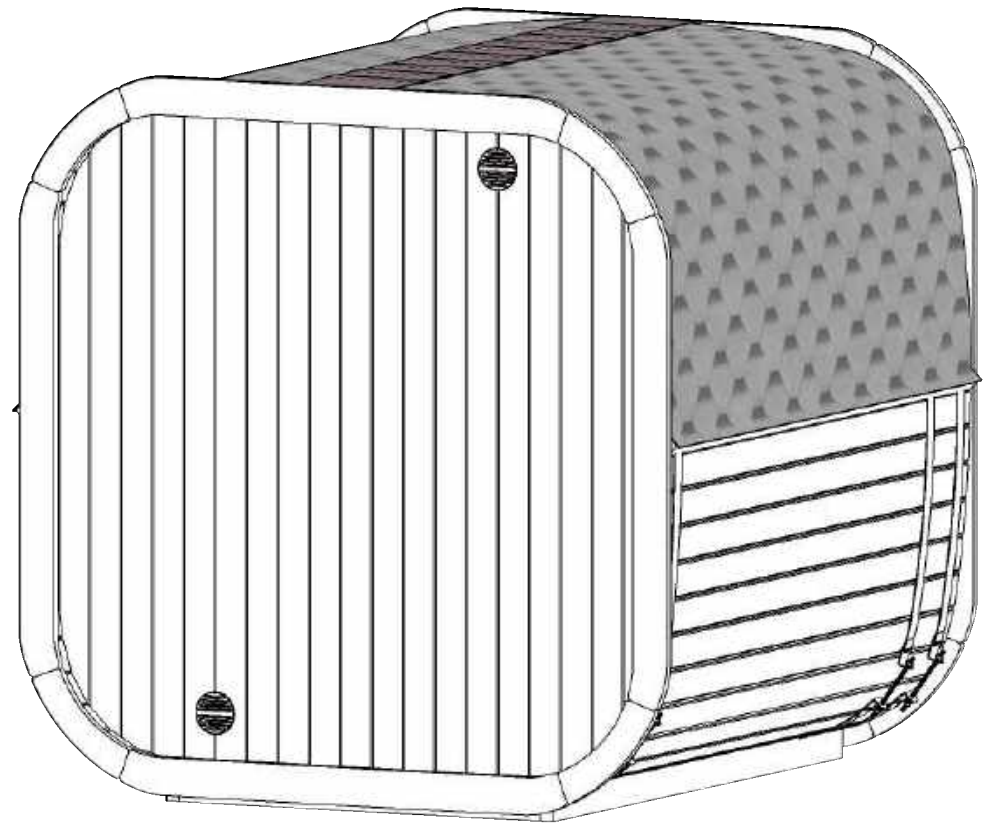


Sauna "Icon" 220,Ø226


**NB! Please read whole manual
before start.**

**All given measurements
are in millimeters!**

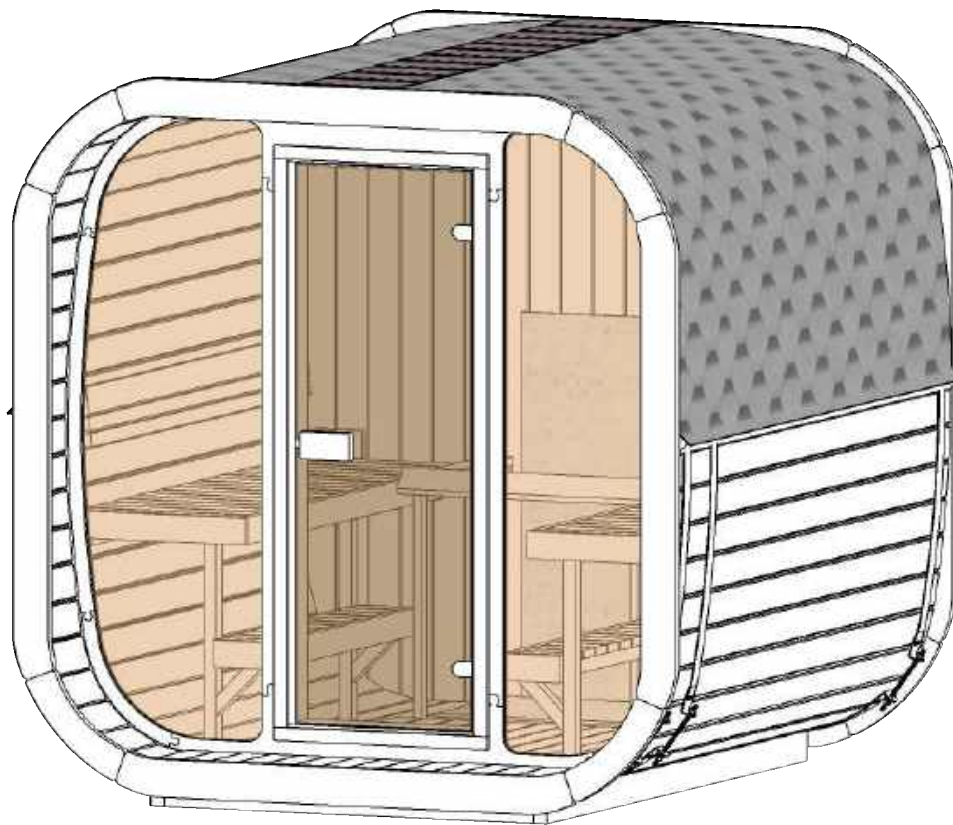







Sauna "Icon" 220,Ø226

Details list 1.

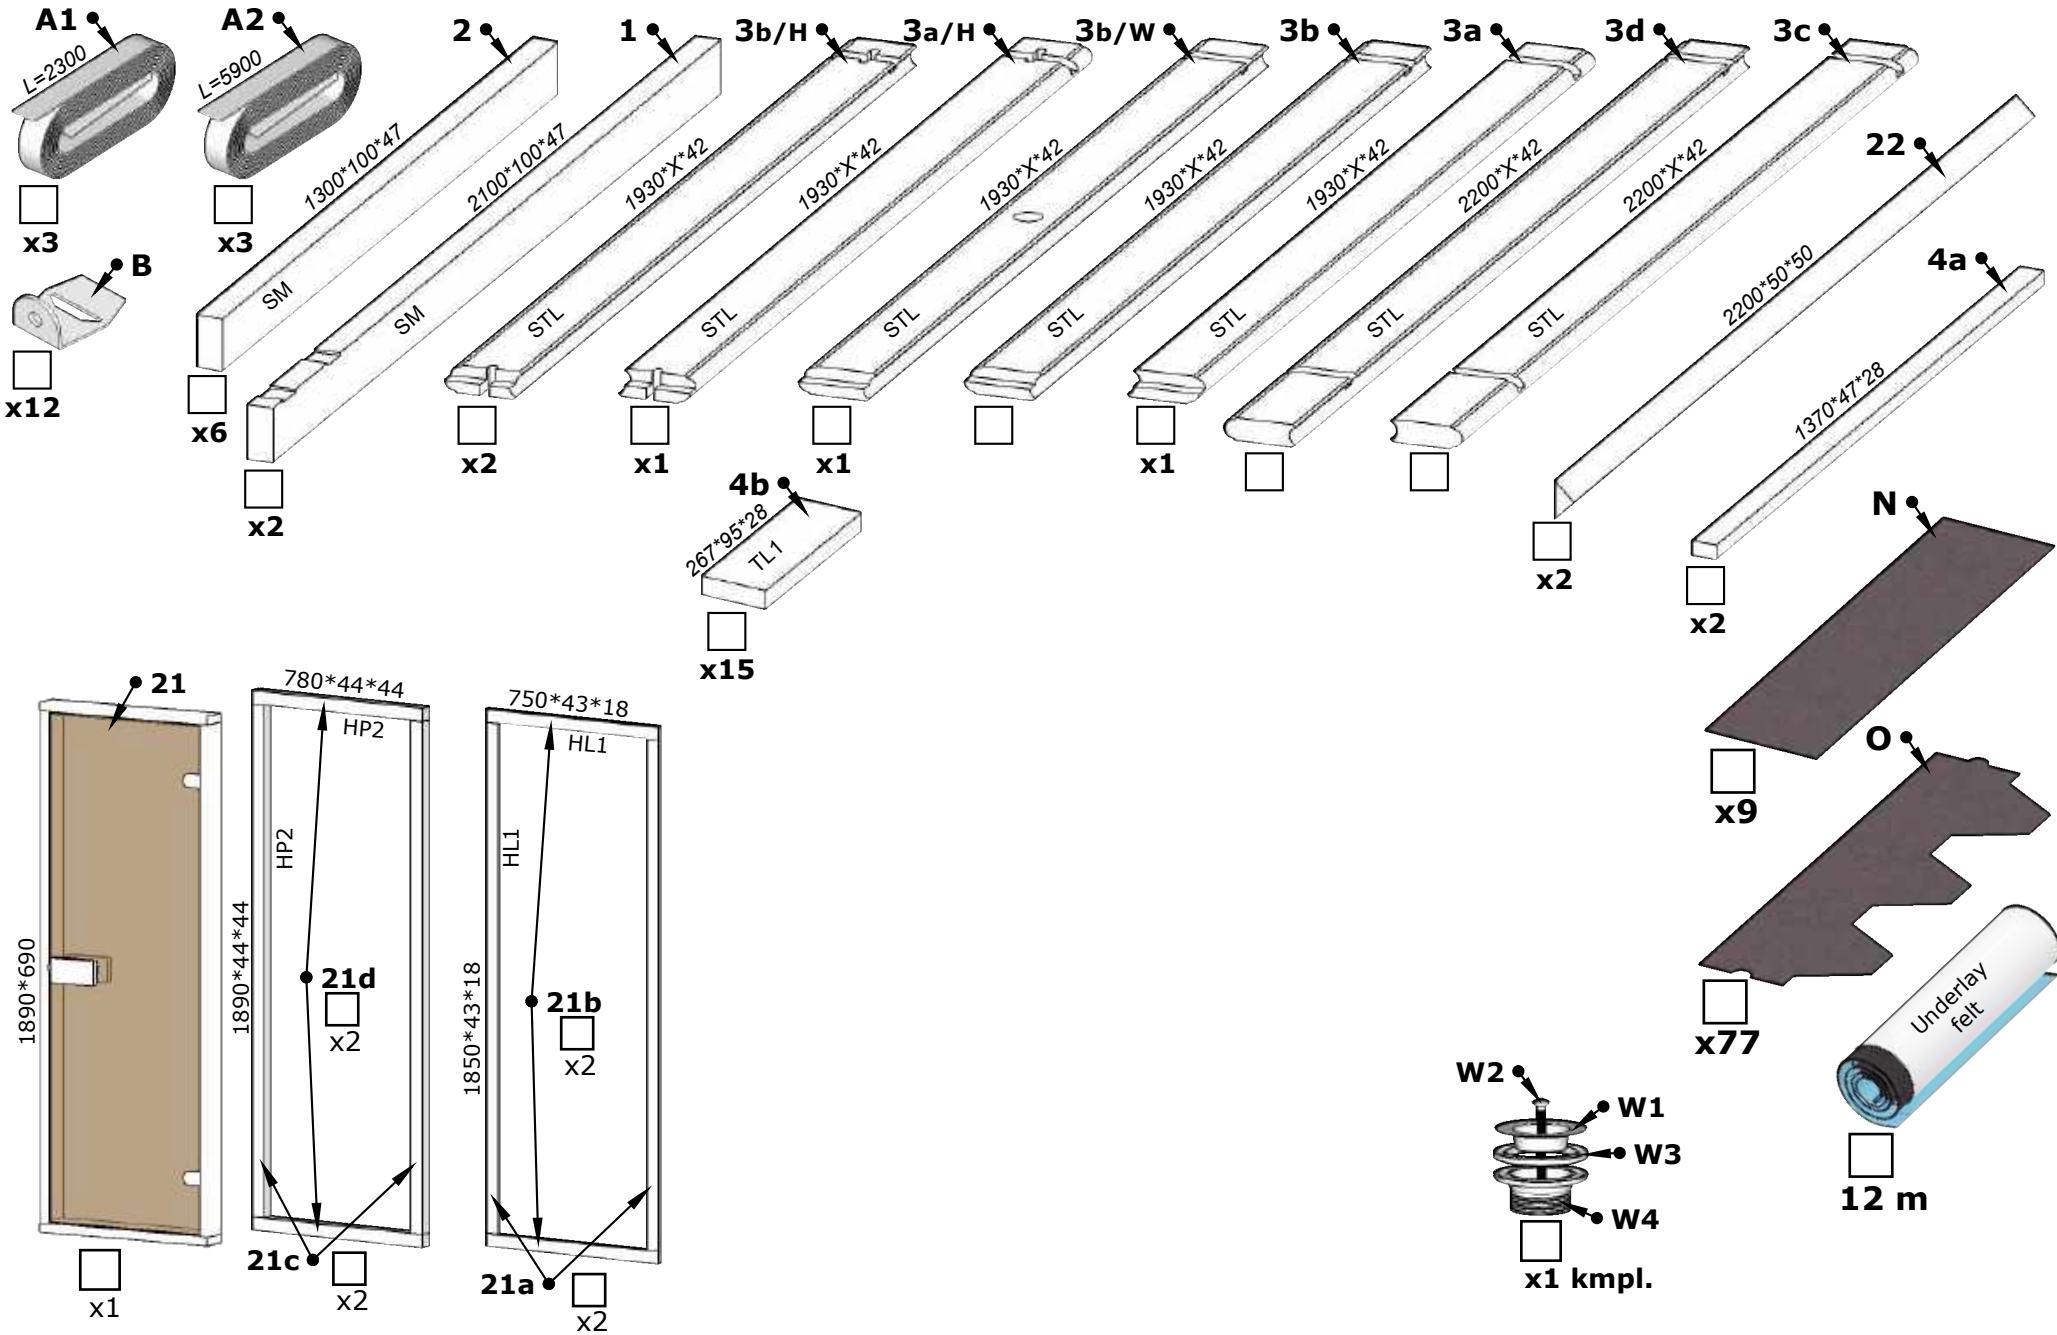


Sauna "Icon" 220,Ø226





Details list 2.

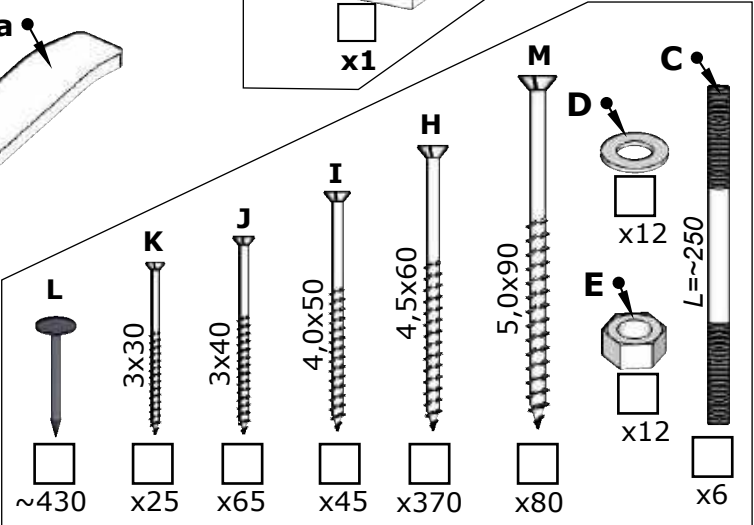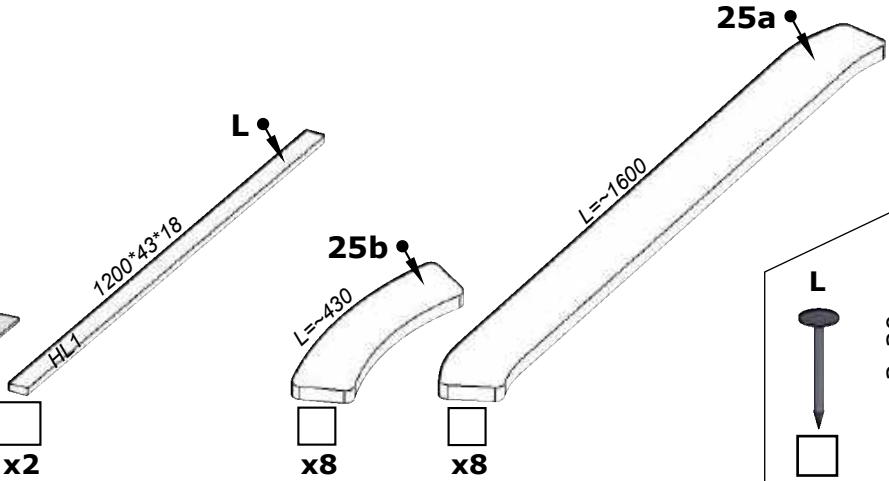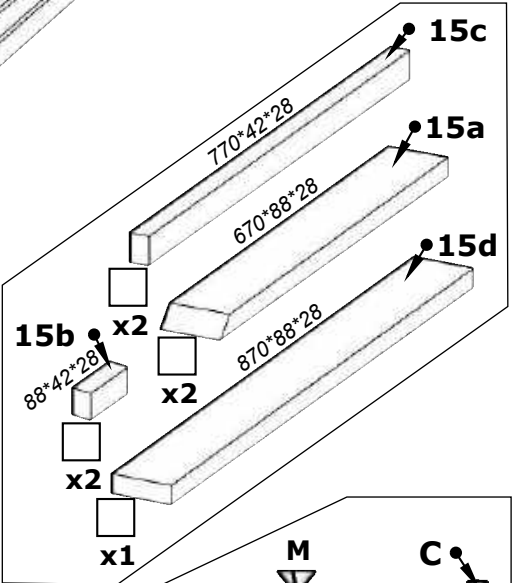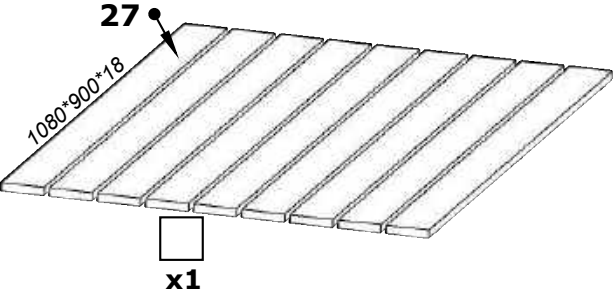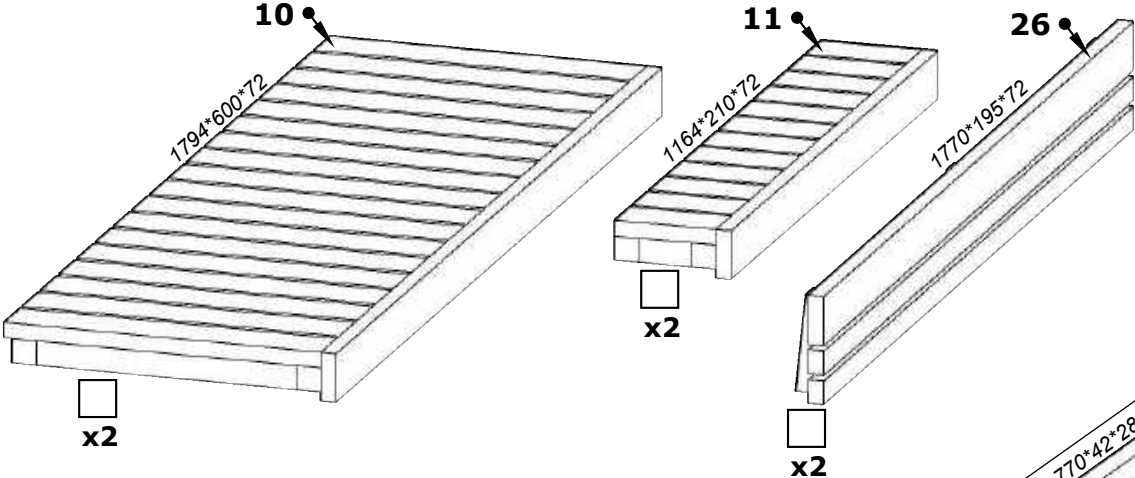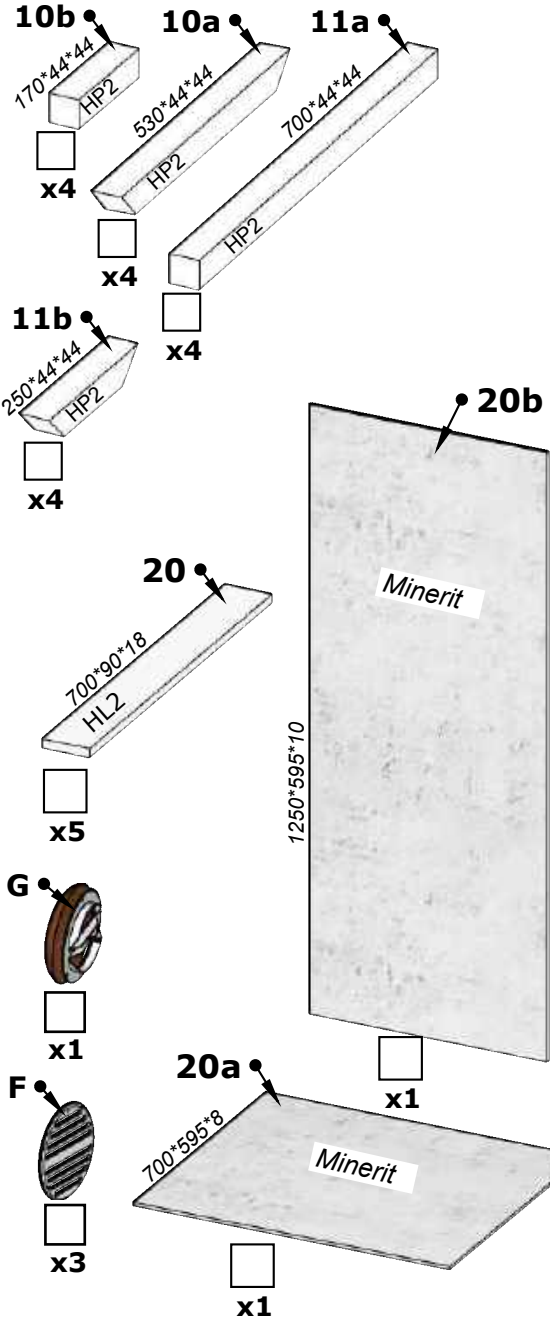


Icon Ø226 Front glass wall assembly

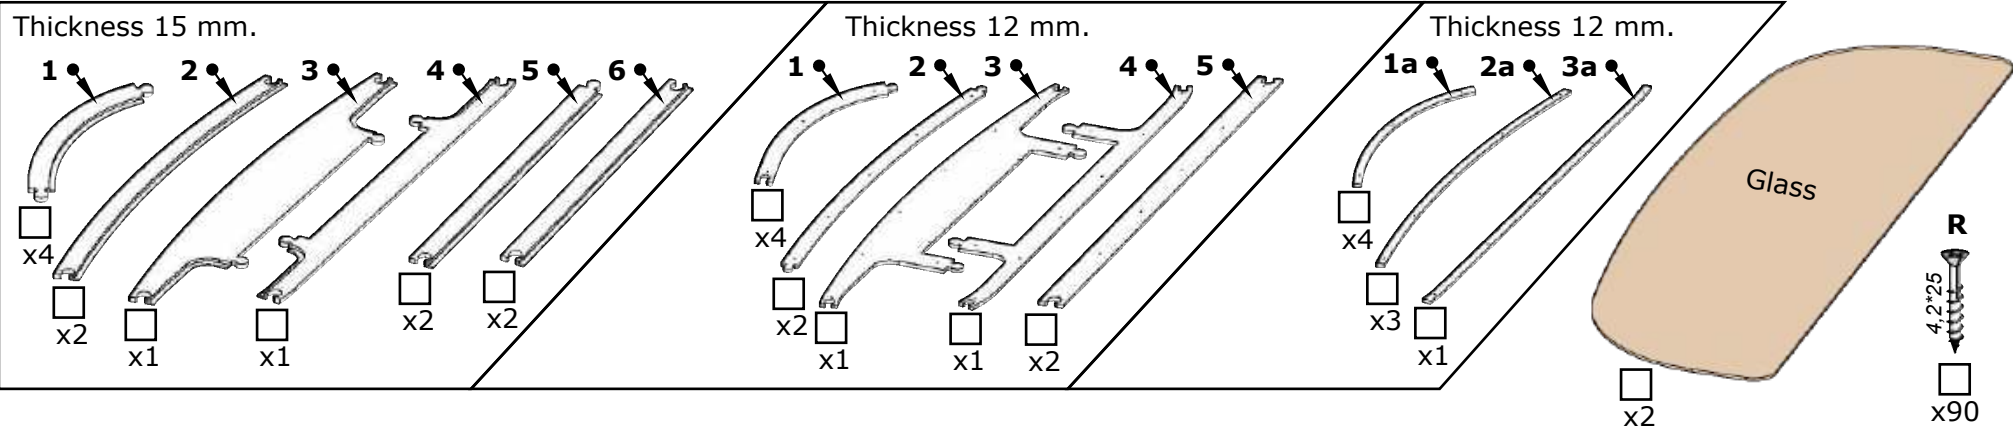

Base frame, thickness 15 mm.

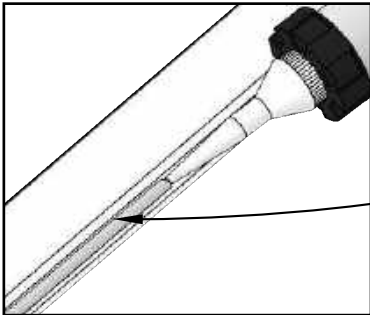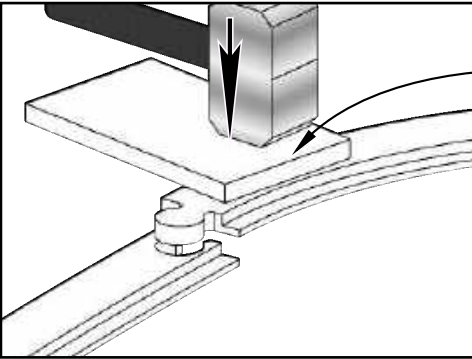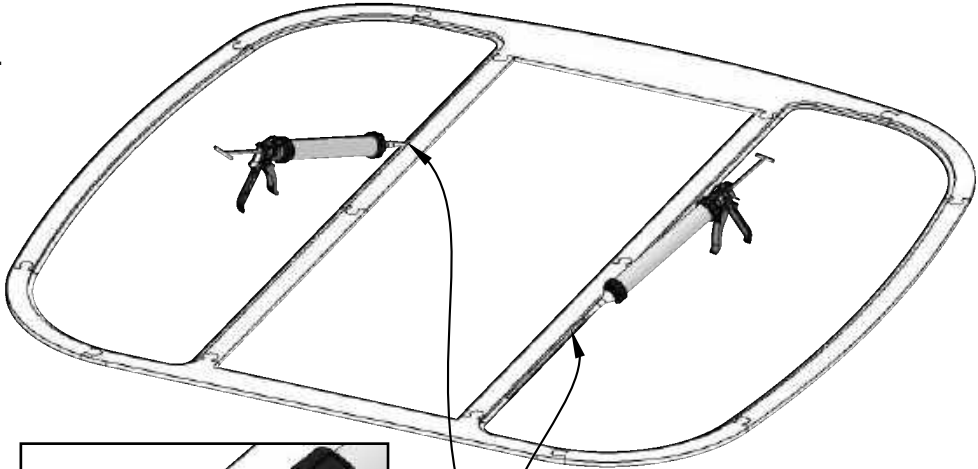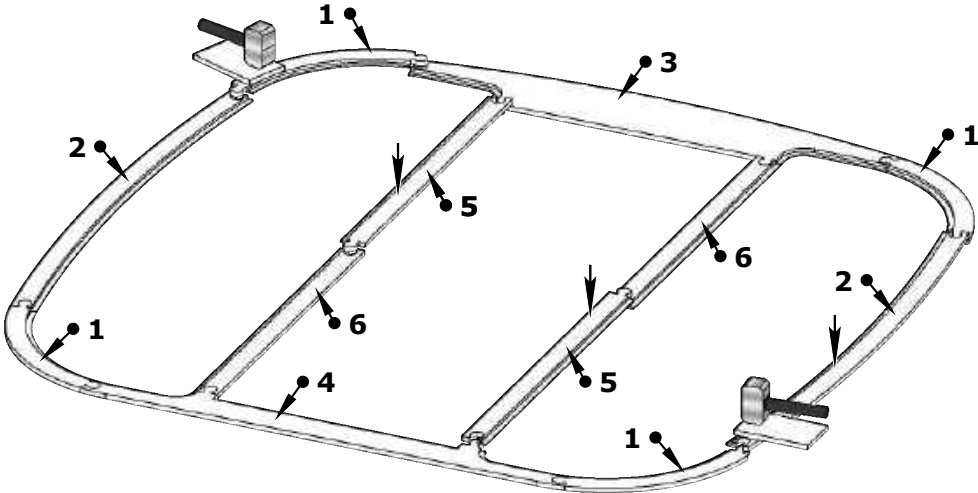






Icon Ø226 Front glass wall assembly

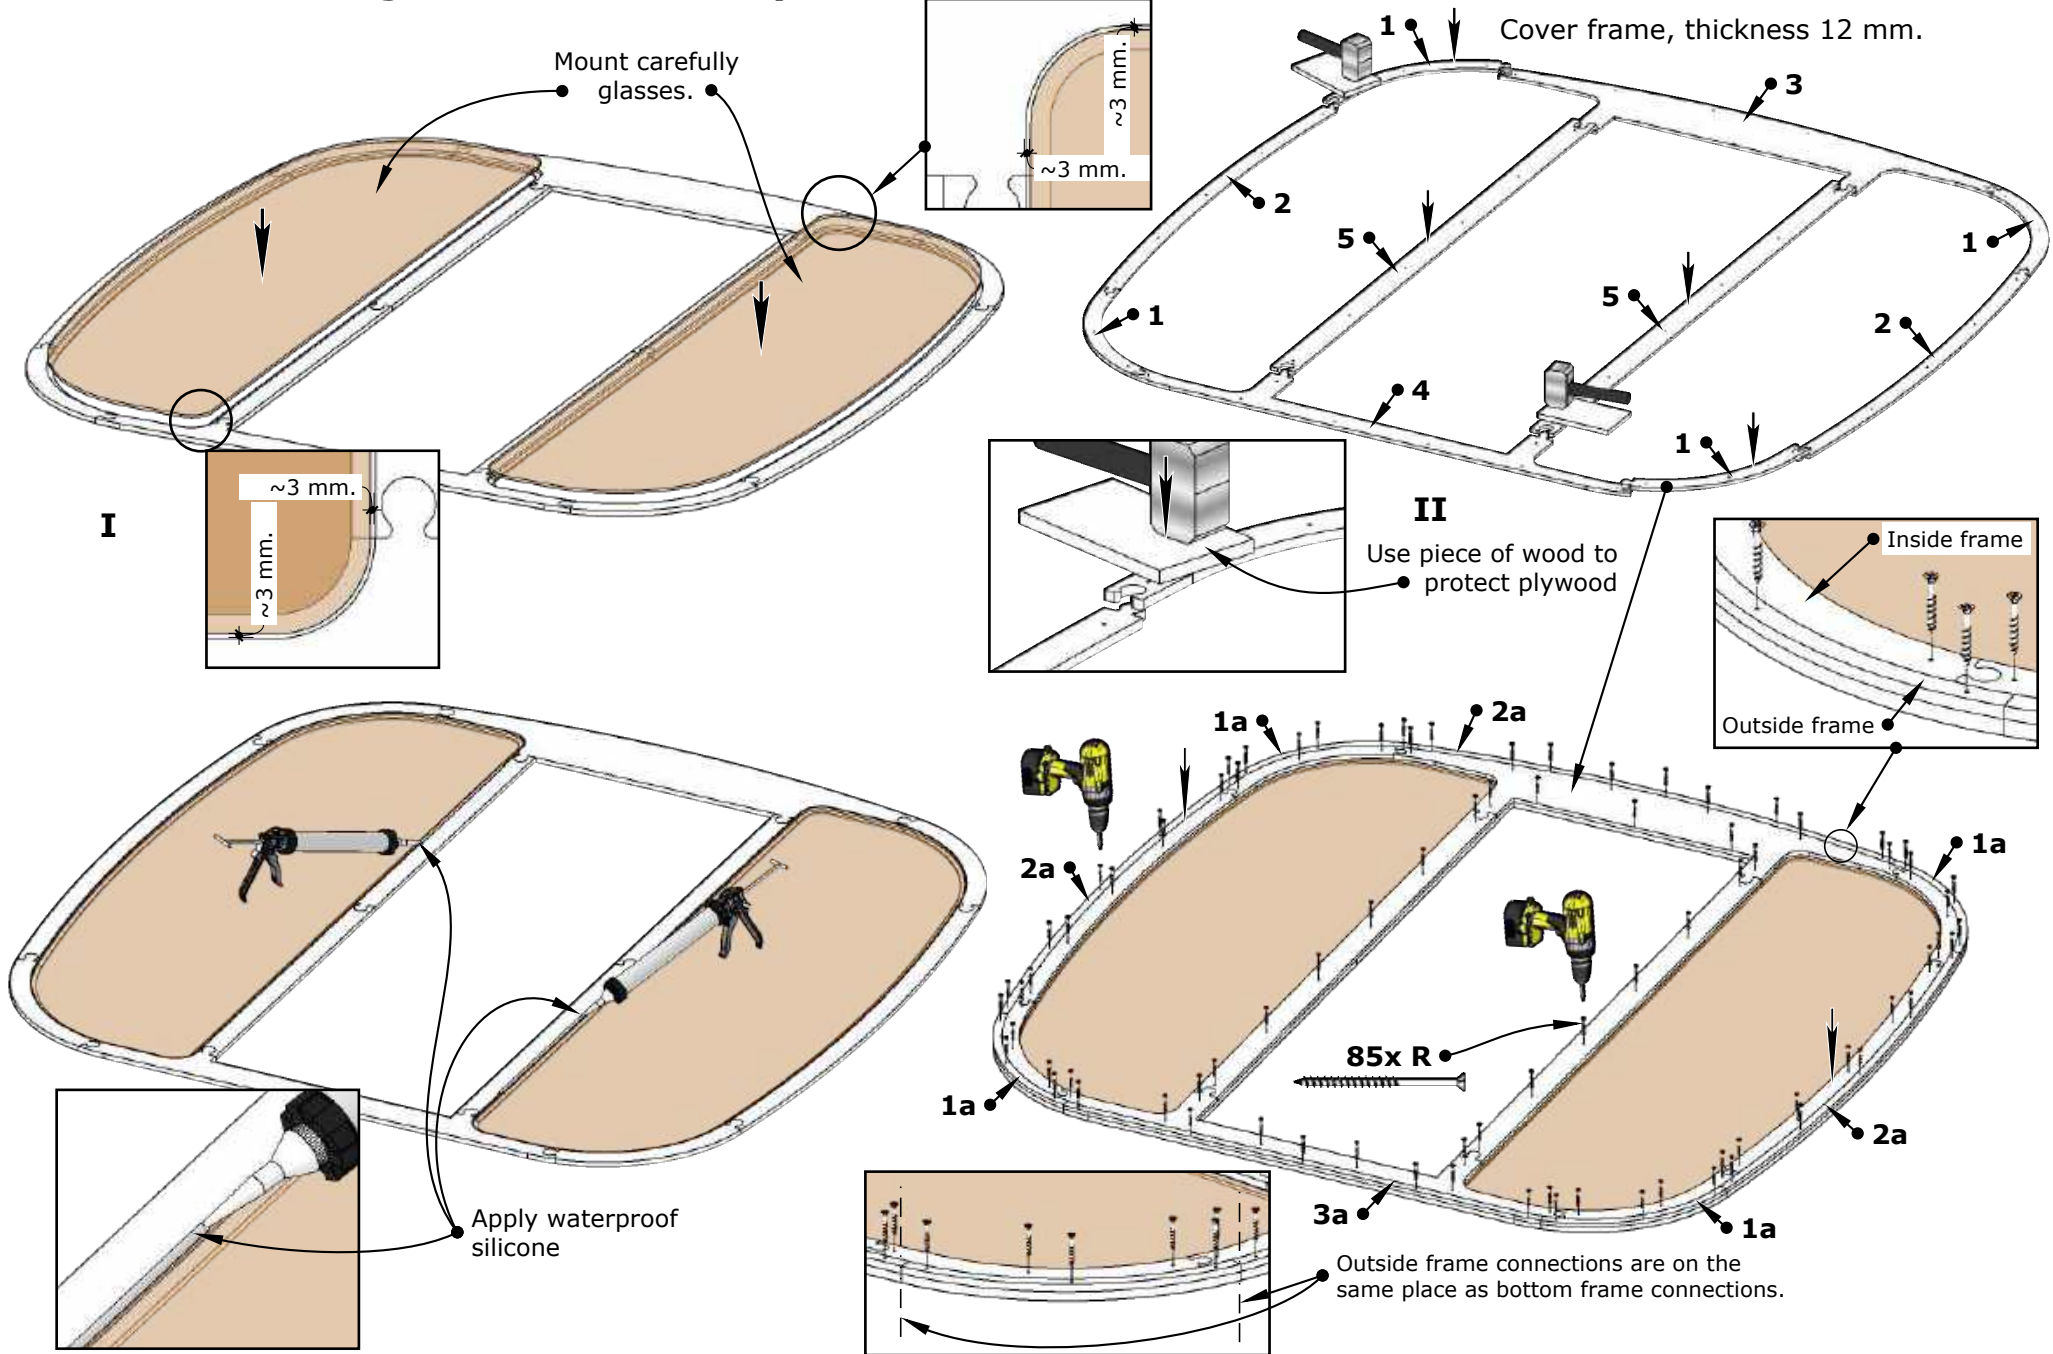


Icon Ø226 Front glass wall assembly

Check also main installation manual.


Cut board from pallet L= \sim 2100mm.
Fix it diagonally to make wall more rigid during the installation.

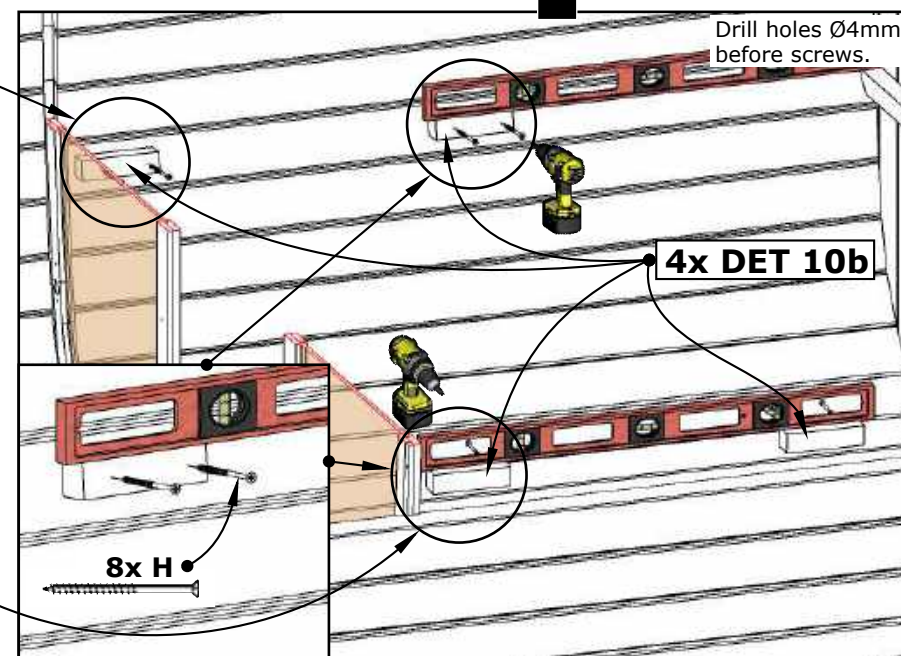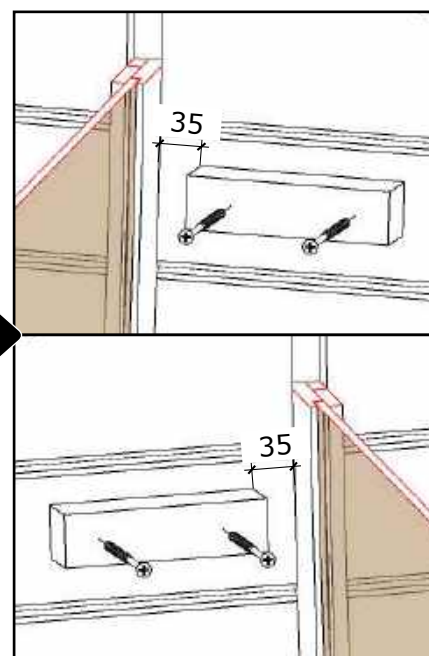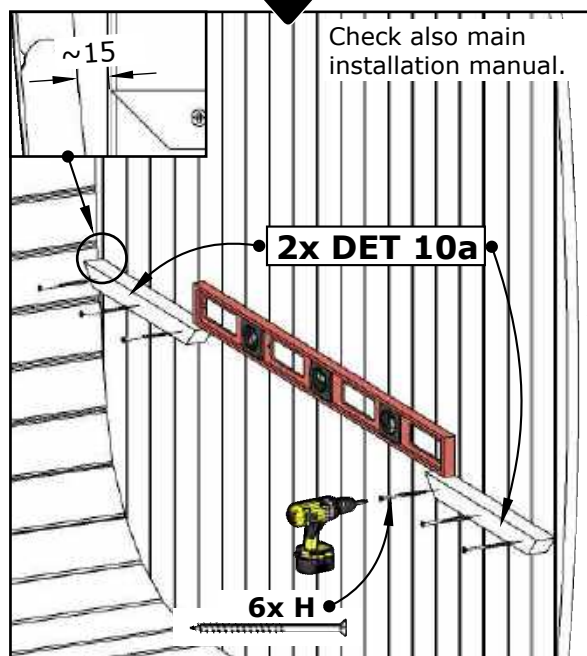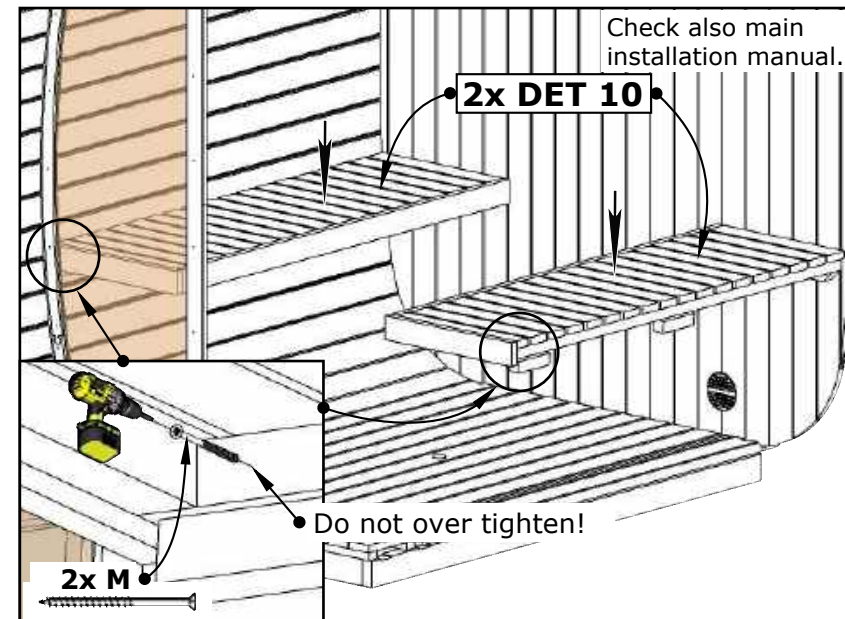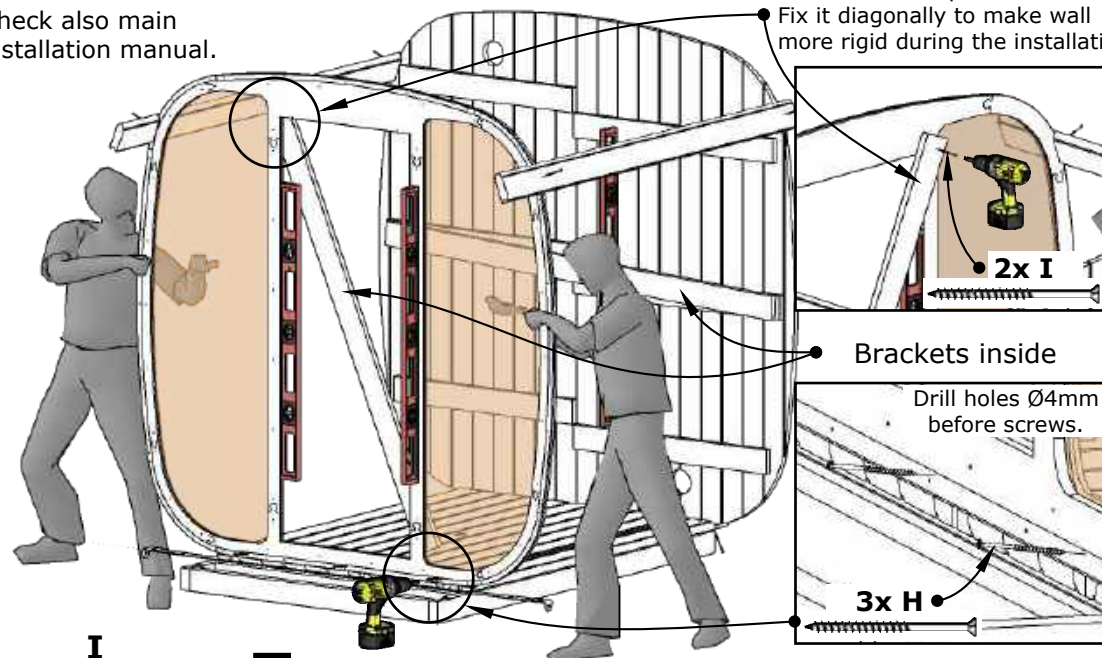

Icon Ø226 Front glass wall assembly

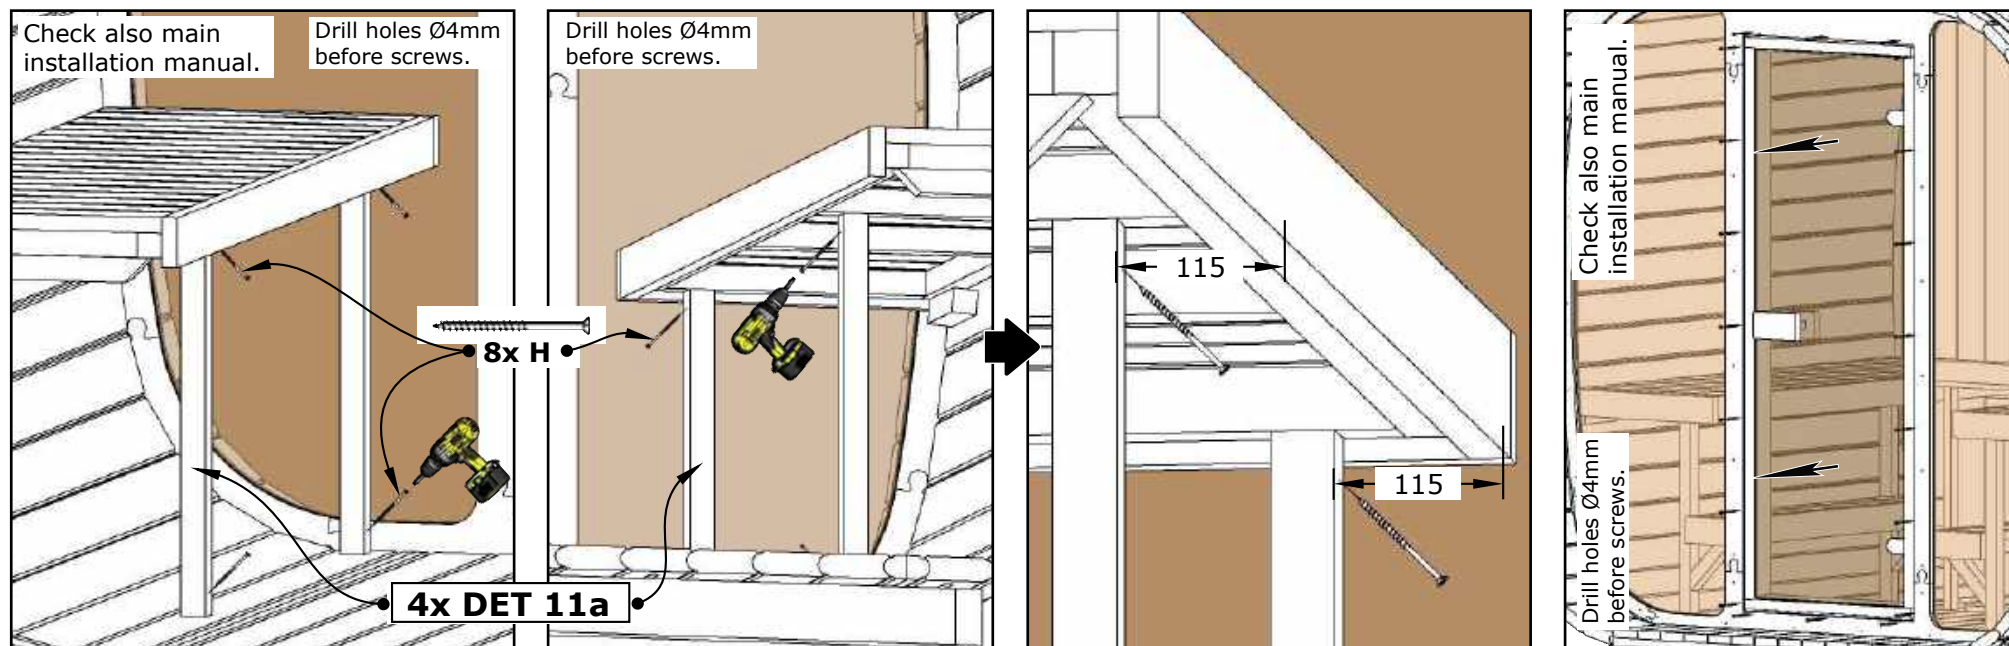

I


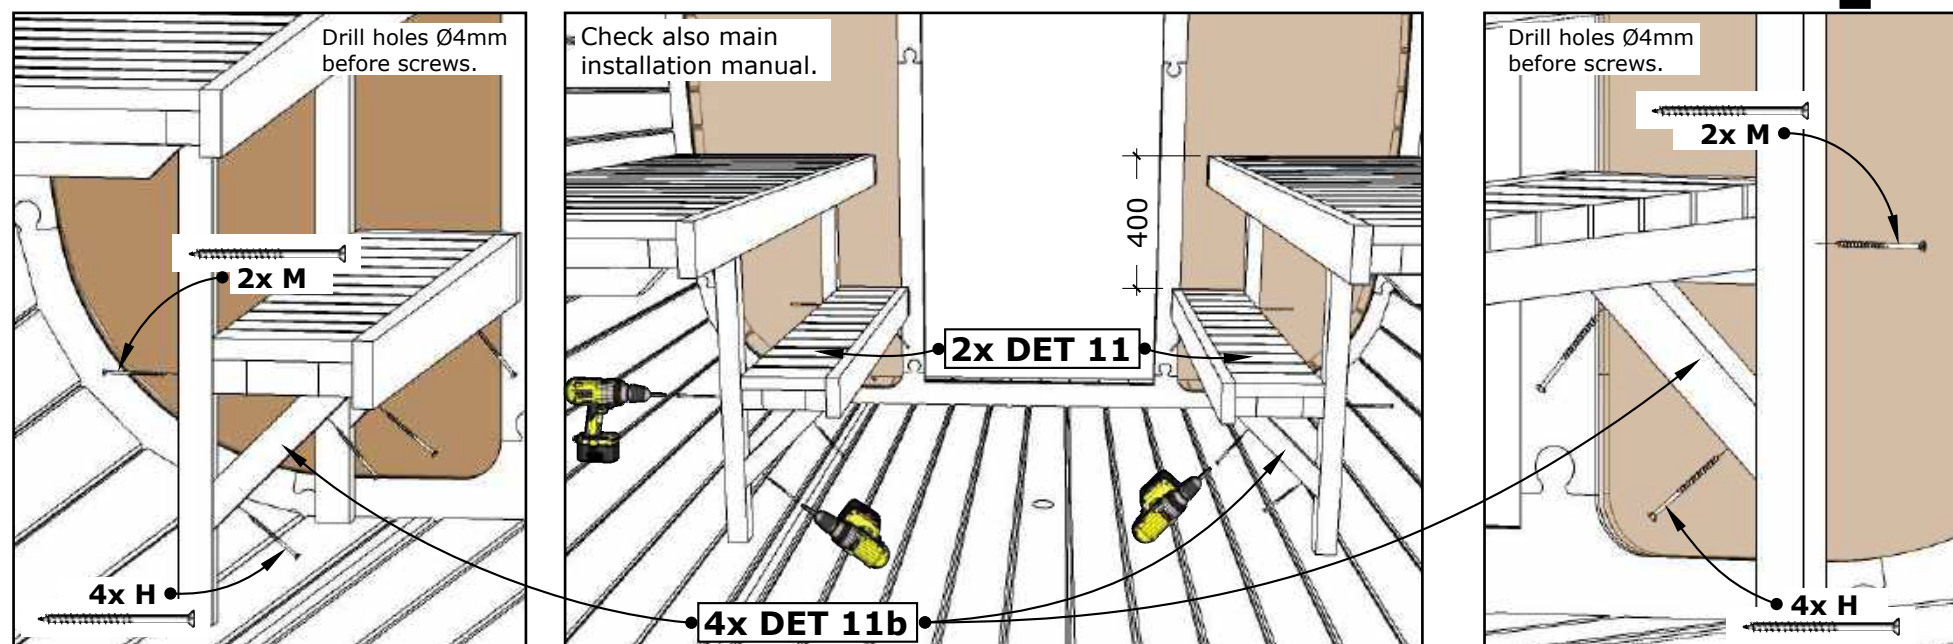


4. II

(ICO-26-TKE-PTS-001)


Icon Ø226 Wooden back wall assembly

Details

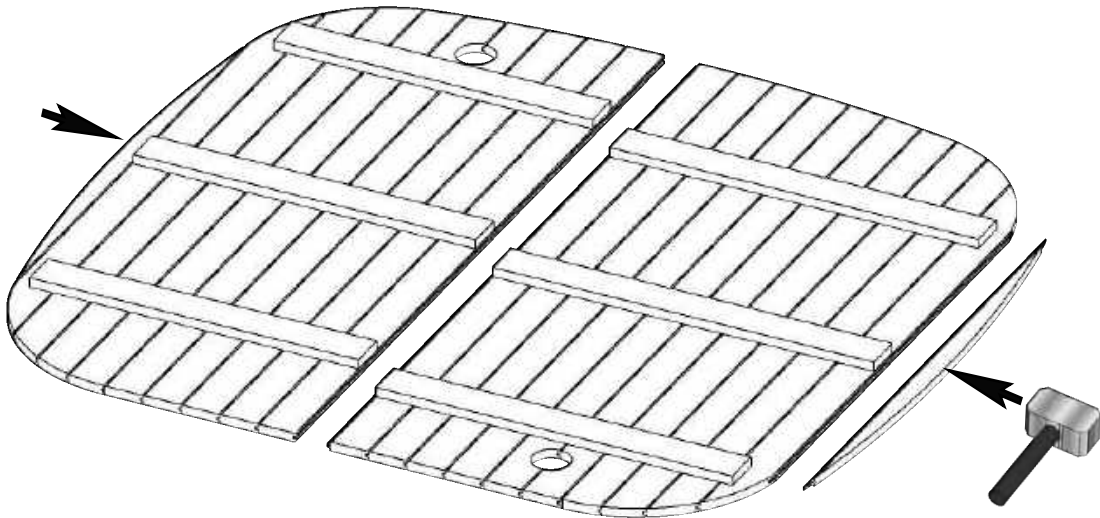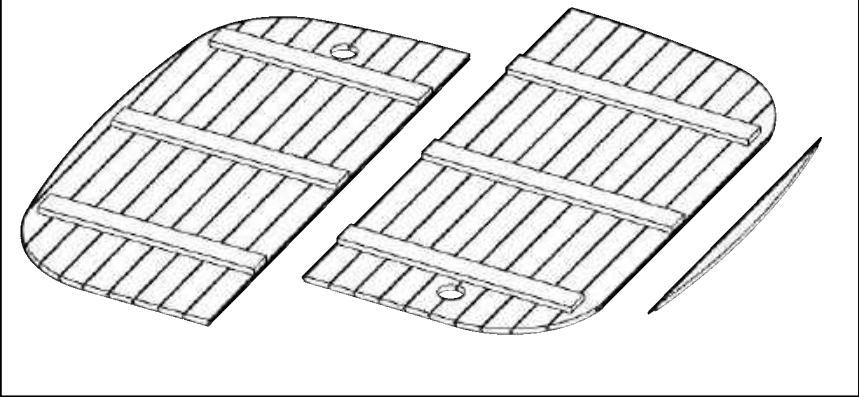


I


Cut board from pallet
L=~2100 mm.

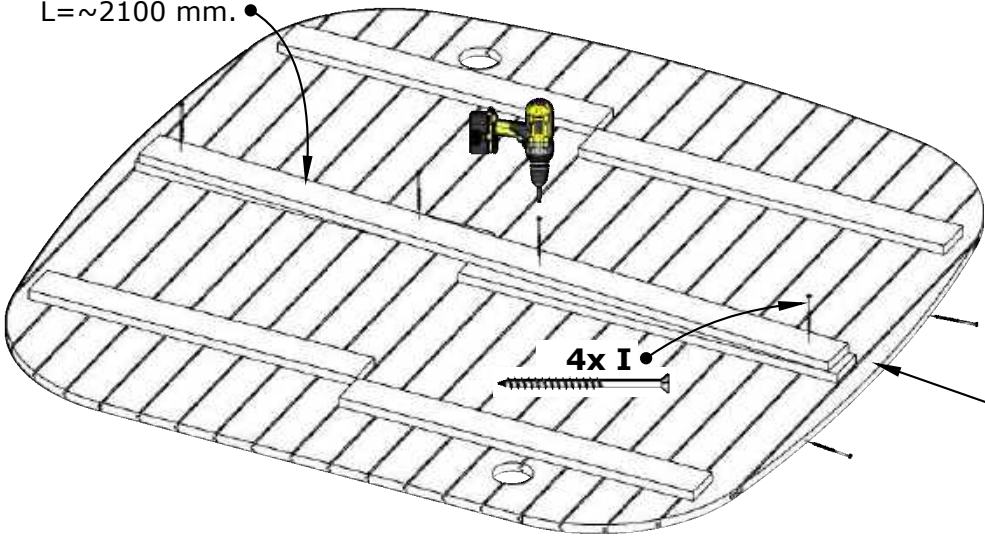

II

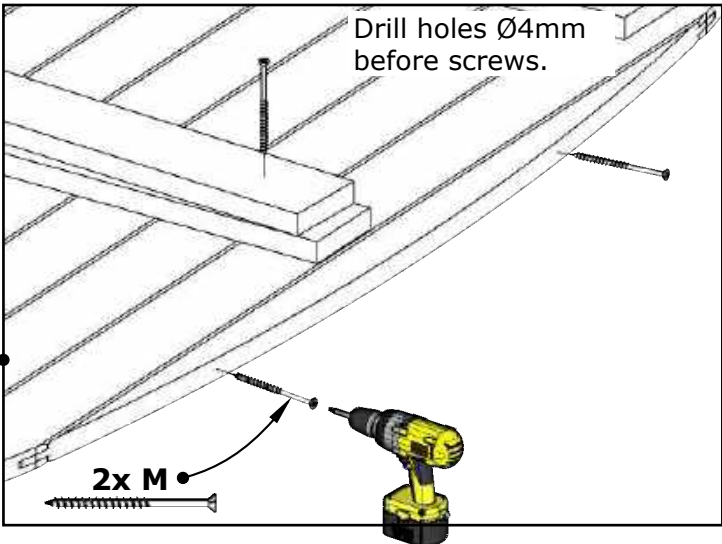


Sauna "Icon" 220,Ø226

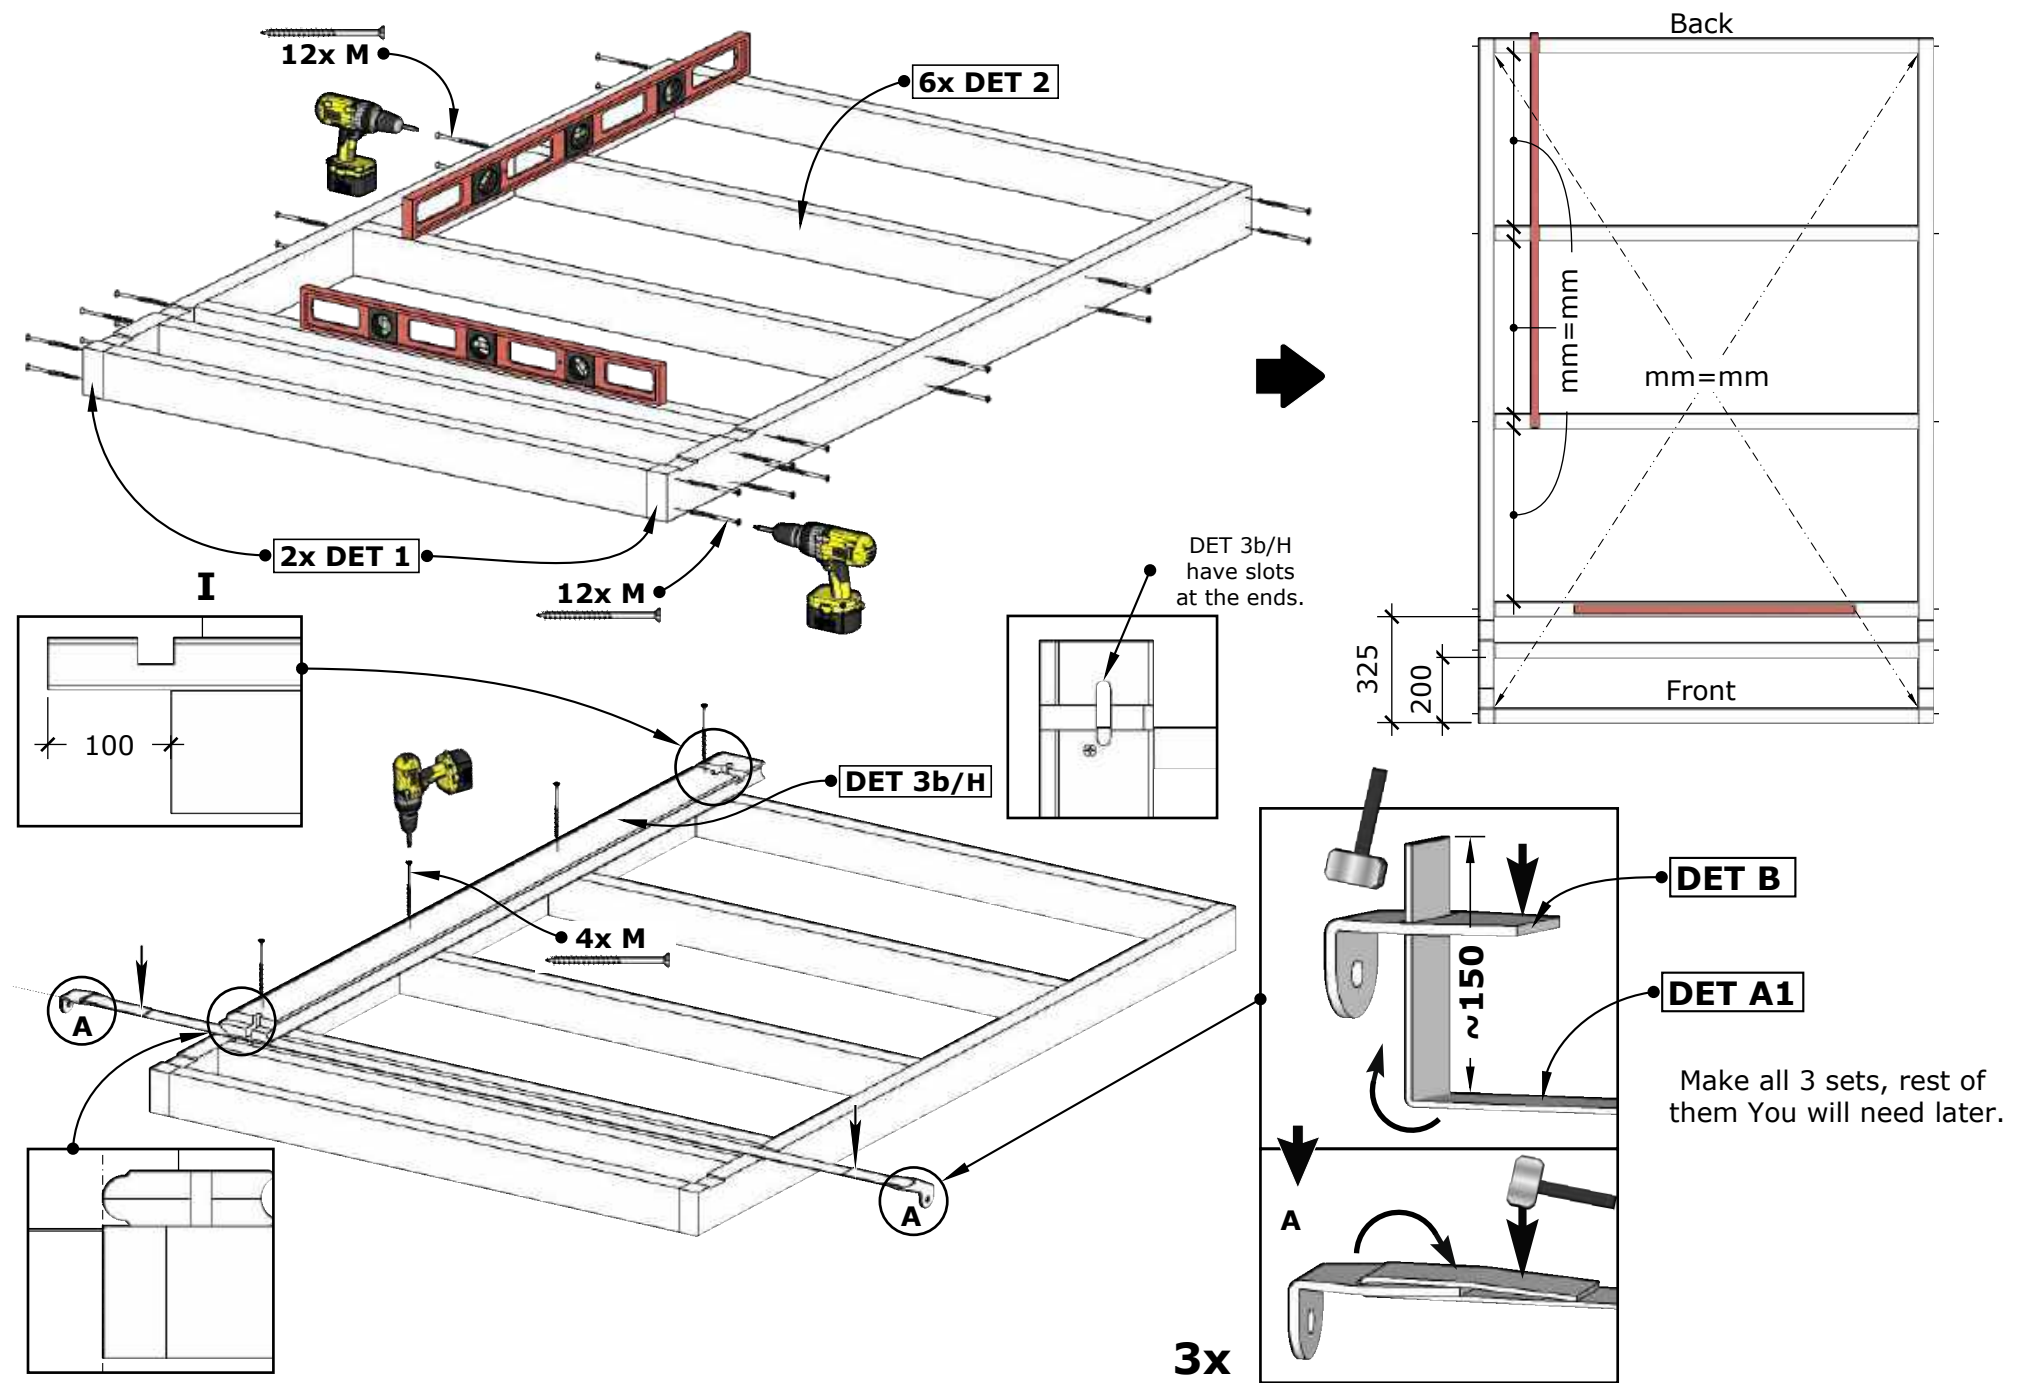

1. II

(ICO-26-TKE-PTS-001)

Sauna "Icon" 220,Ø226




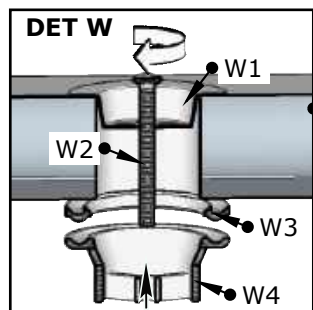


Fix screws over the one board, diagonally in every board.

Place DET 3b/W and DET 3b/H side by side about in the middle of the floor.

DET 3a/H have slots at the ends.

Don't fix board yet!

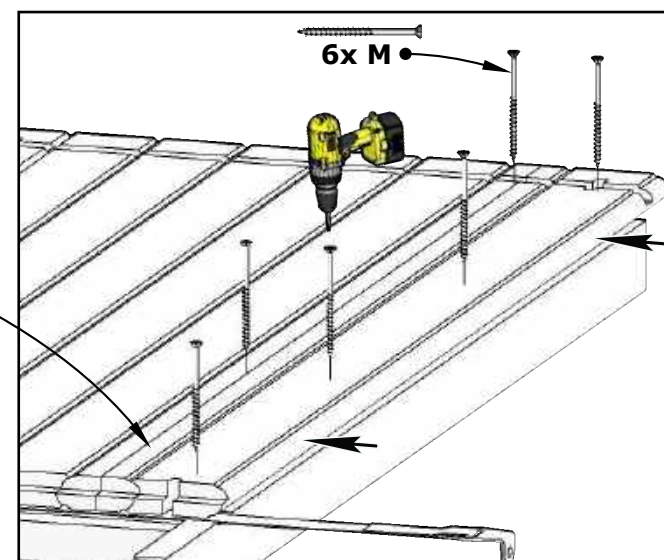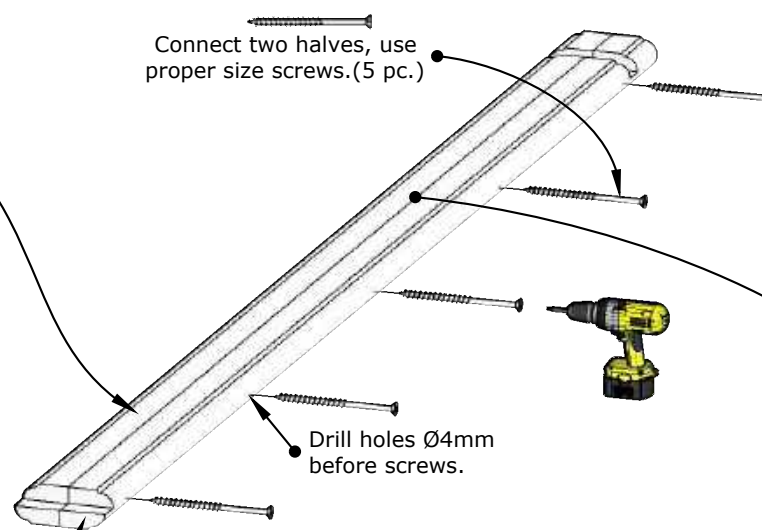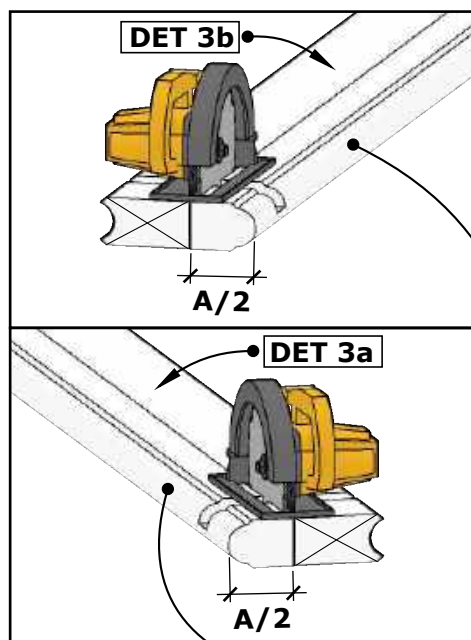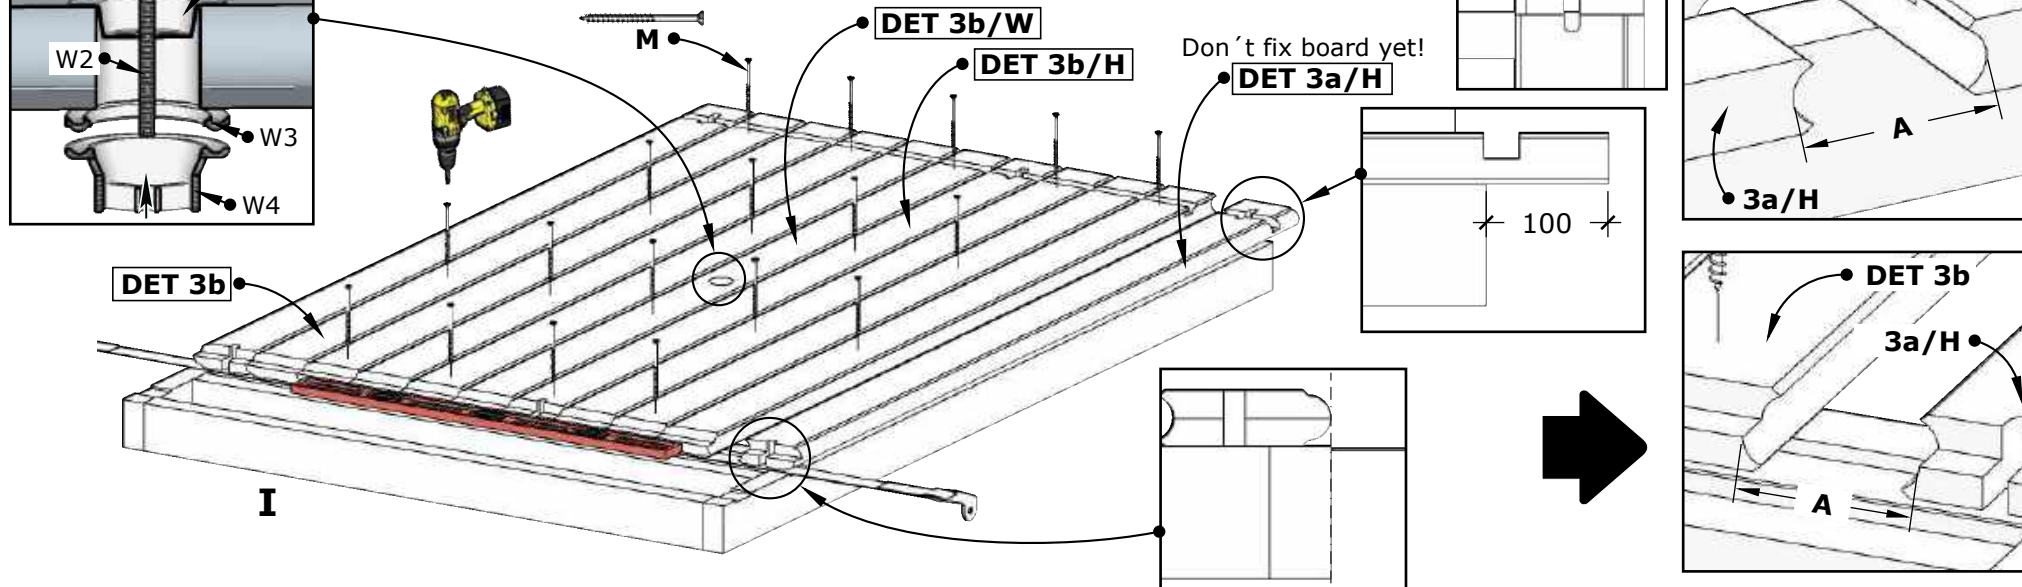

2.

II

(ICO-26-TKE-PTS-001)





Sauna "Icon" 220,Ø226

Use waterlevel




**Check walls installation
manual on extra pages!**


**Sauna wall configuration
depends on Your model!**

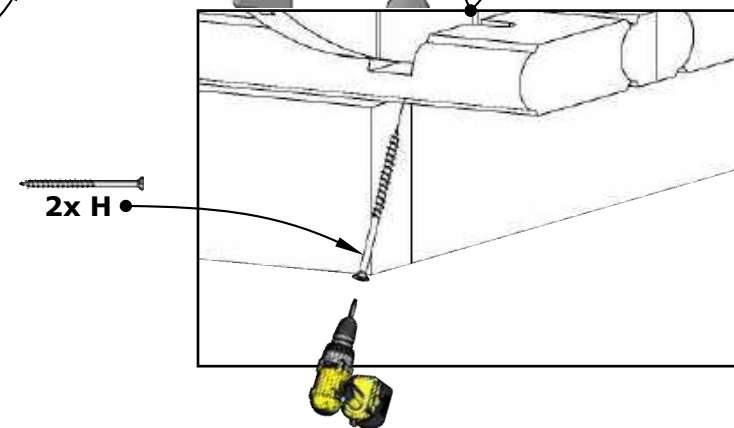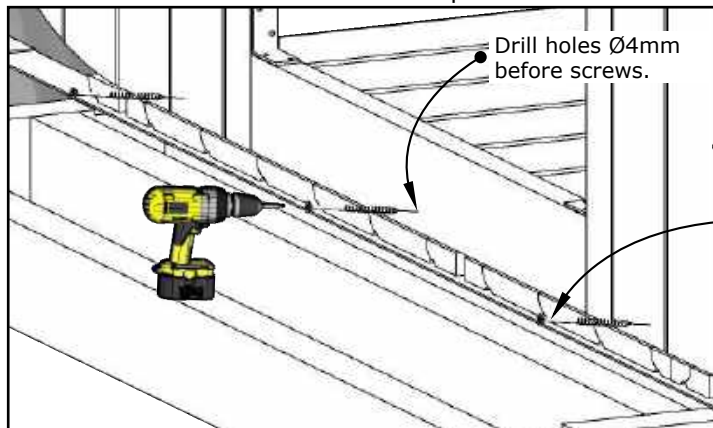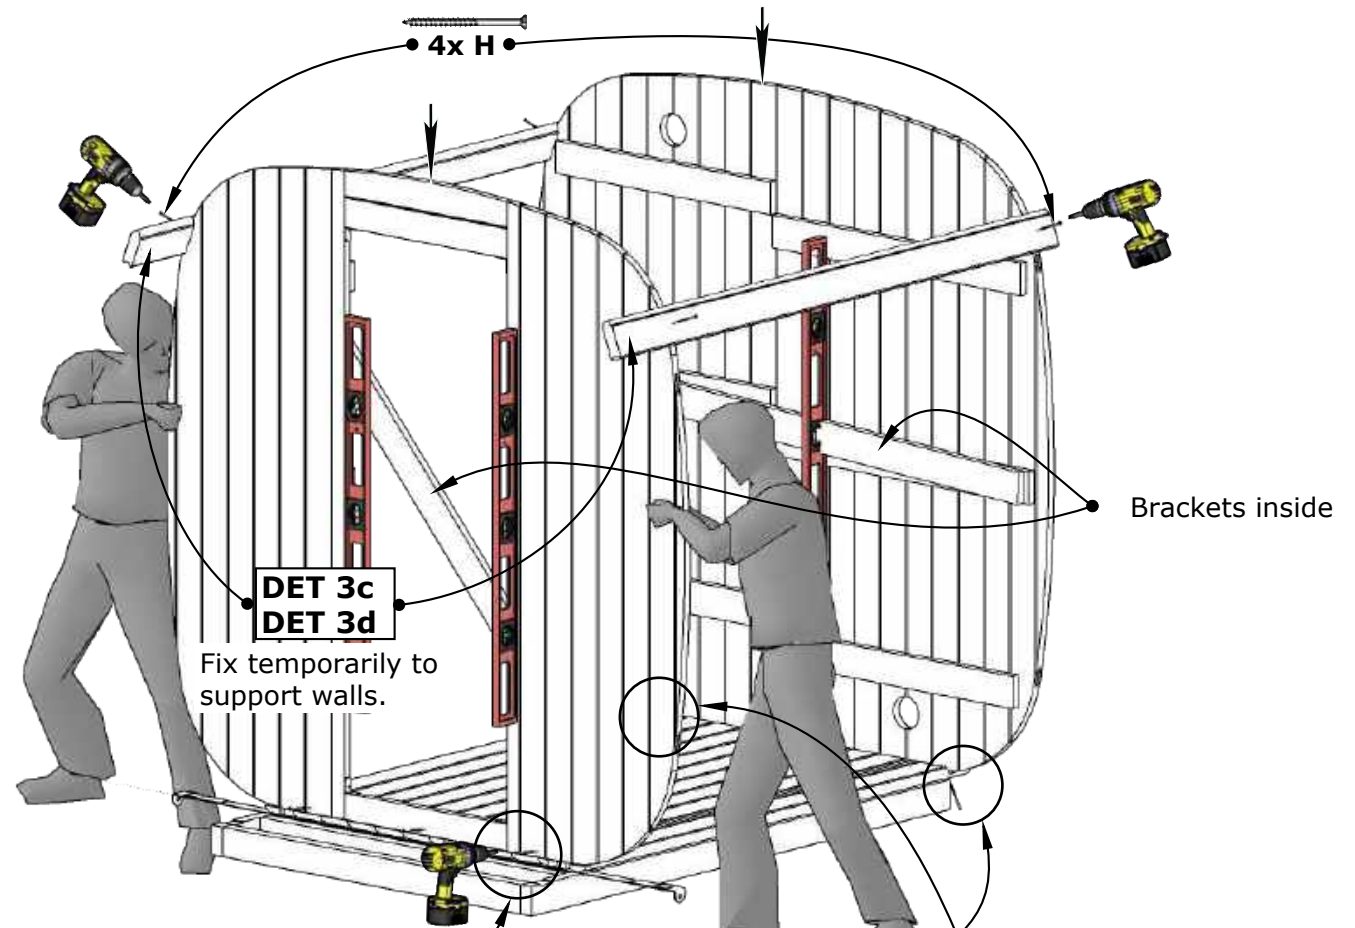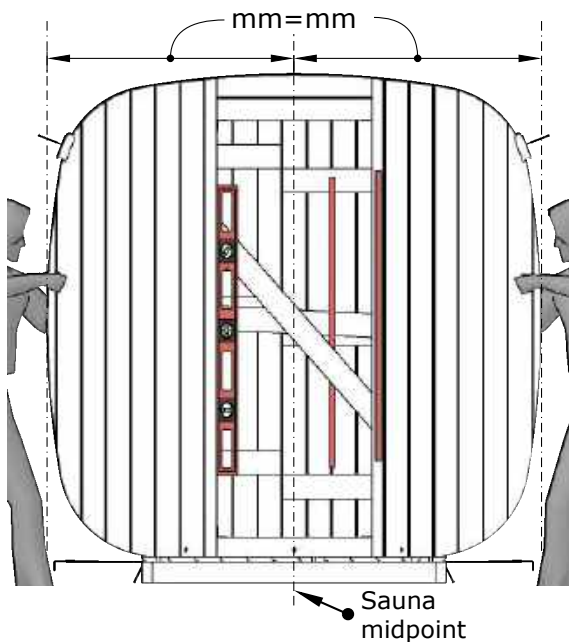


Sauna "Icon" 220,Ø226

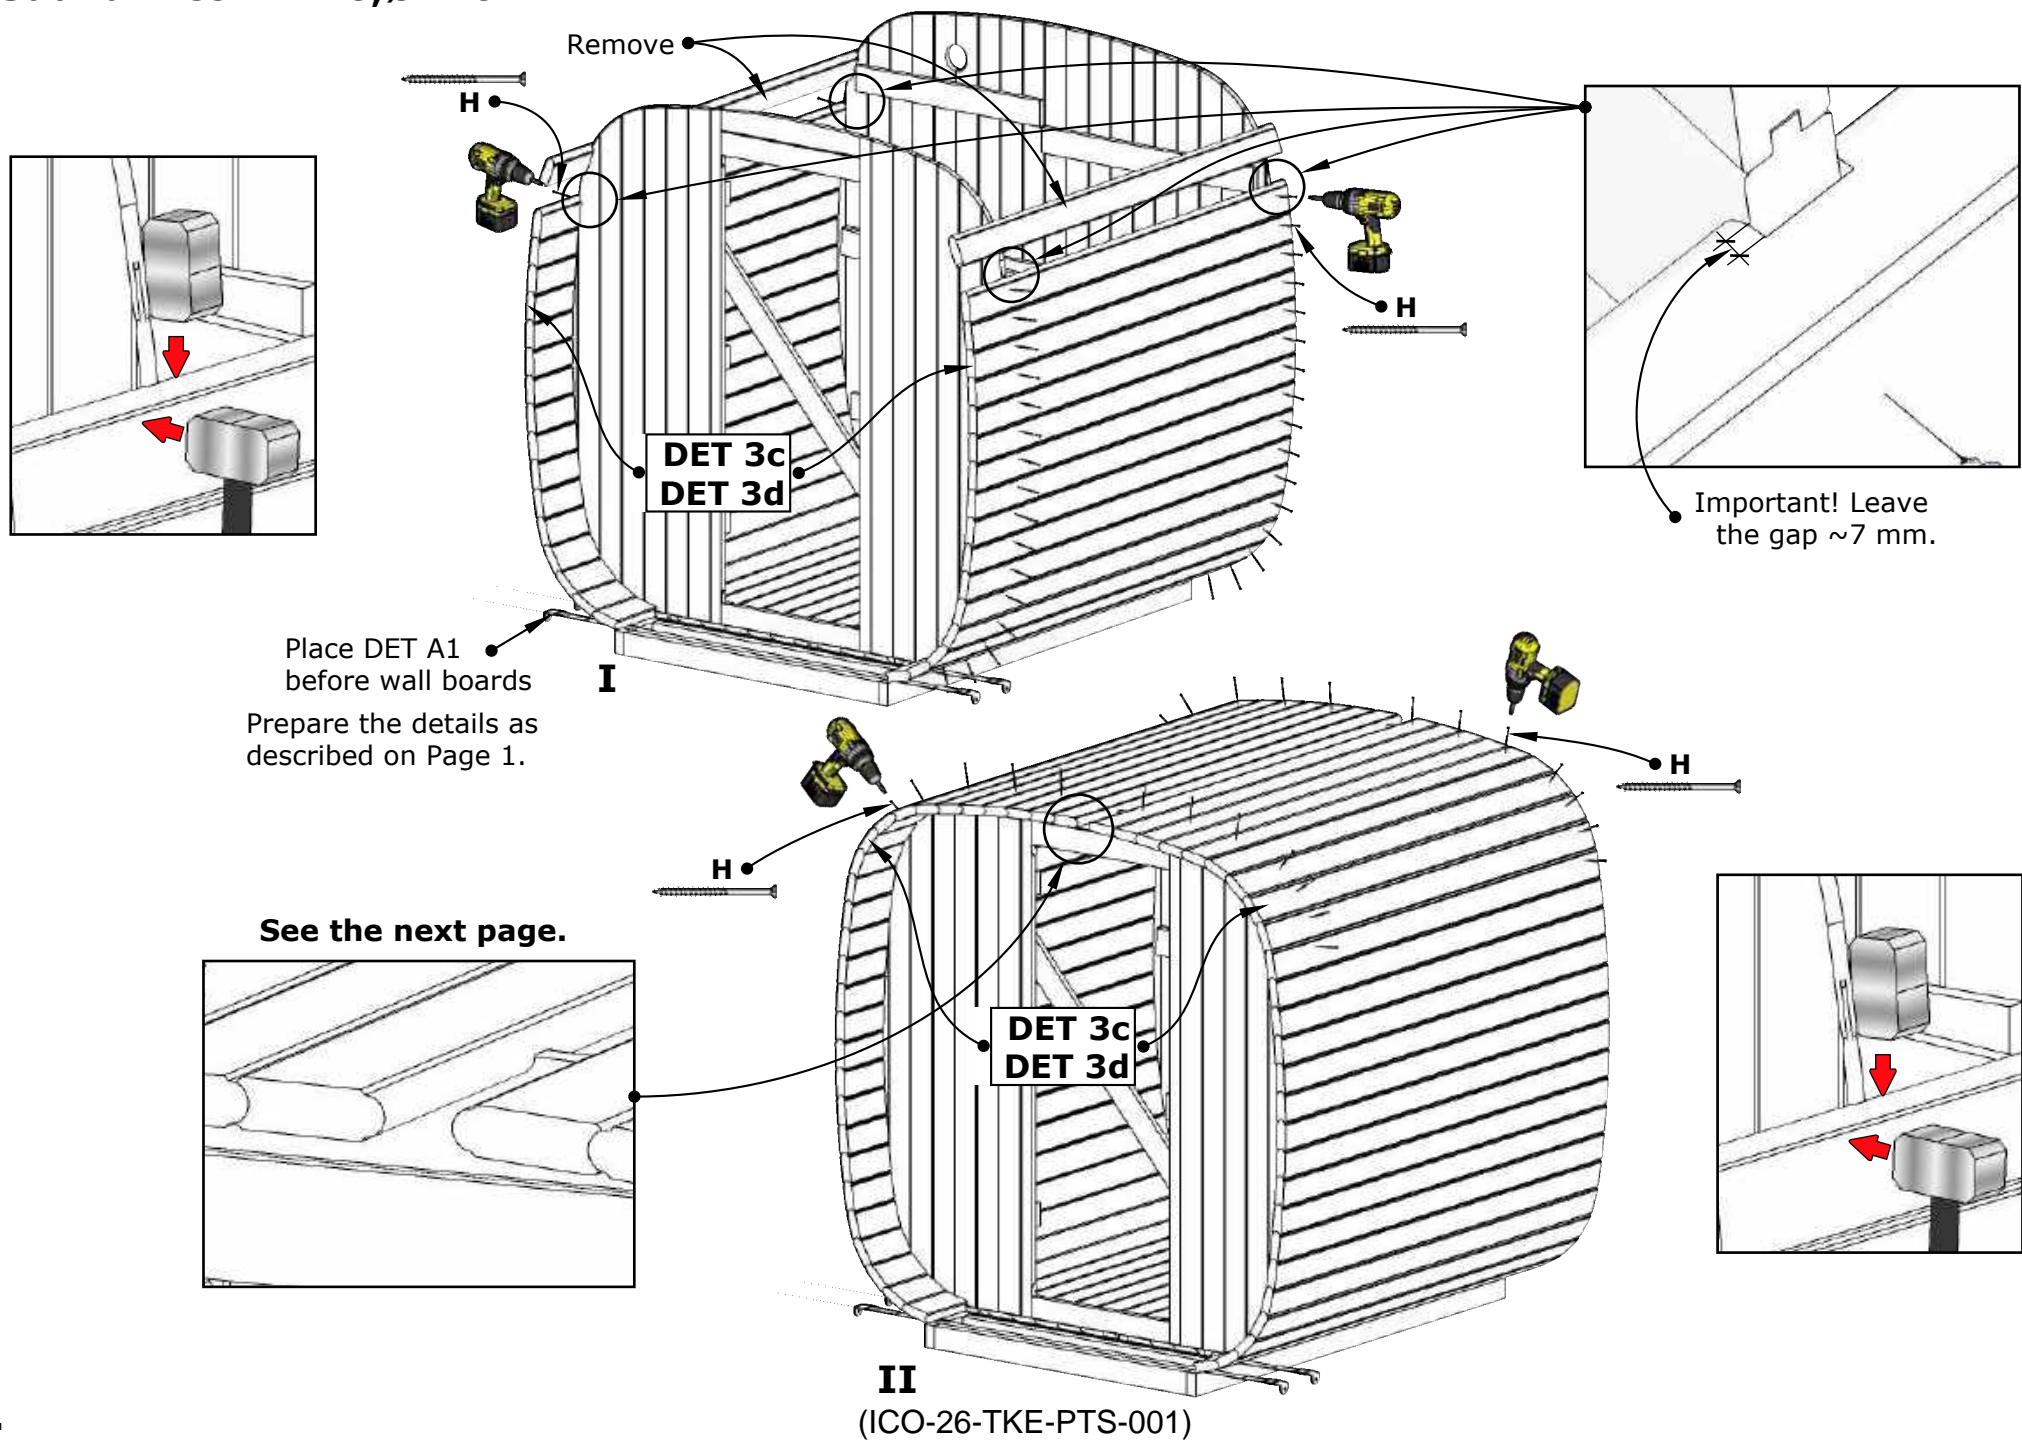

Sauna "Icon" 220,Ø226

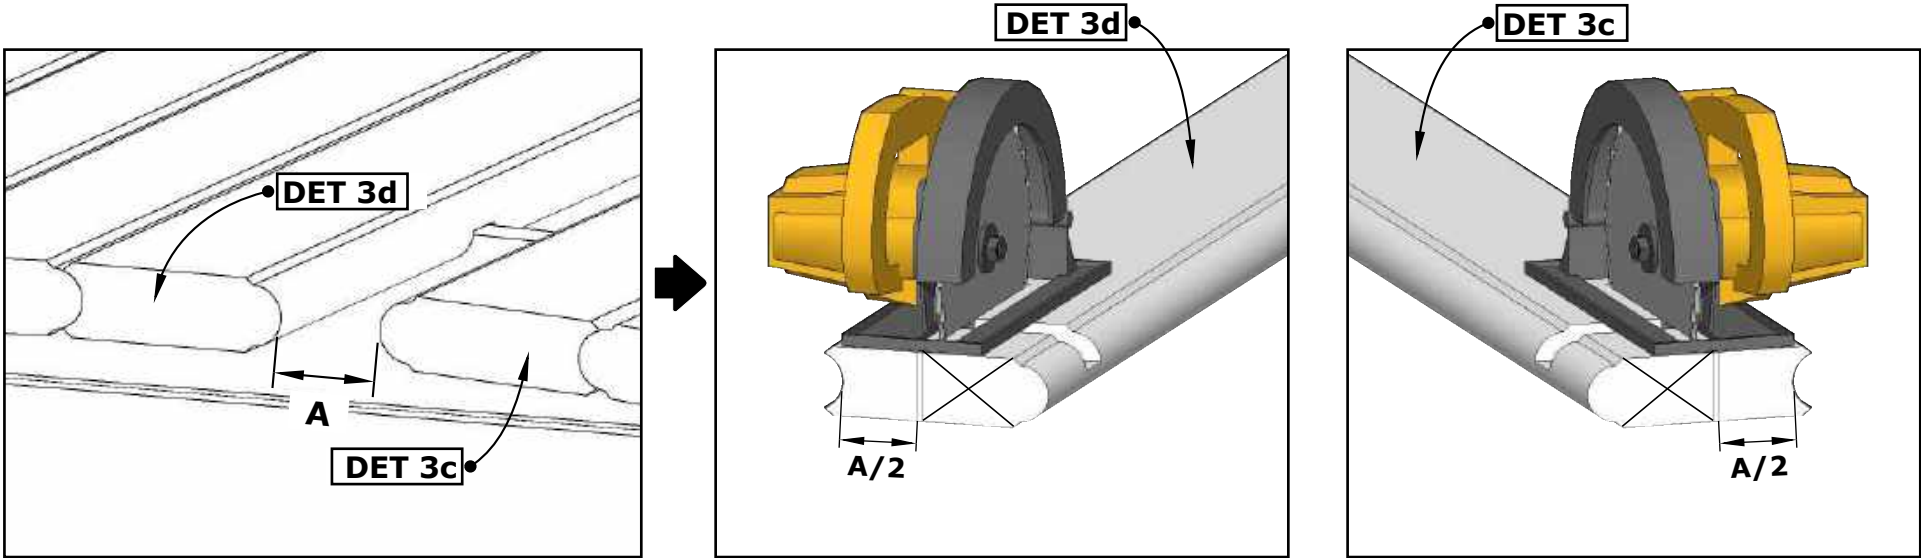

I






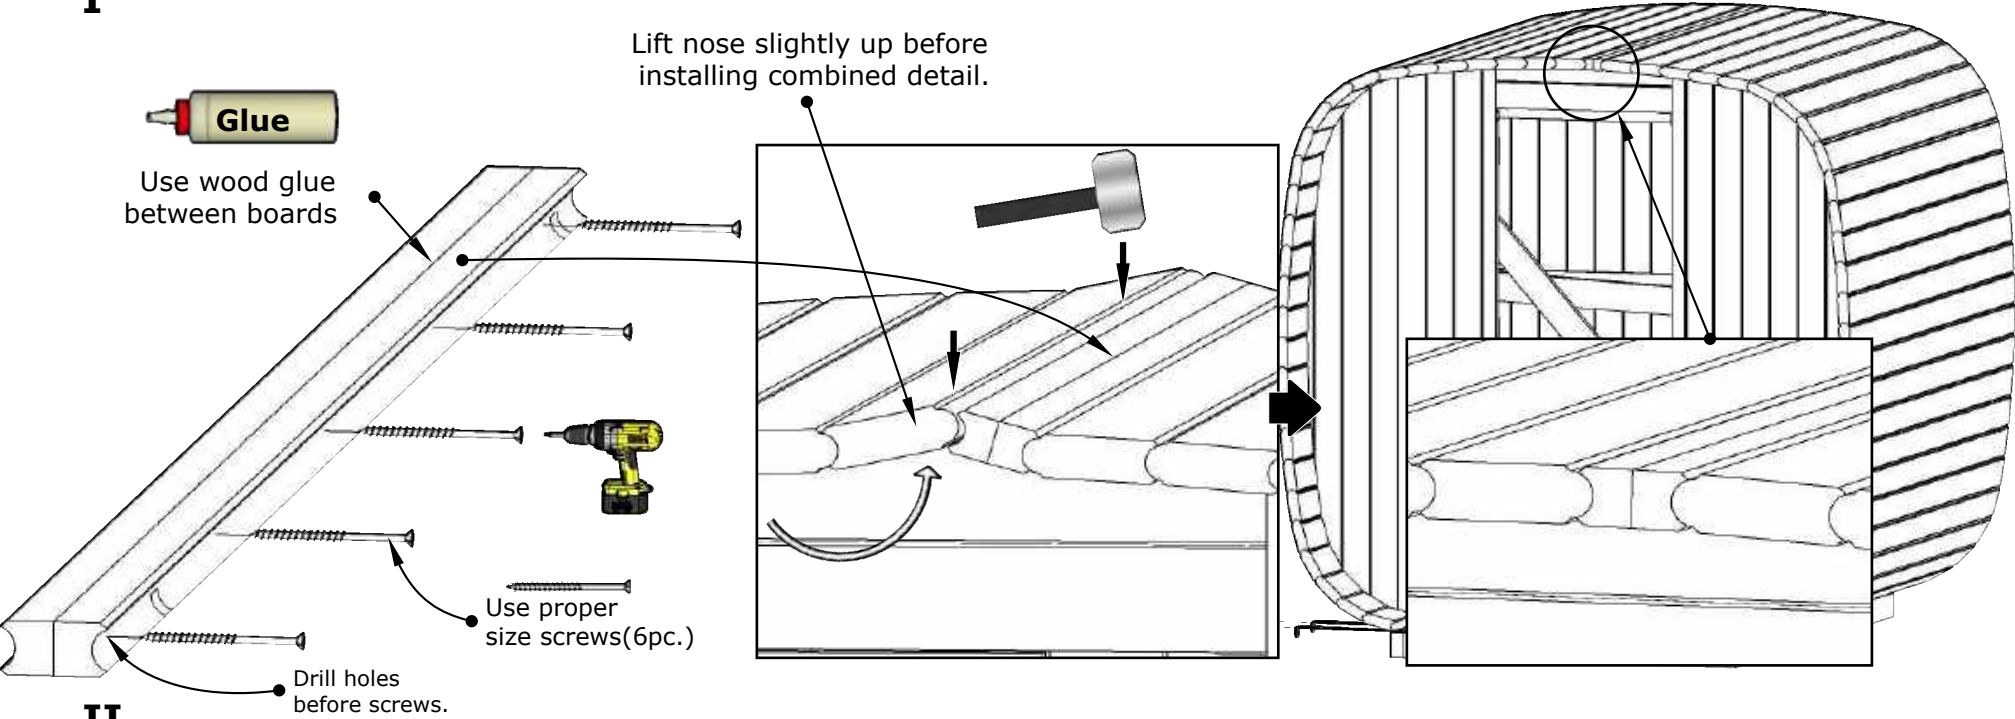


II




5.

(ICO-26-TKE-PTS-001)


Sauna "Icon" 220,Ø226

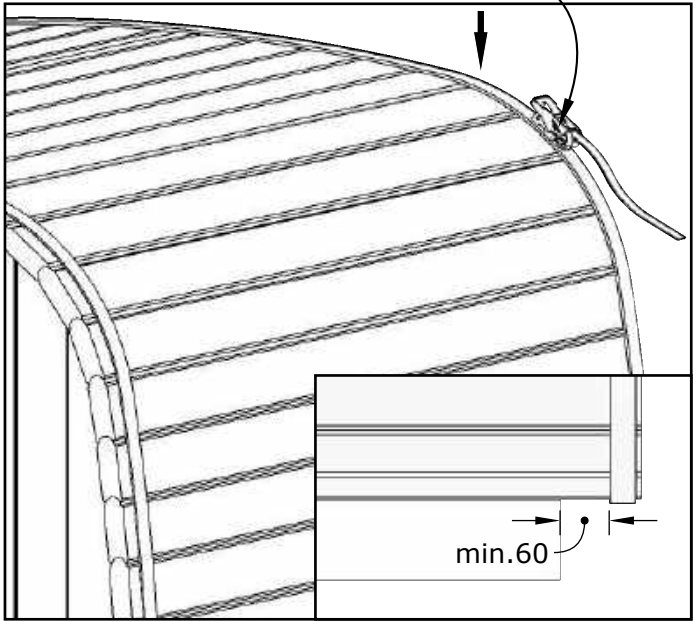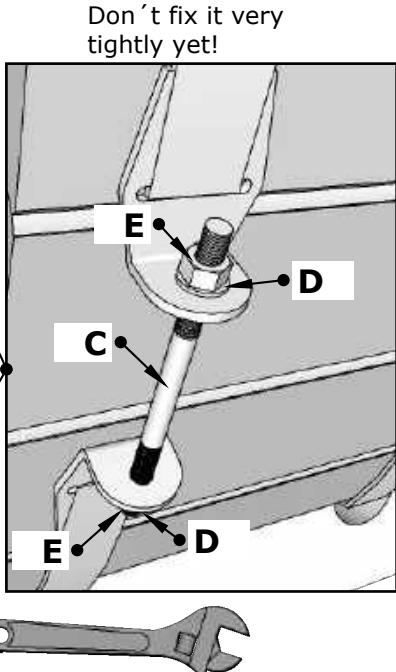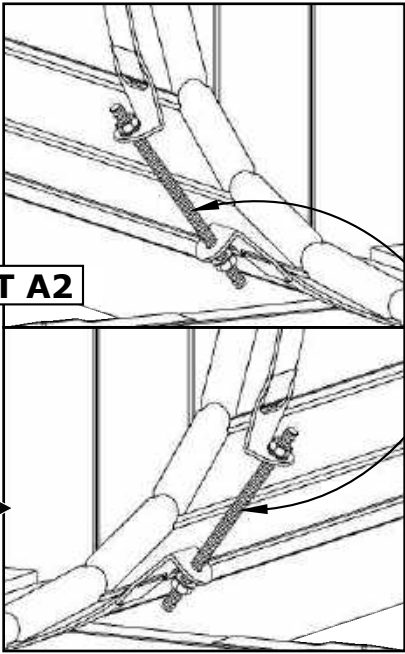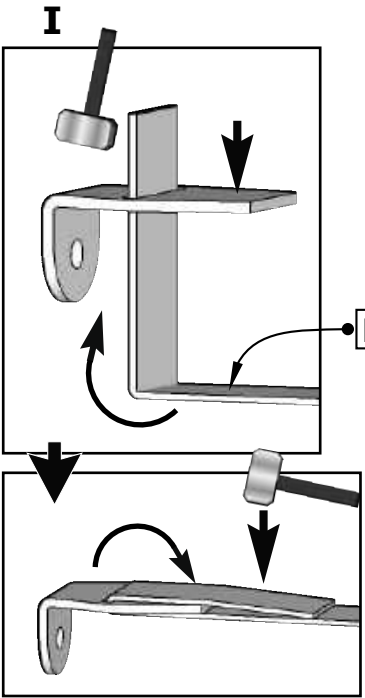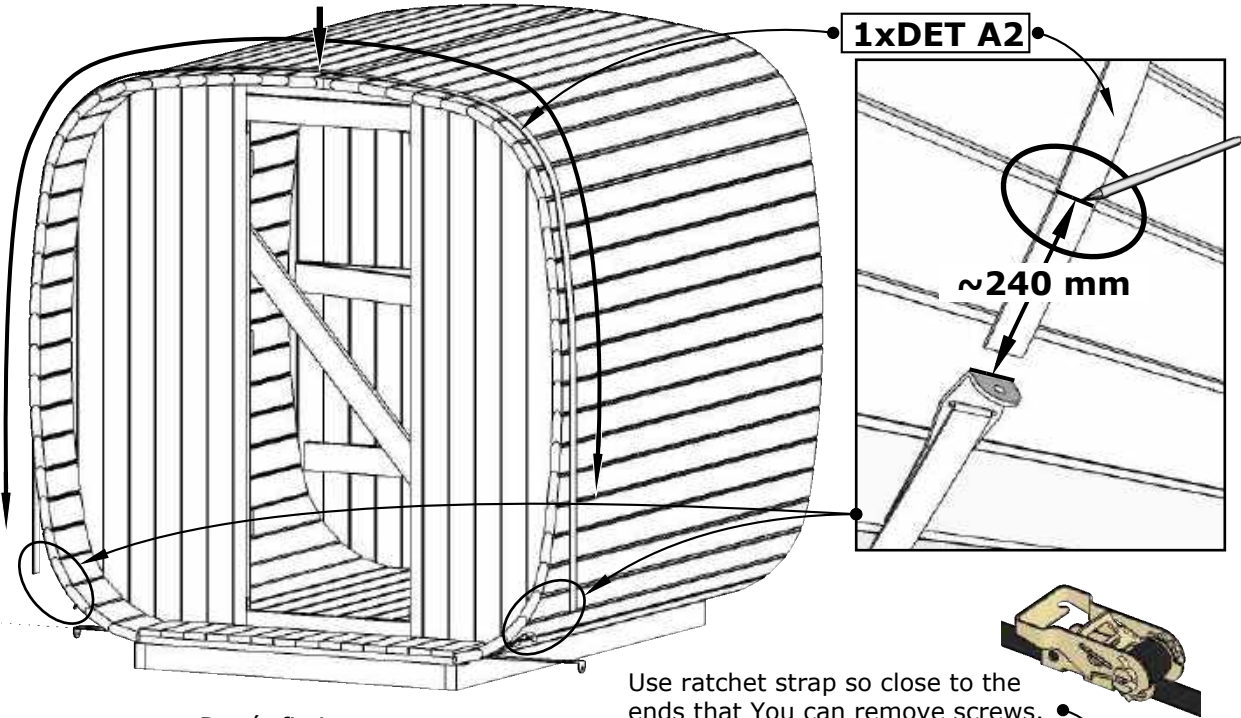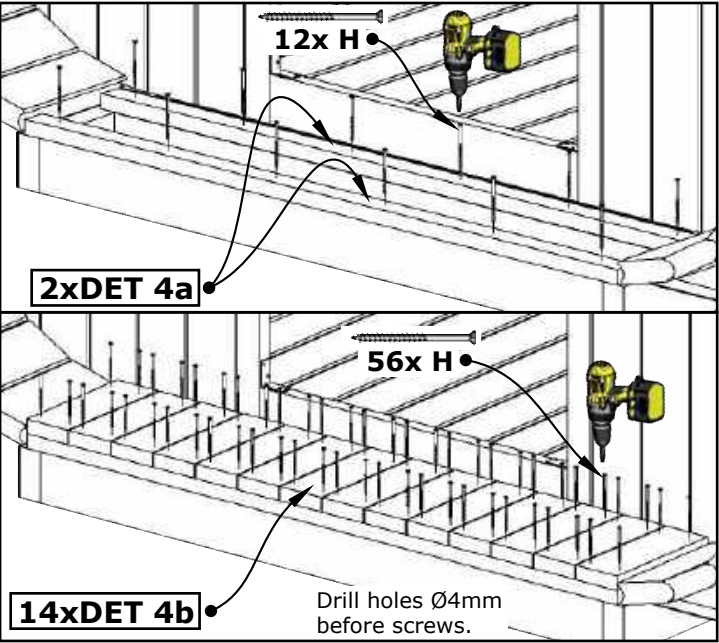

Sauna "Icon" 220,Ø226

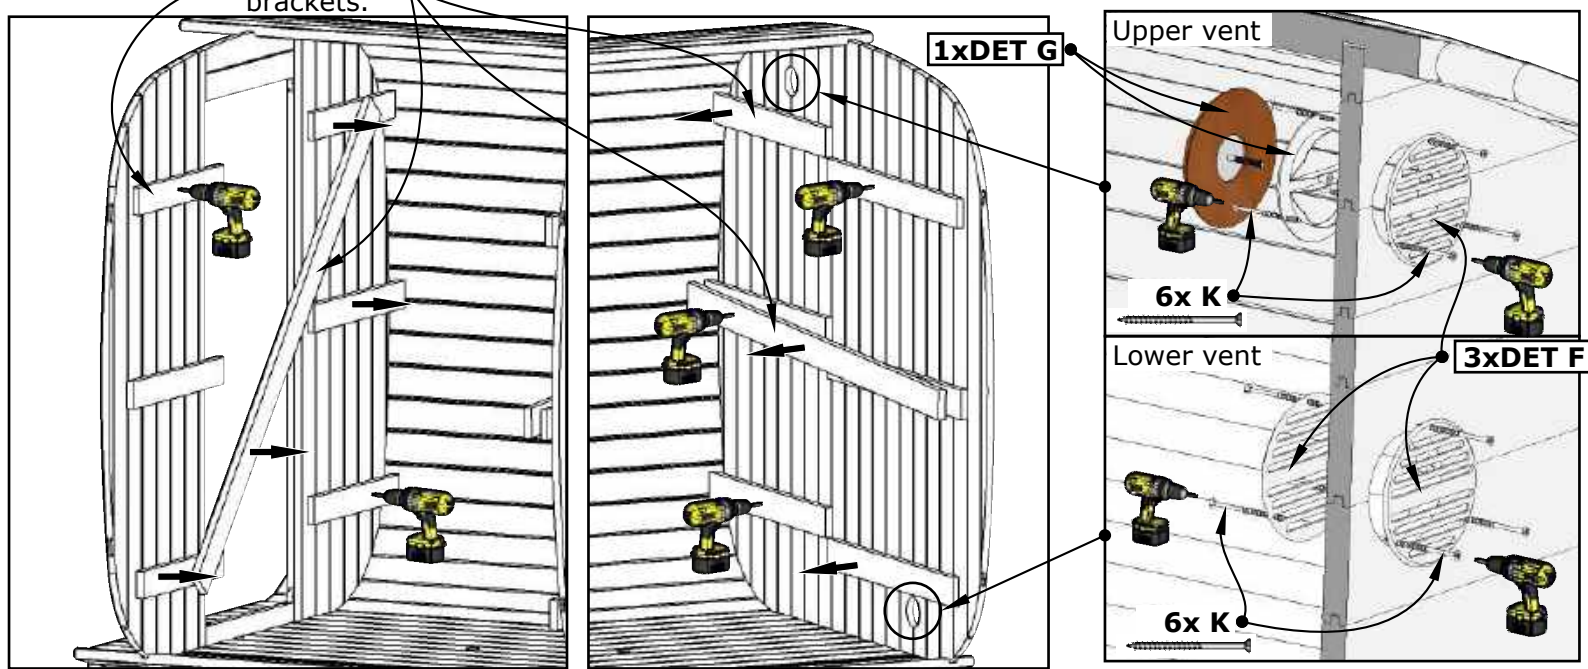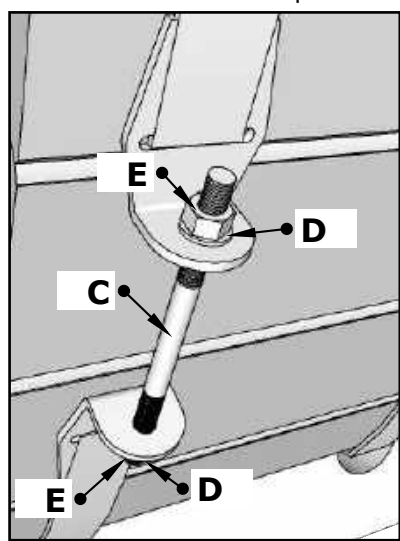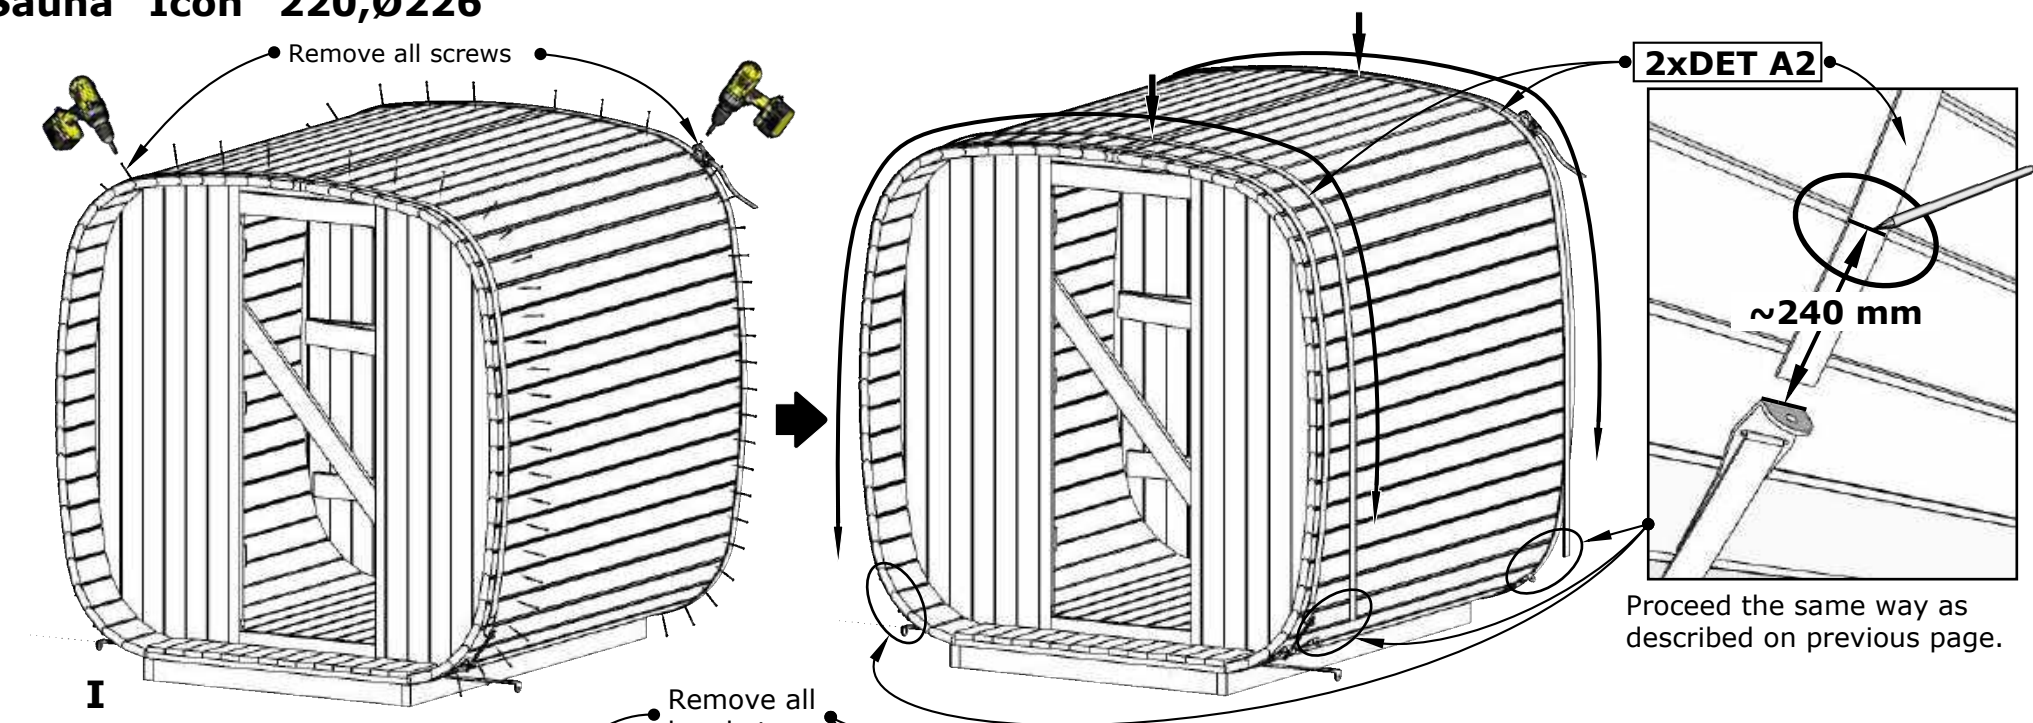


Sauna "Icon" 220,Ø226

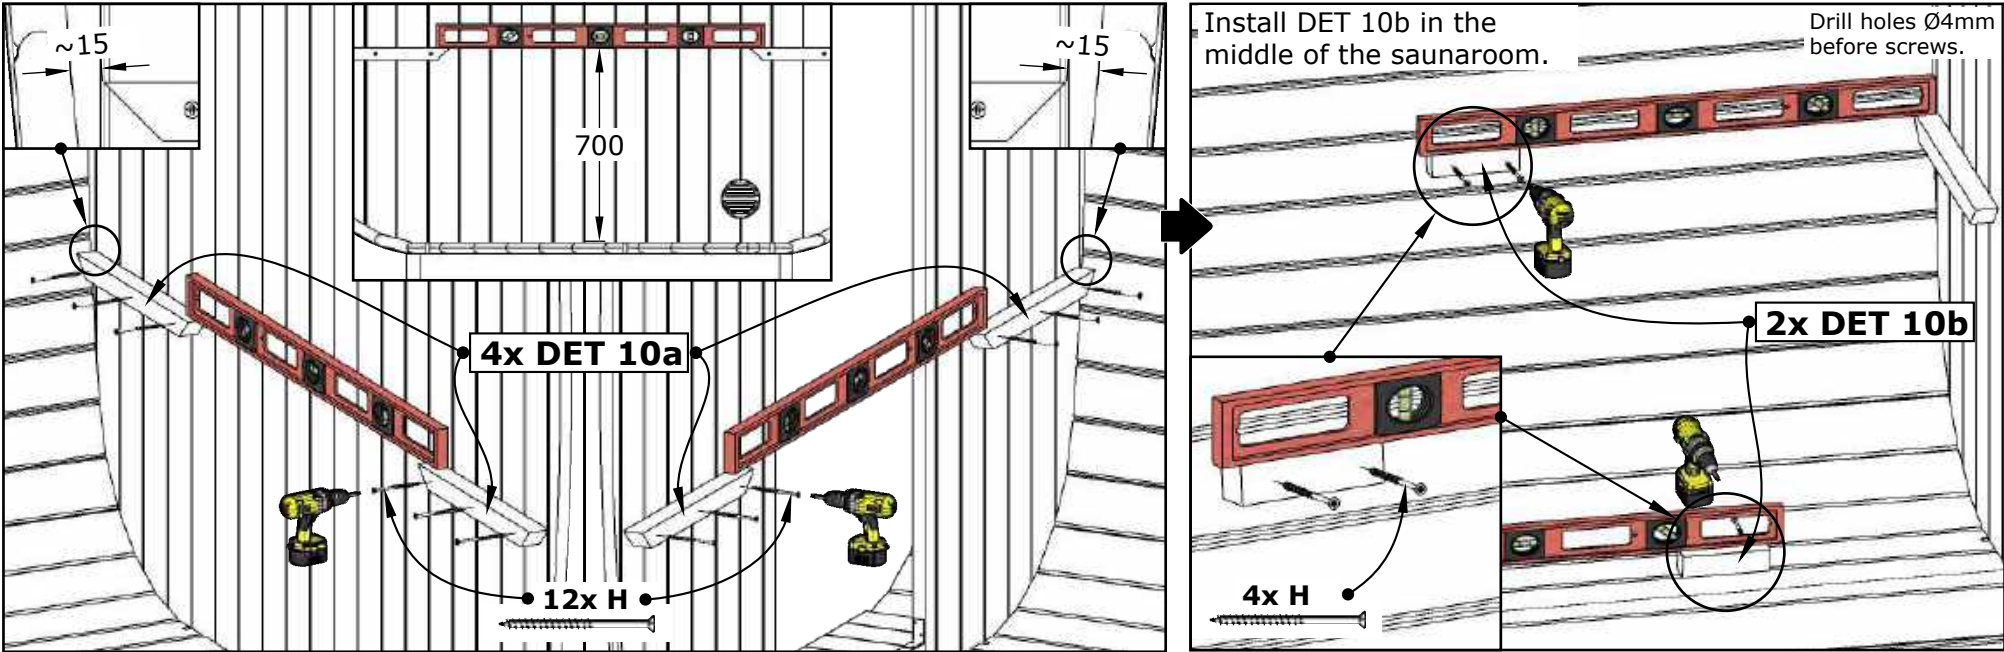


I

NB! If Your sauna equipped with front glass-wall, the sauna benches installation manual included in front glass-wall installation manual.

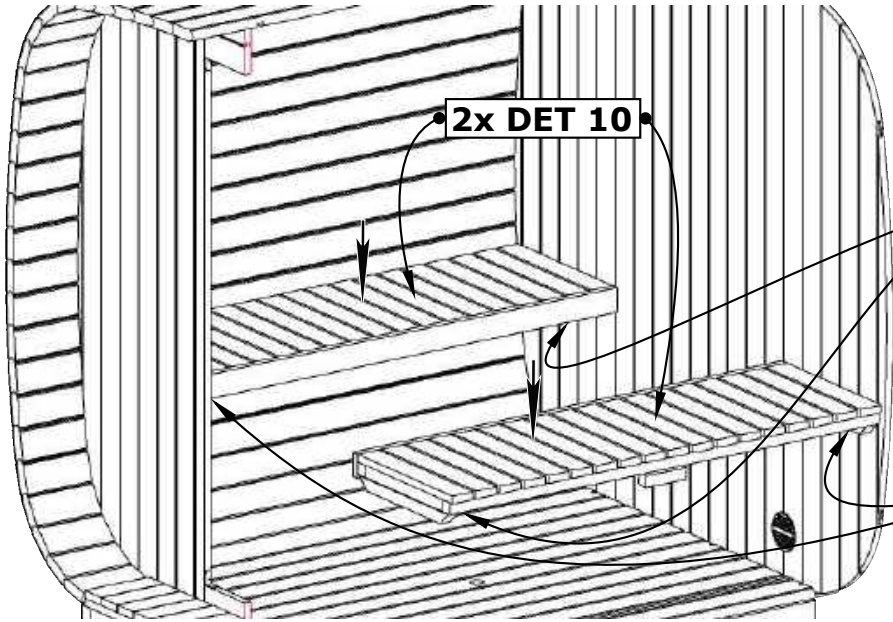


II


Sauna "Icon" 220,Ø226

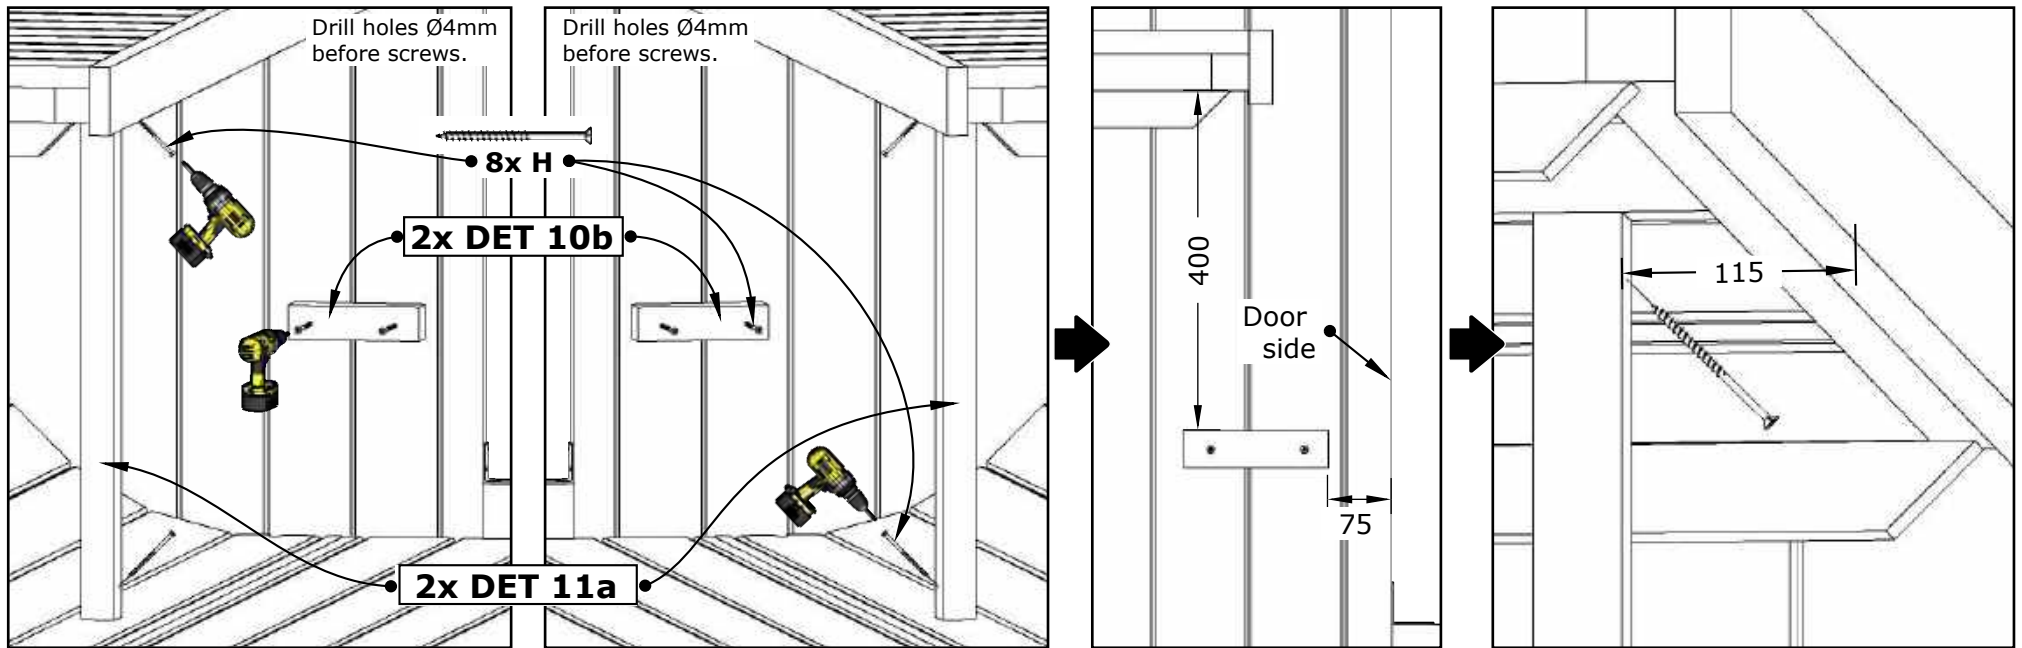



I

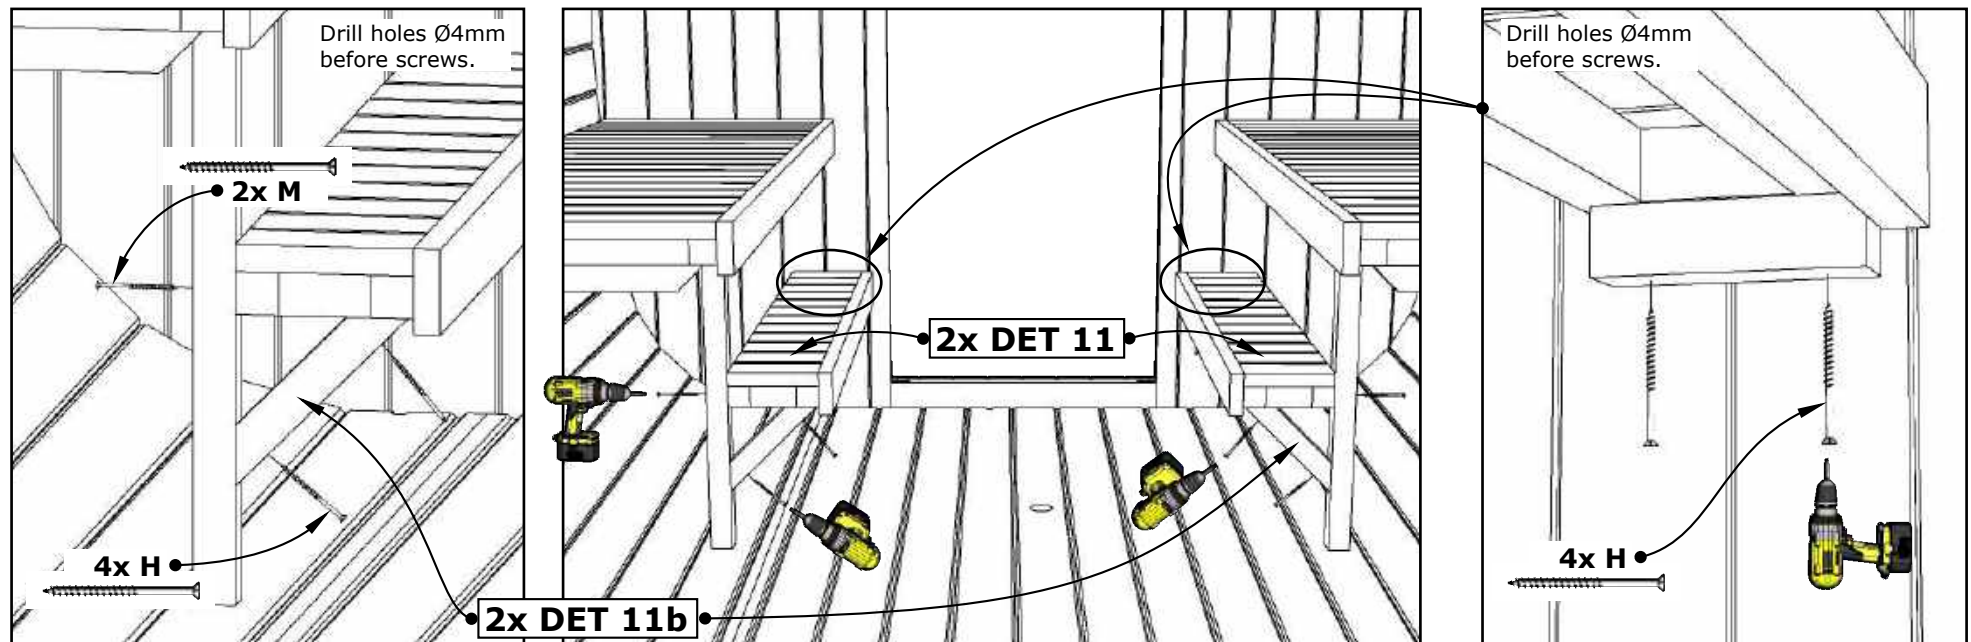


Sauna "Icon" 220,Ø226

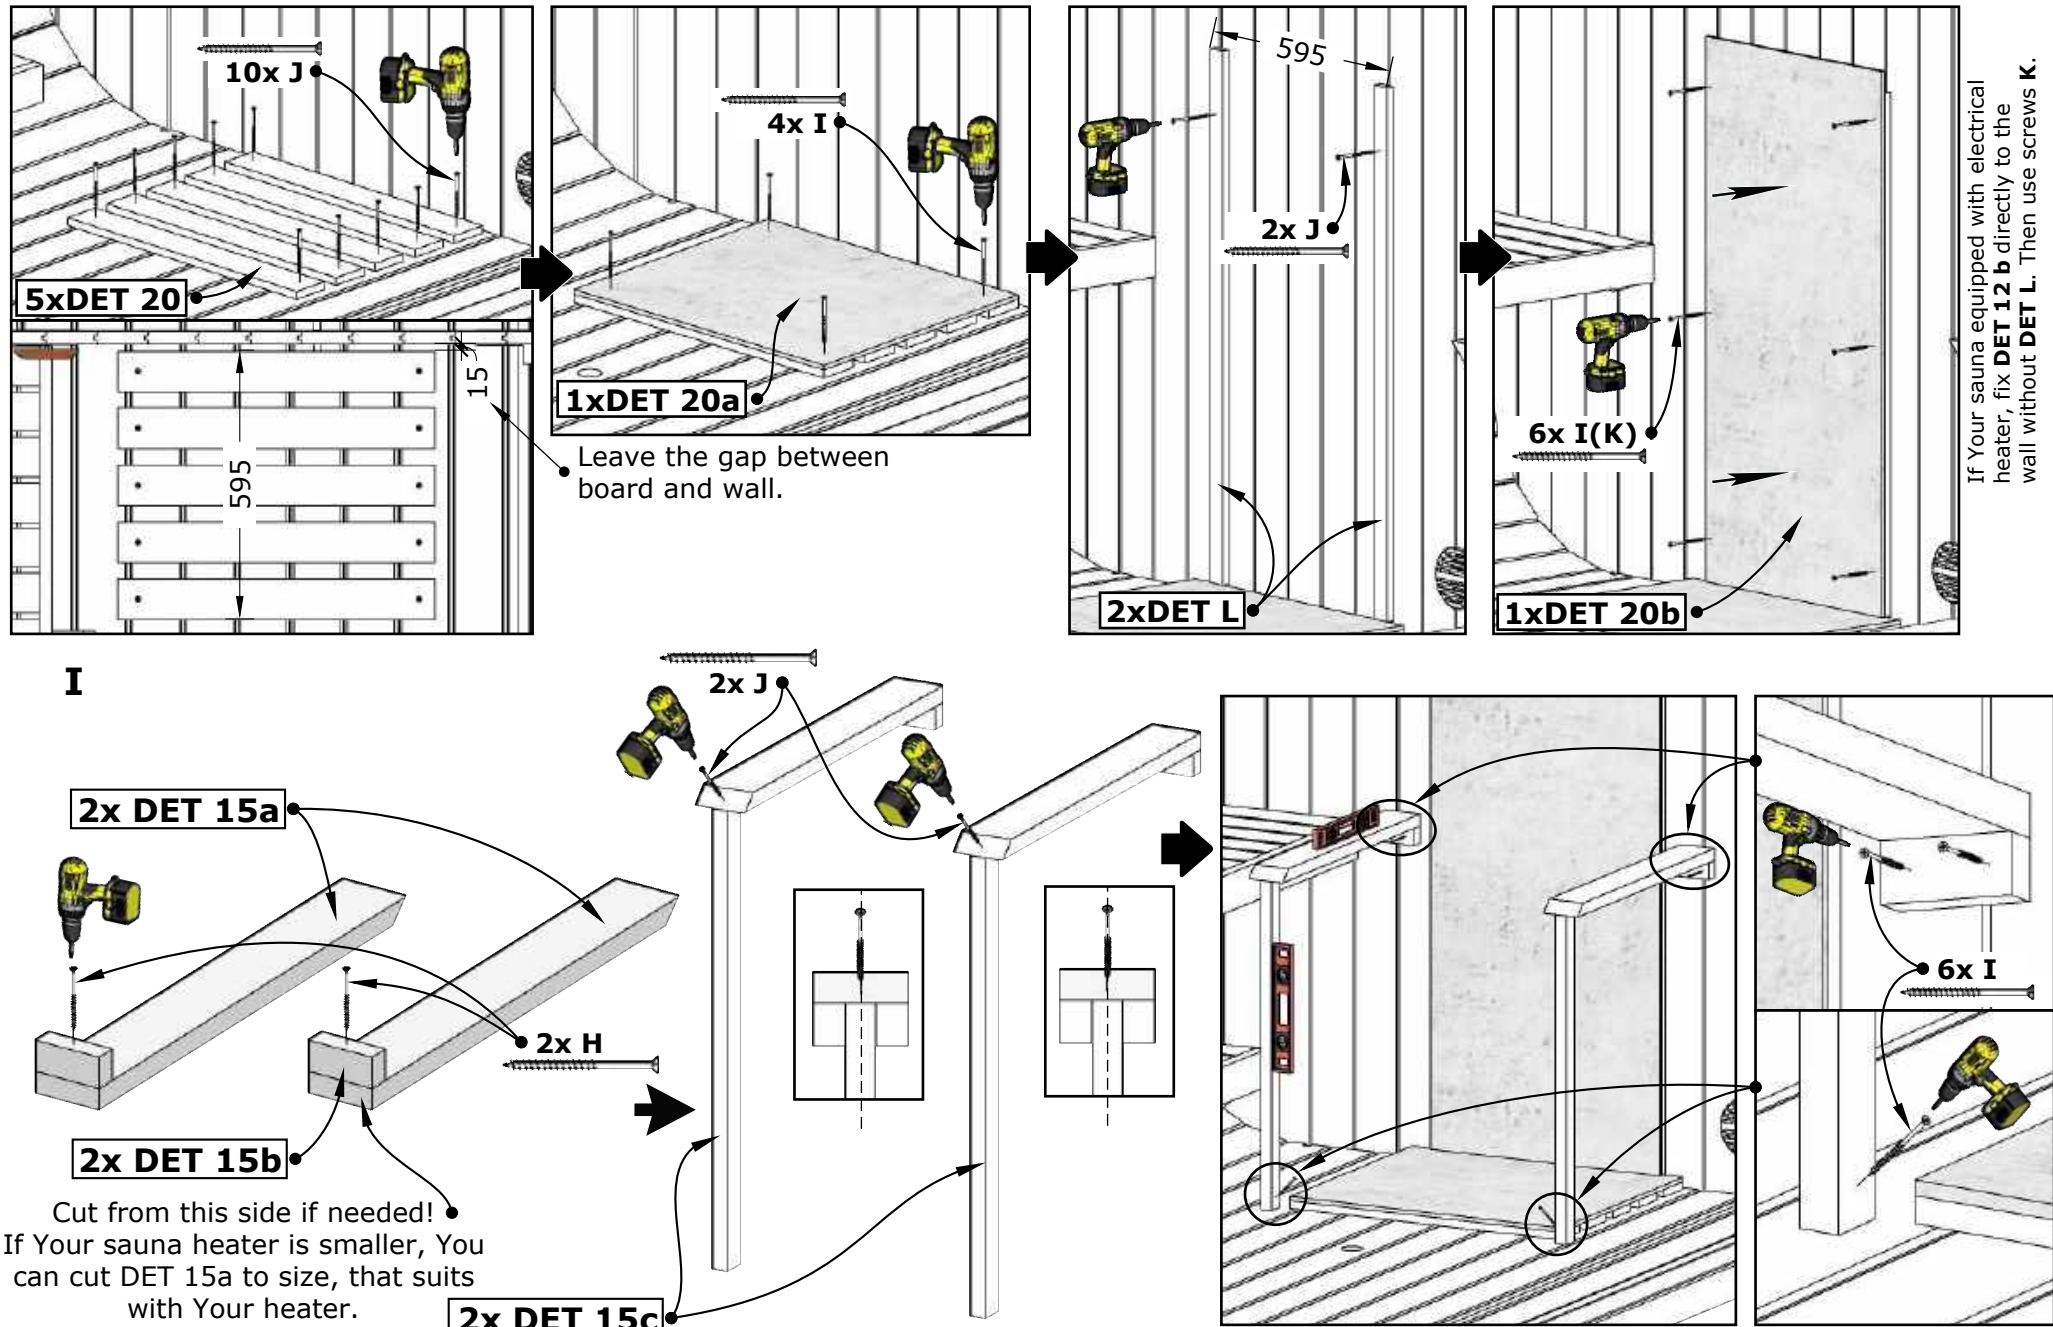

Sauna "Icon" 220,Ø226

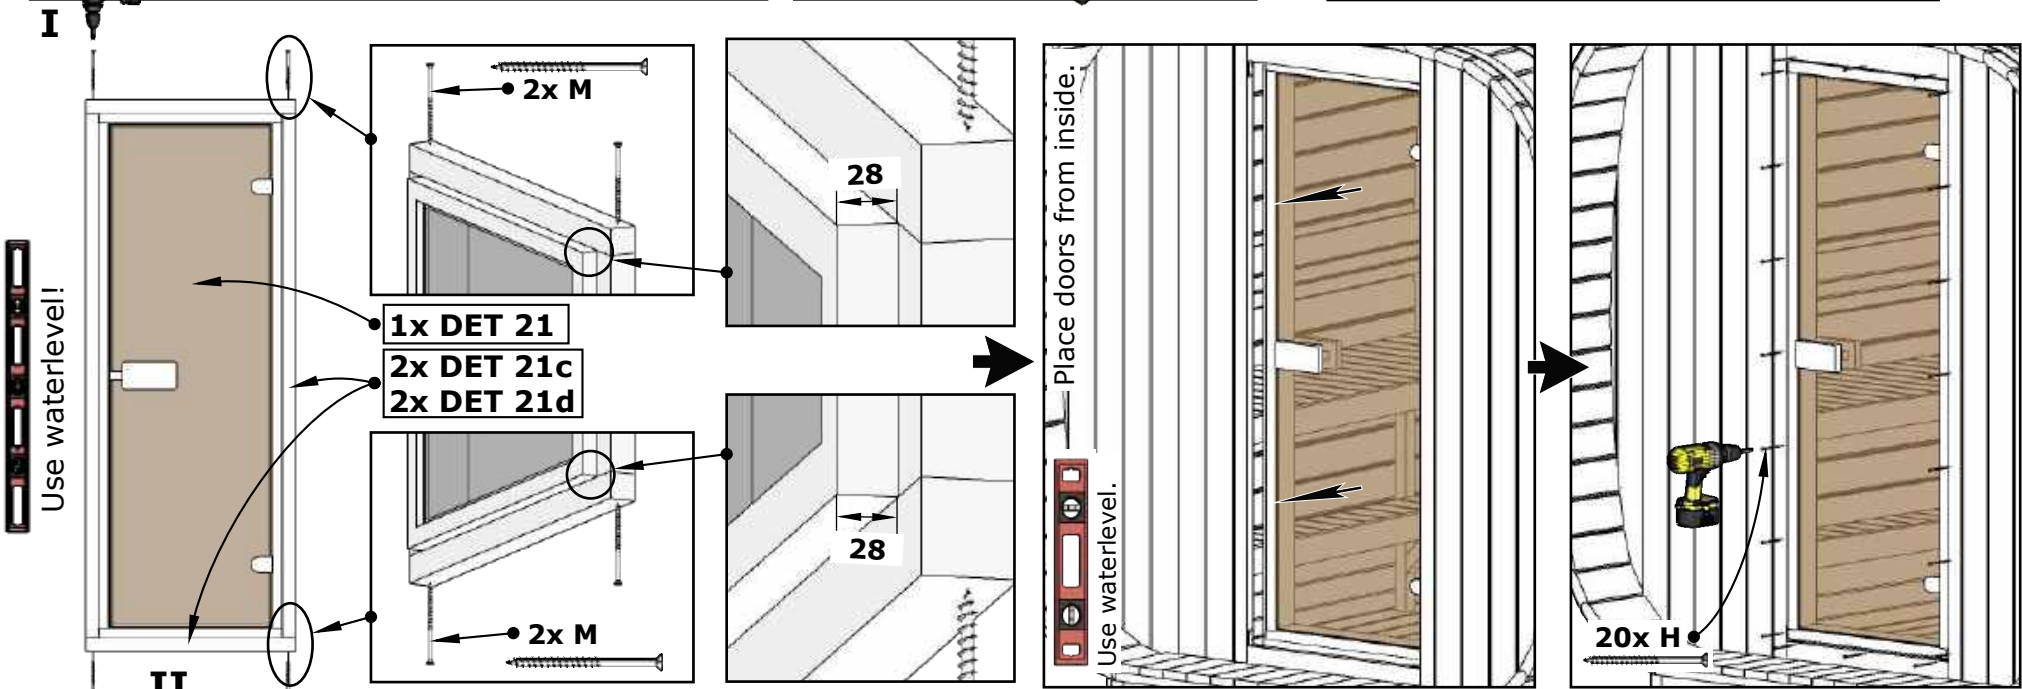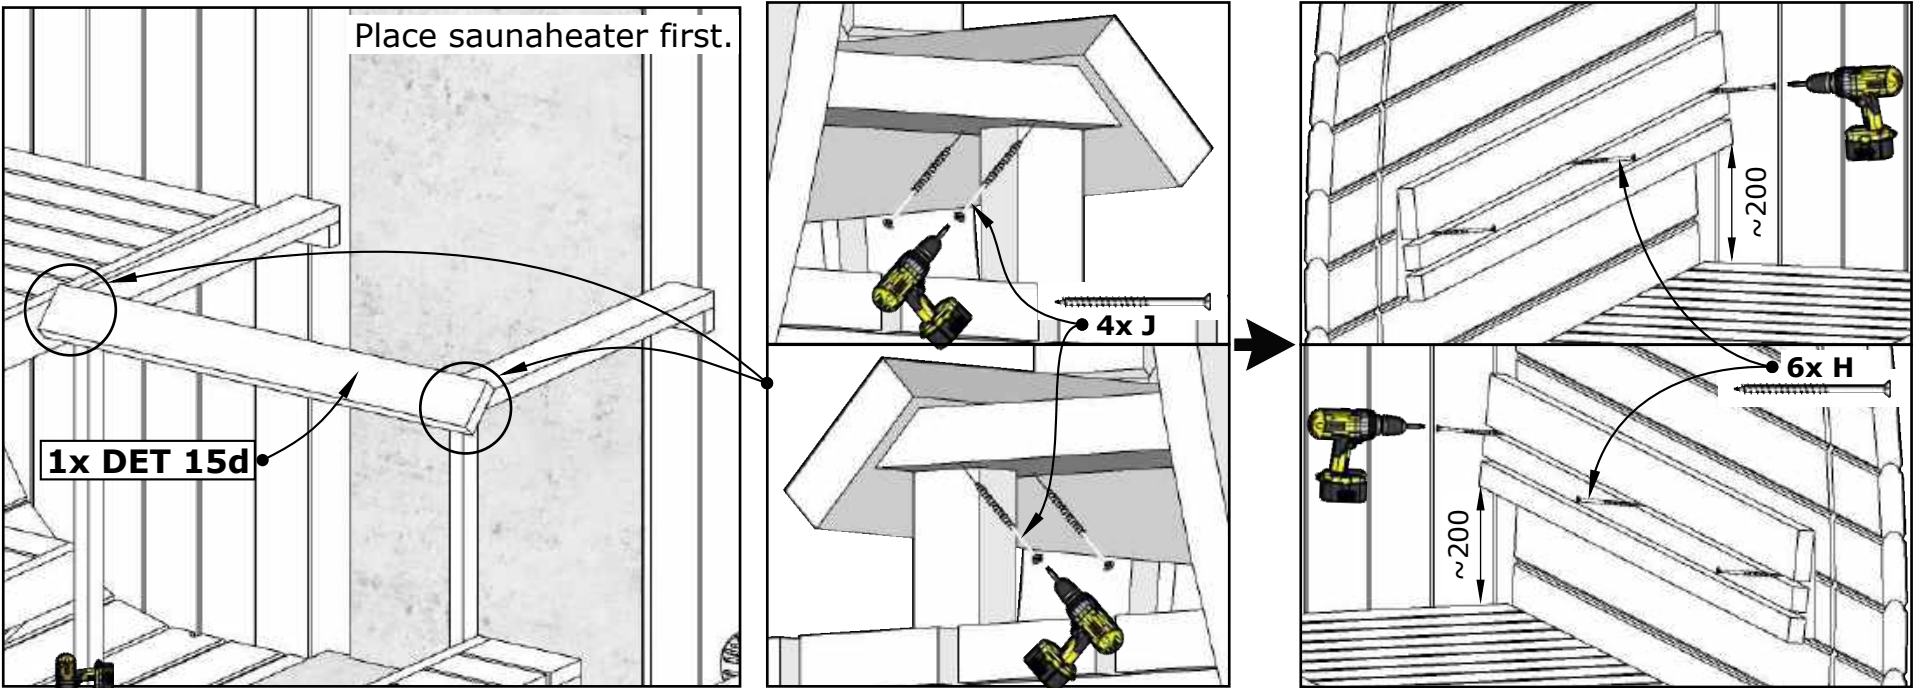

Sauna "Icon" 220,Ø226

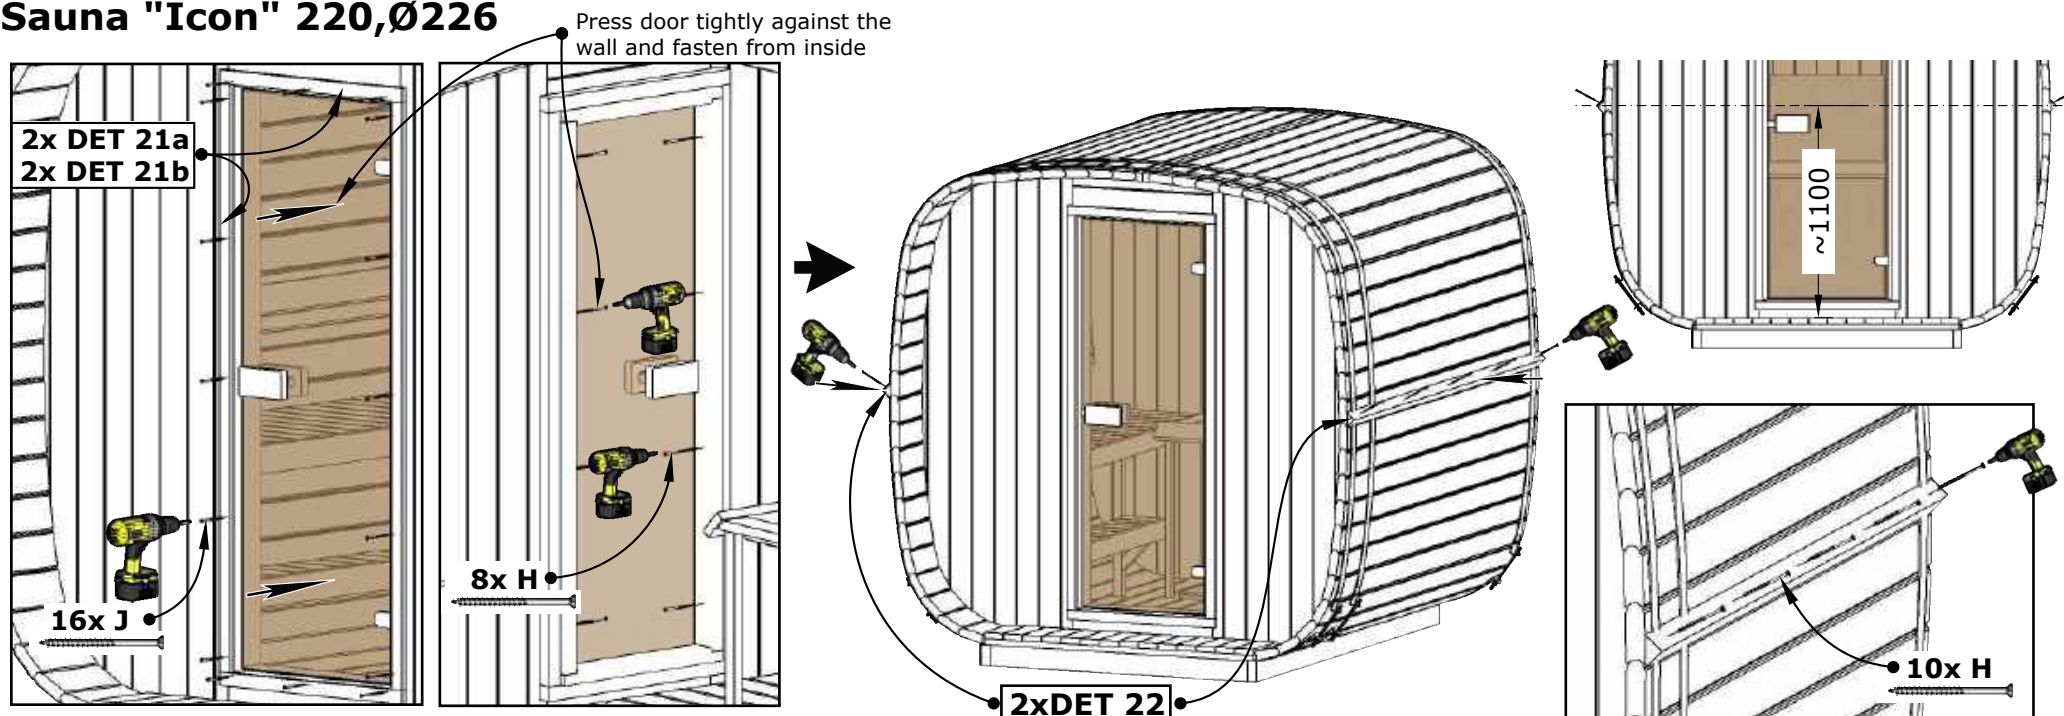


I

NB! Before roof shingles, install underlay felt. Check underlay felt installation manual on extra pages.



Check also roof shingles installation manual inside package.





II

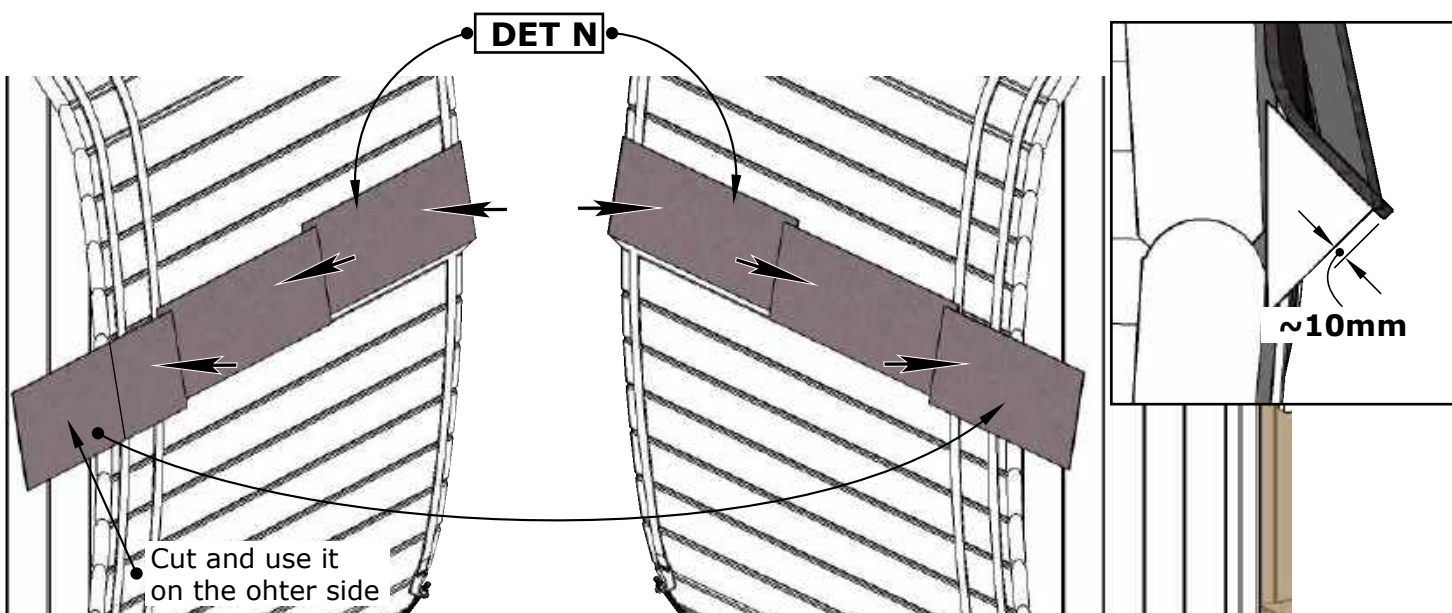

Sauna "Icon" 220,Ø226

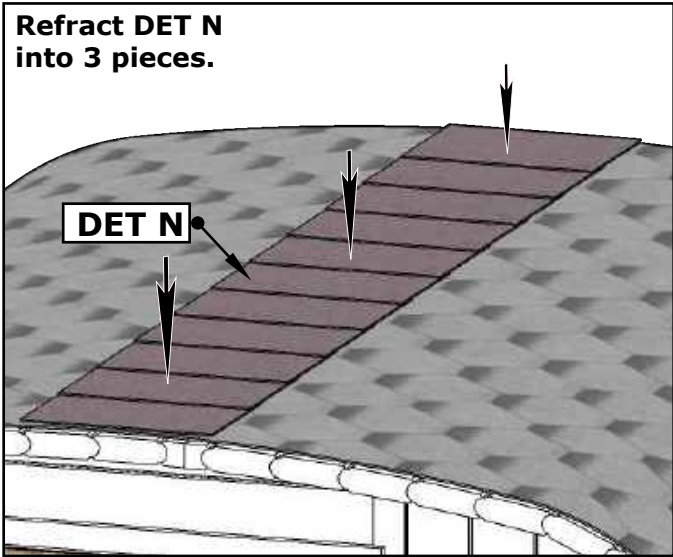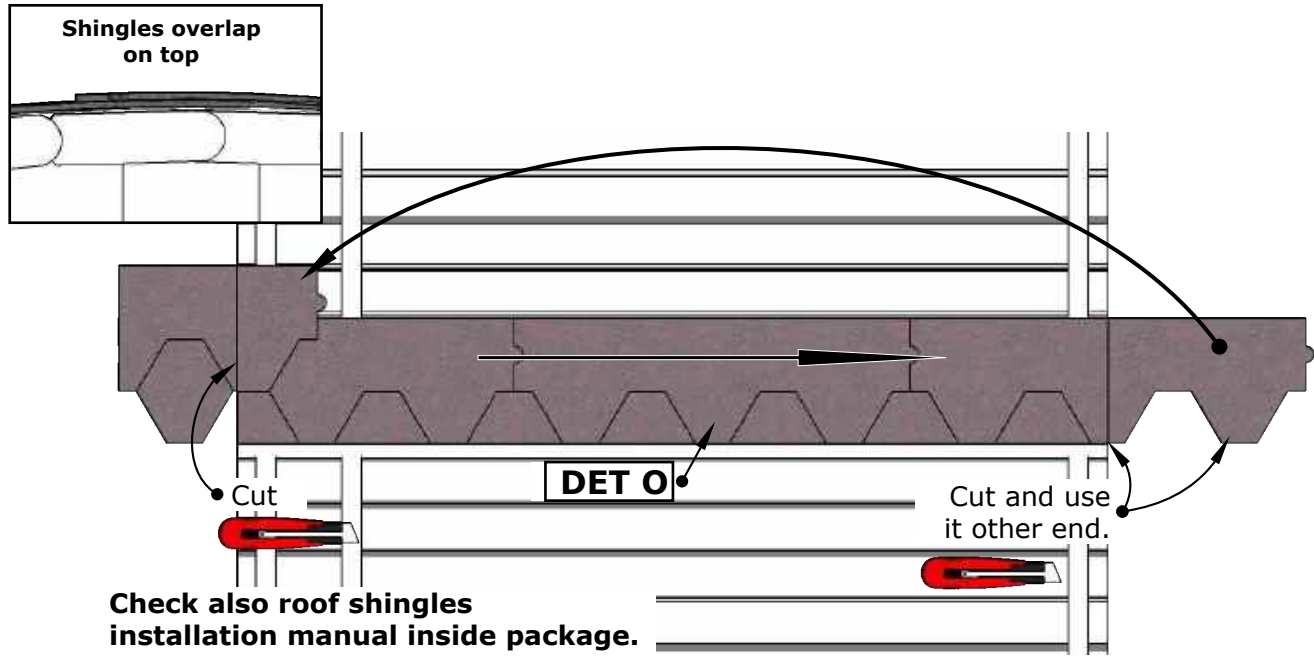

I

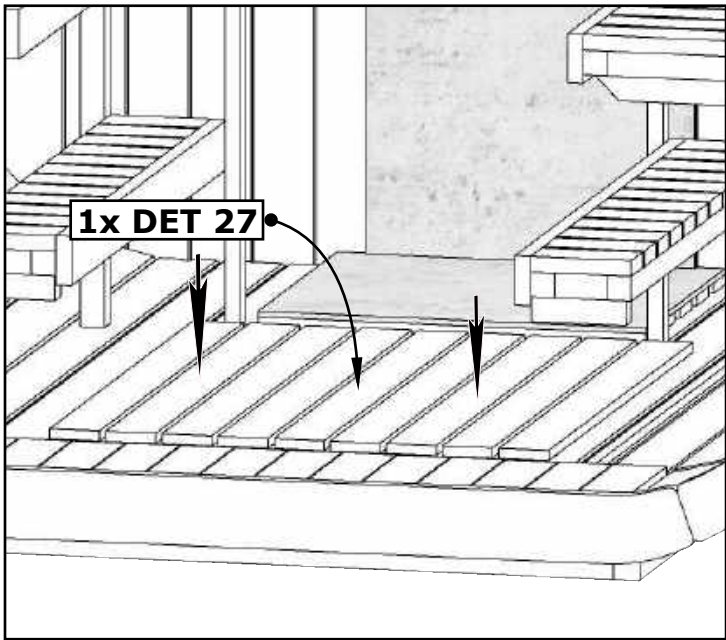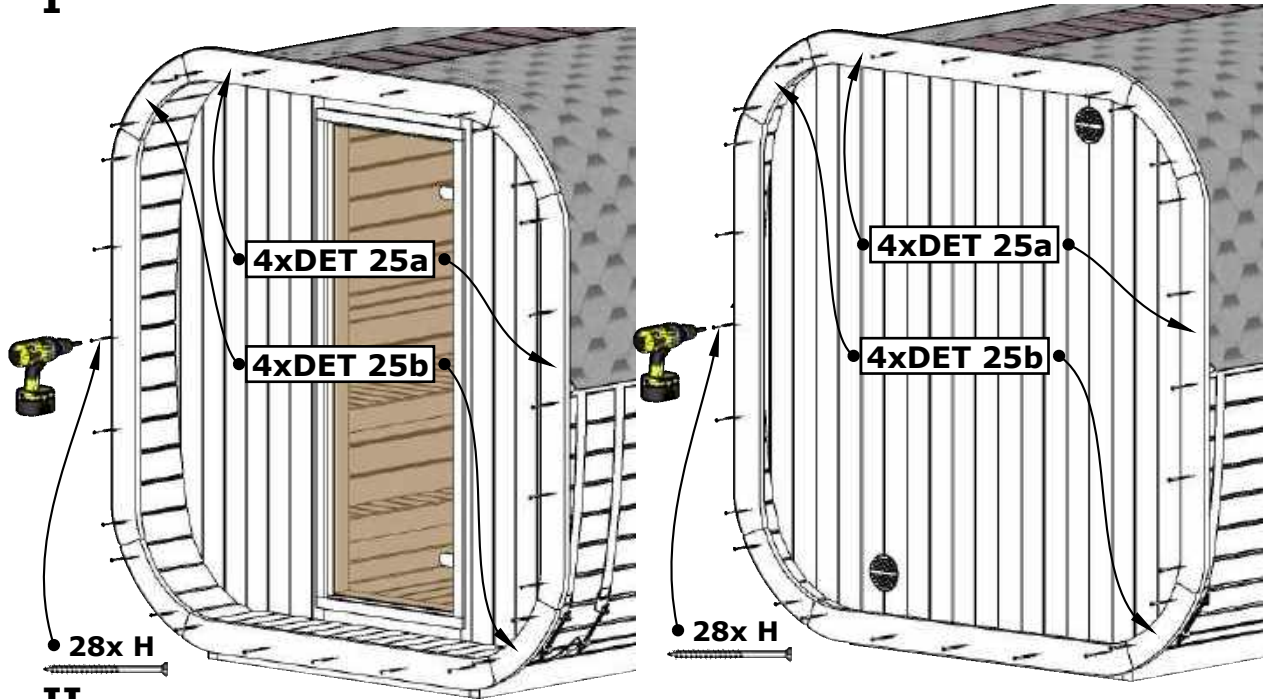

13. II

(ICO-26-TKE-PTS-001)

Underlay felt installation manual.

