
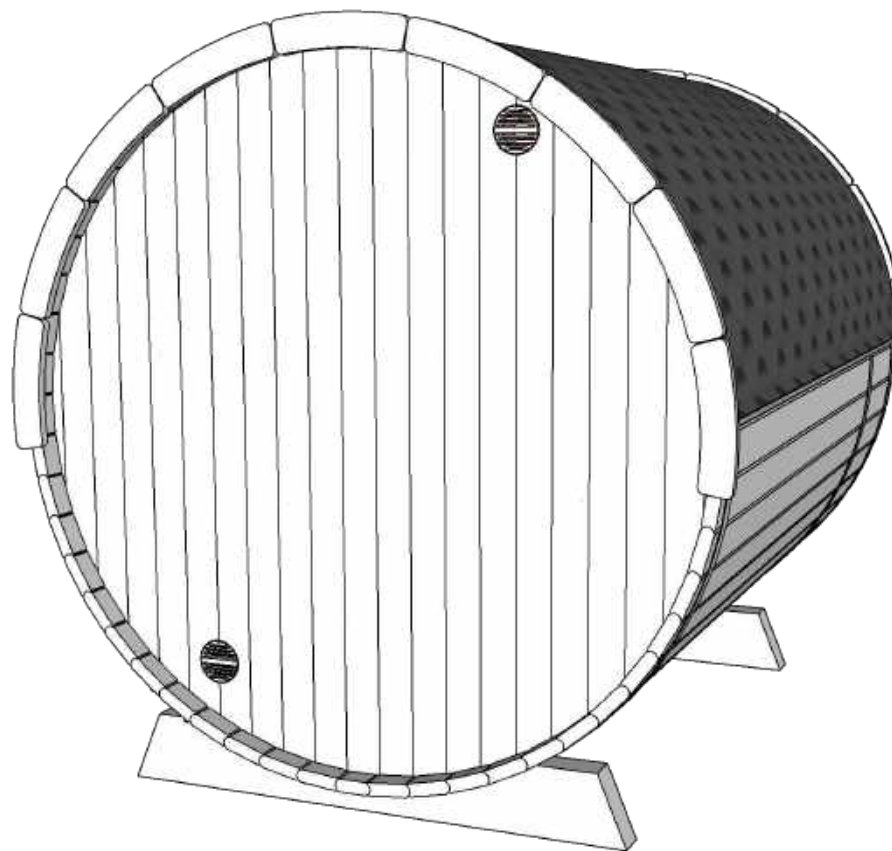


Sauna 280, Ø235


**Please read the whole manual
before start.**

All given measurements are in millimeters.




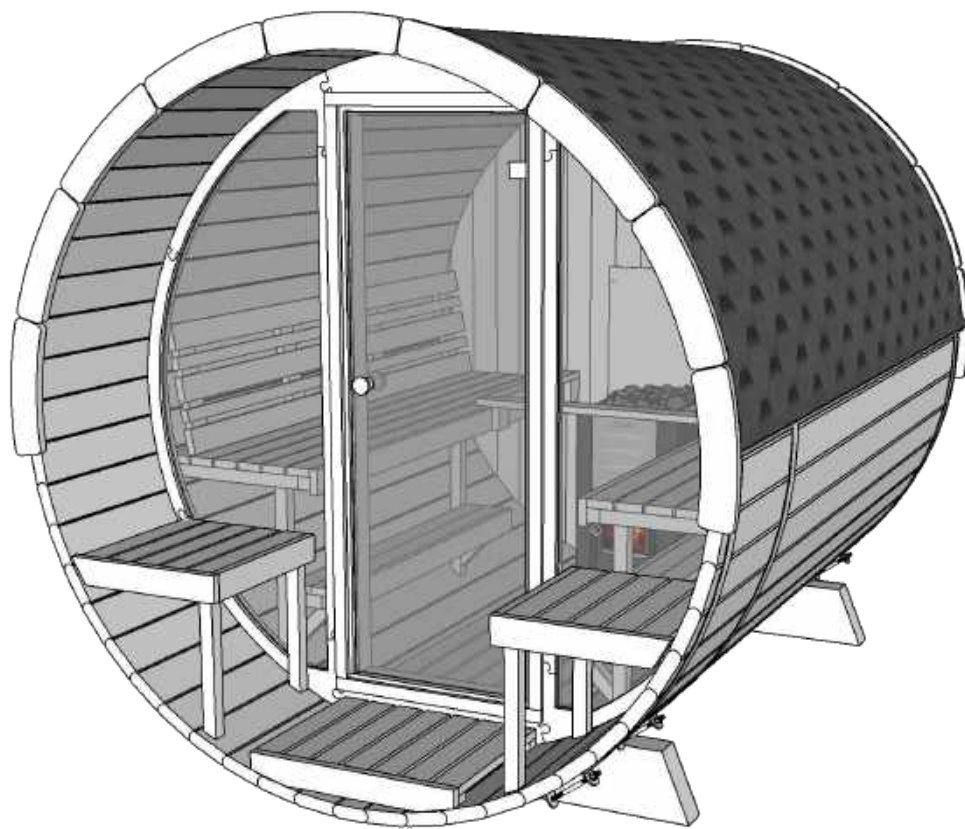


SAUNA 280, Ø 235

Details List Nr. 1

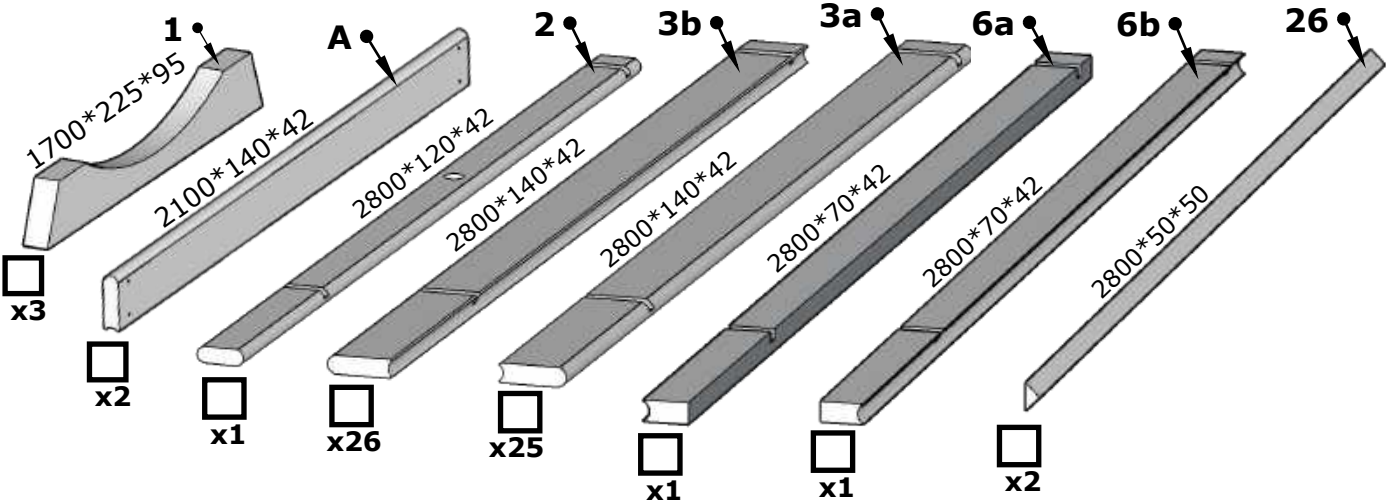


Glass walls installation manual
is on extra pages!

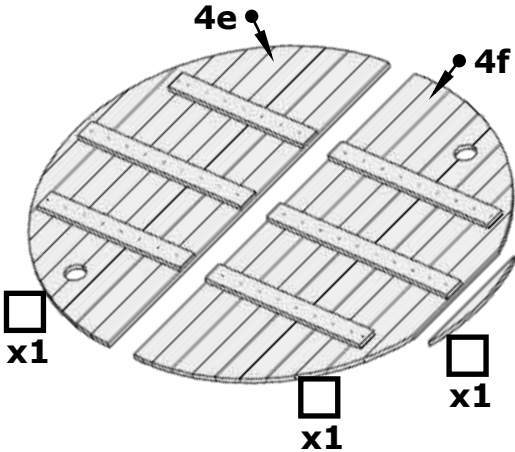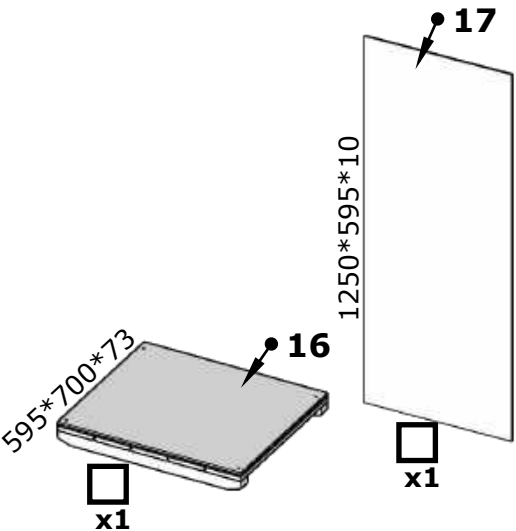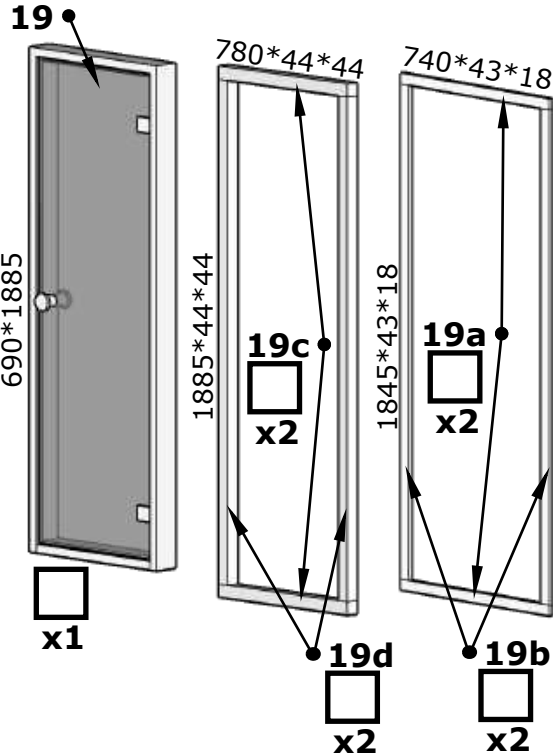
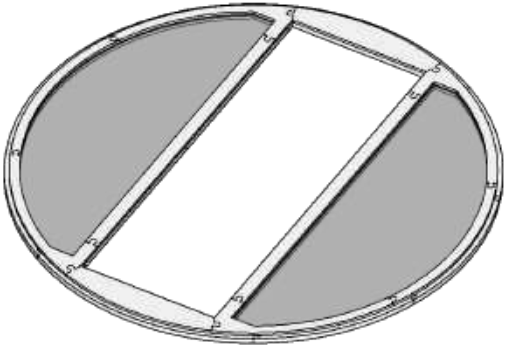


SAUNA 280, Ø 235


Details List Nr. 2

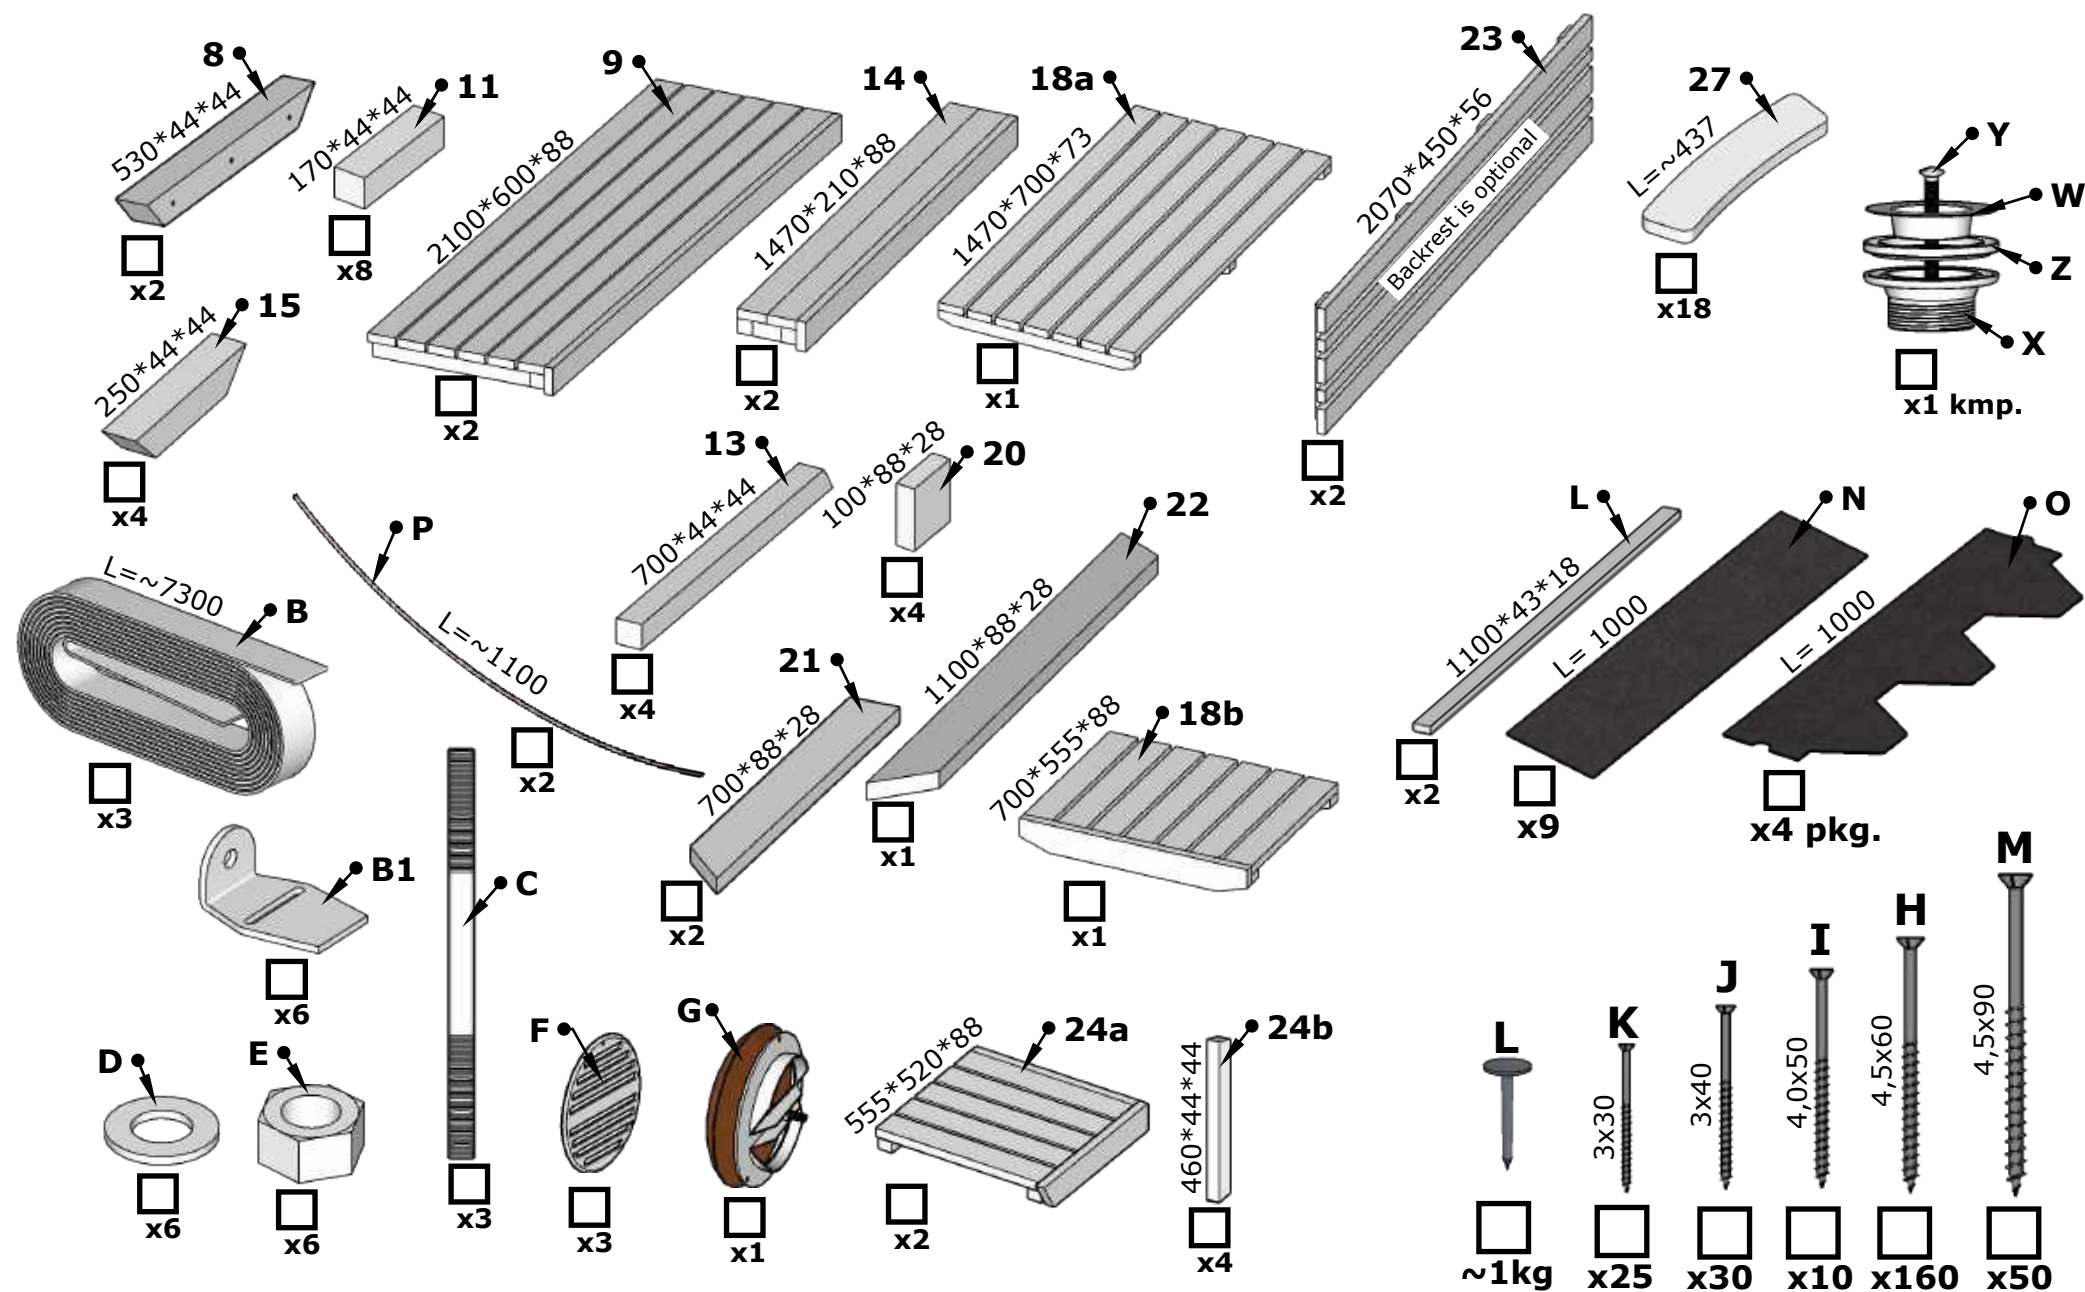




Sauna 280, Ø235

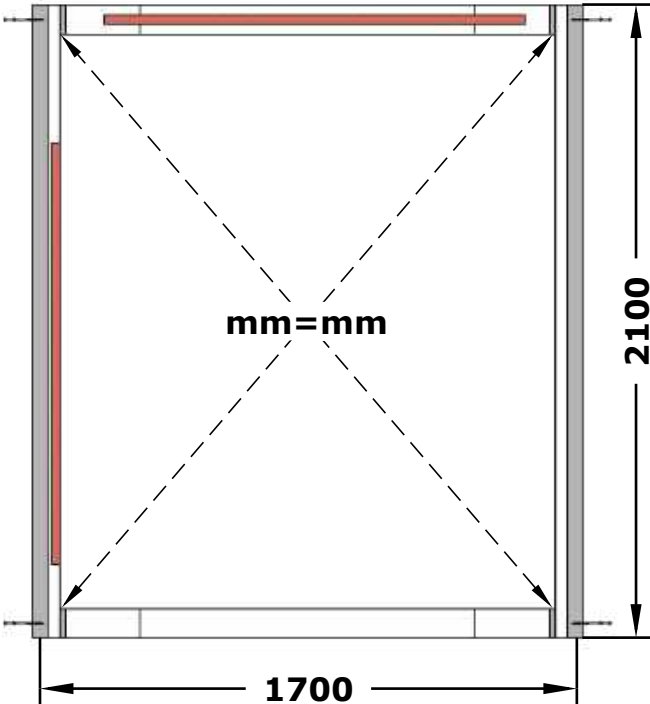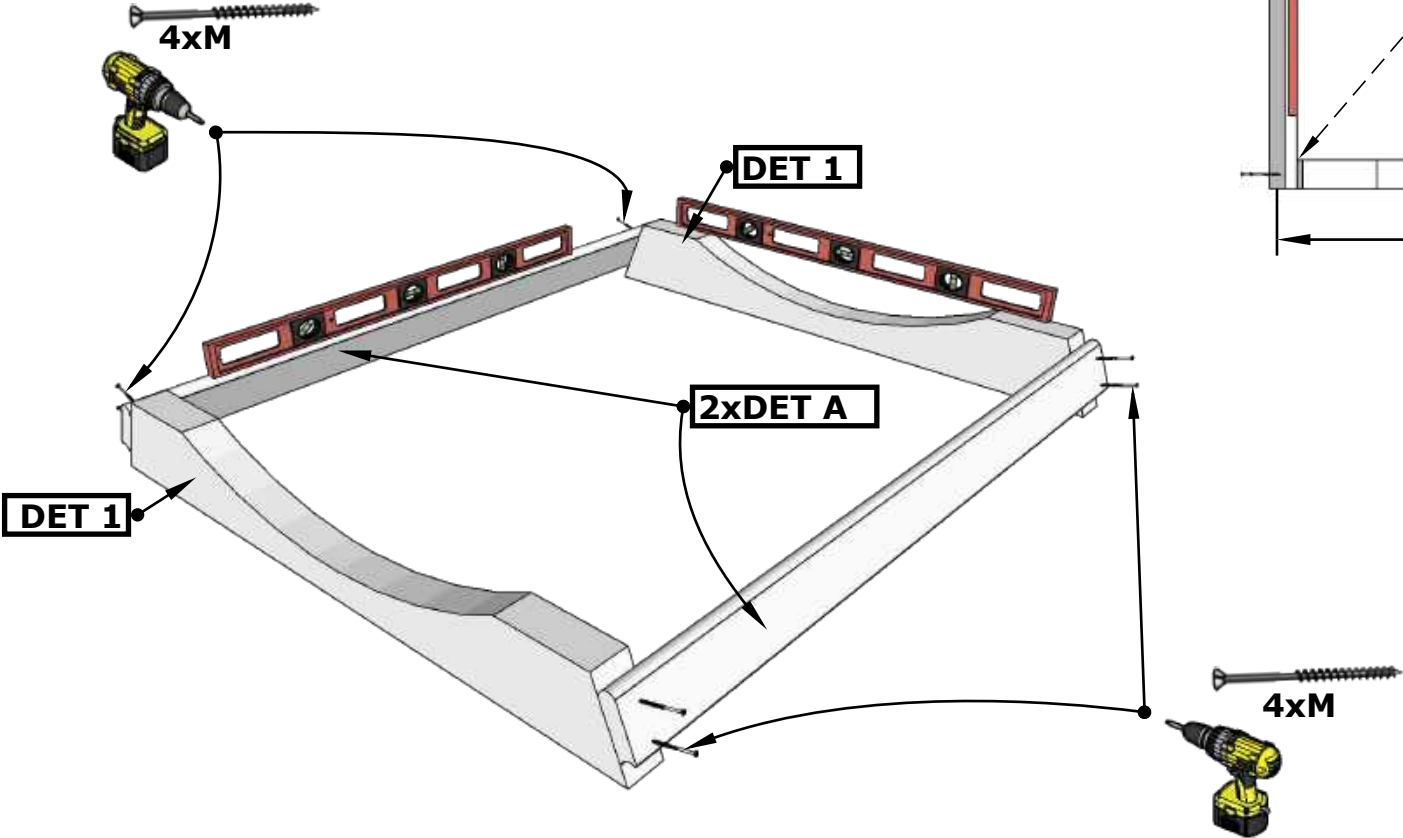



Sauna 280, Ø235

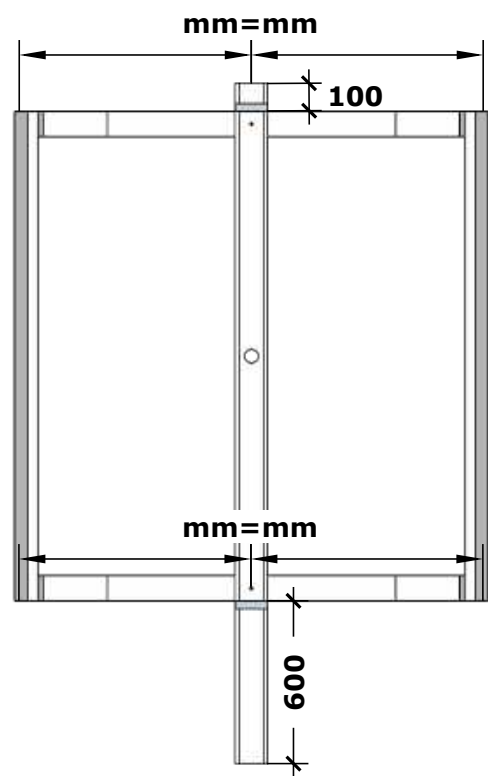


4 x DET 3a
4 x DET 3b

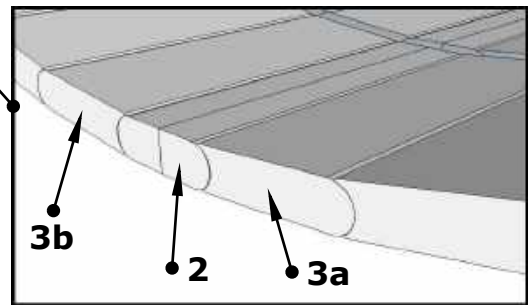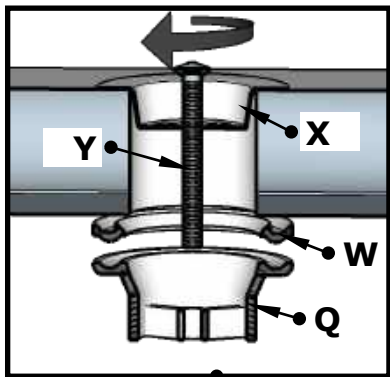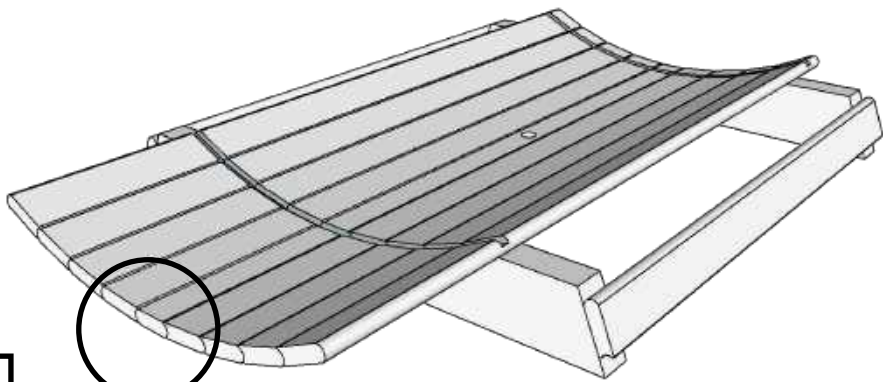




1x DET 2

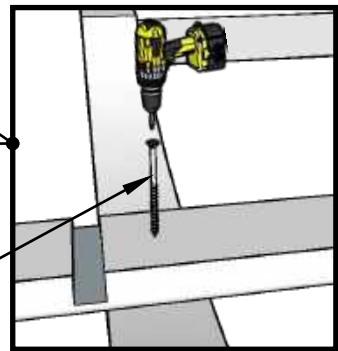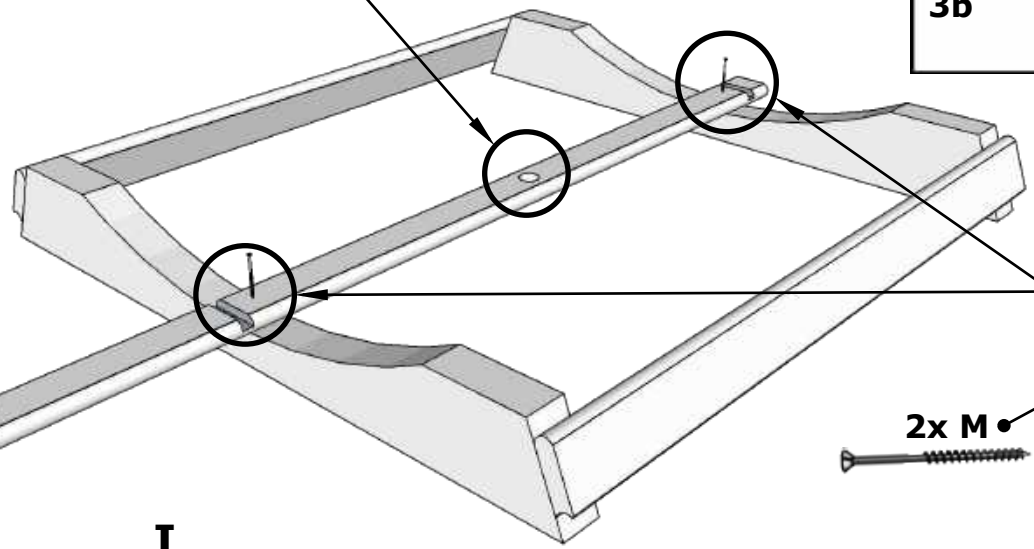

Sauna 280, Ø235

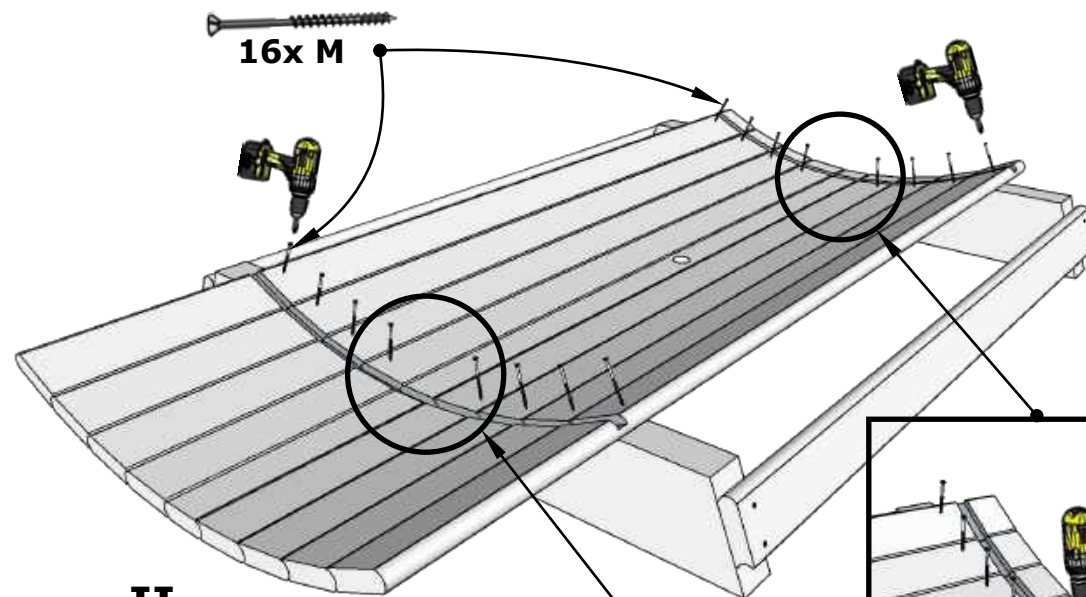


II

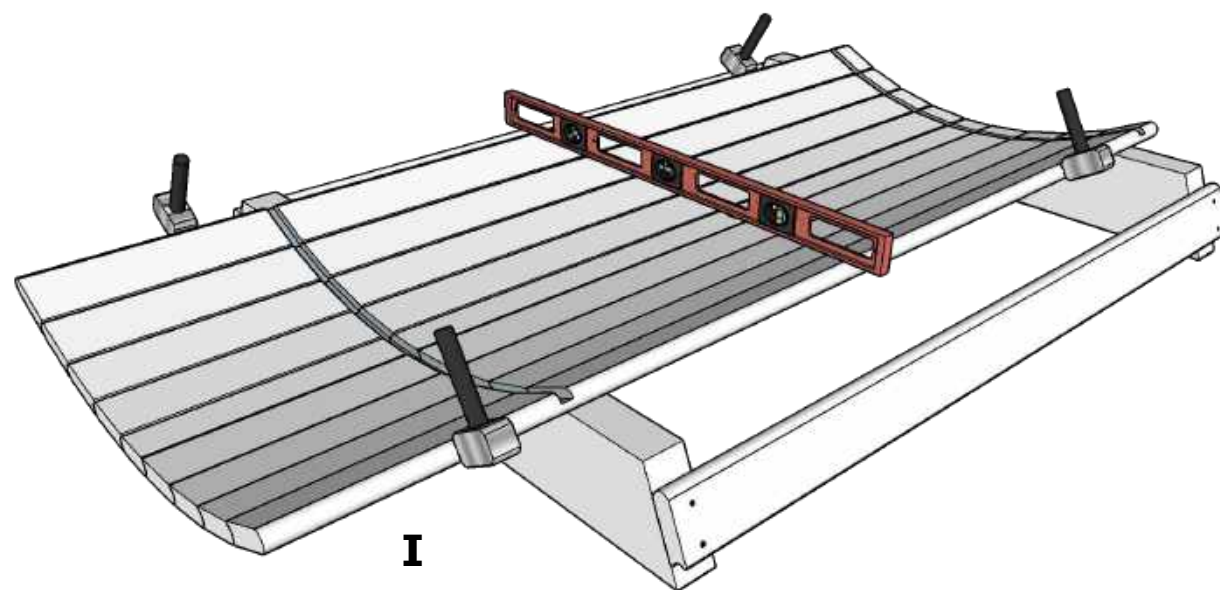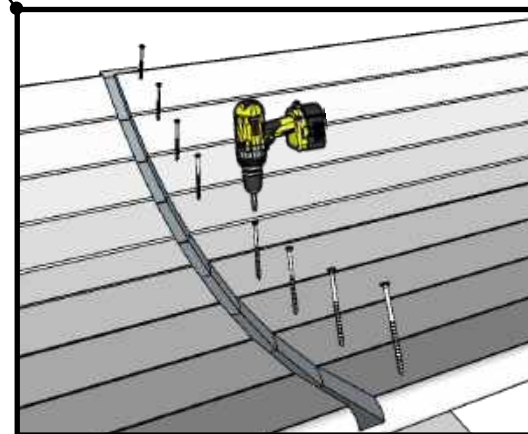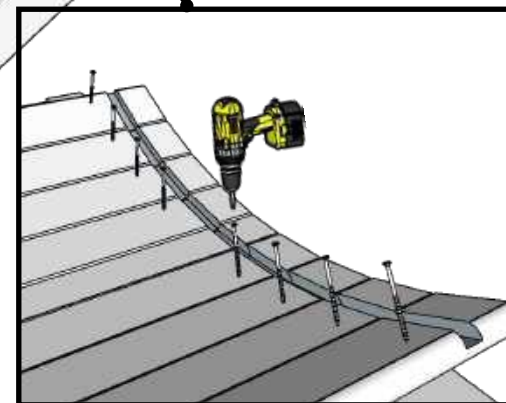

I






3.

Sauna 280, Ø235

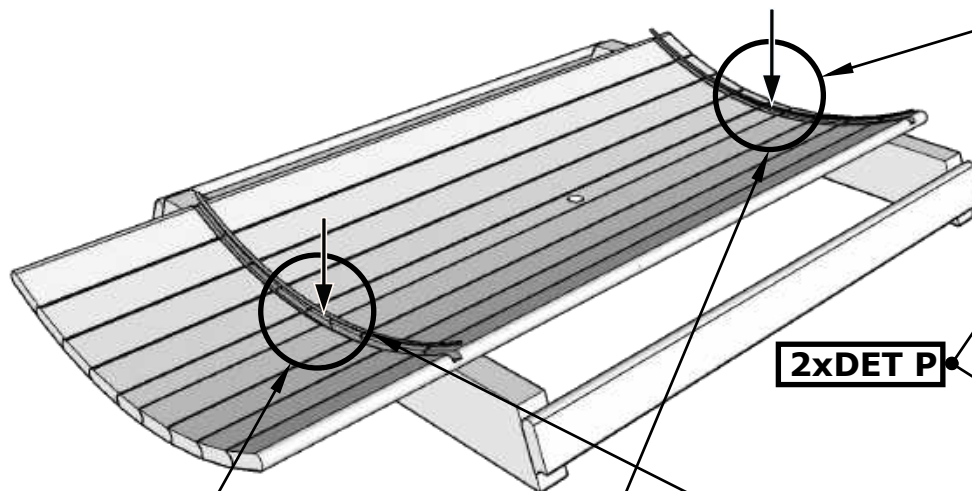


2xDET P

Drill holes Ø10 mm
into DET 2, outside

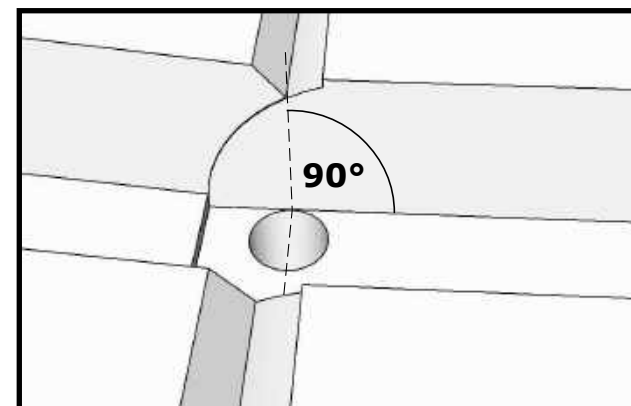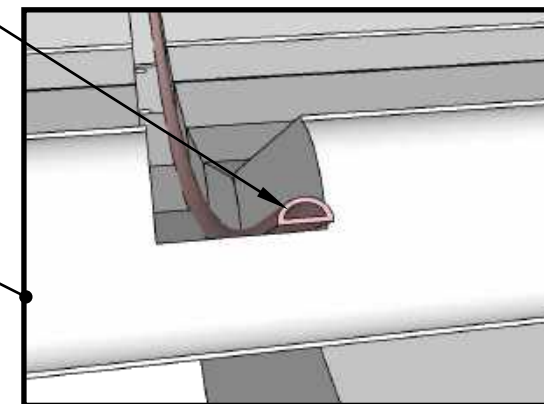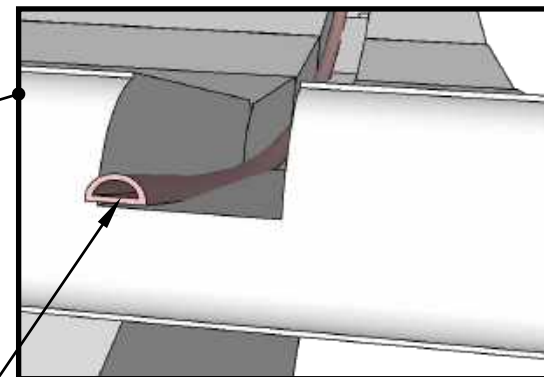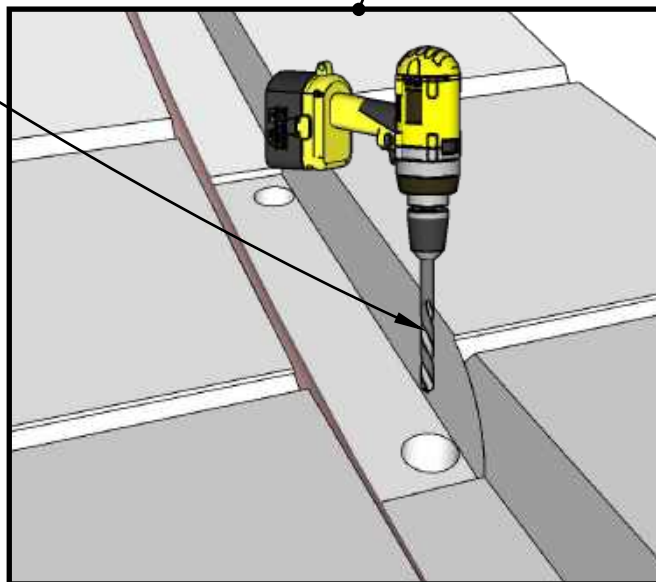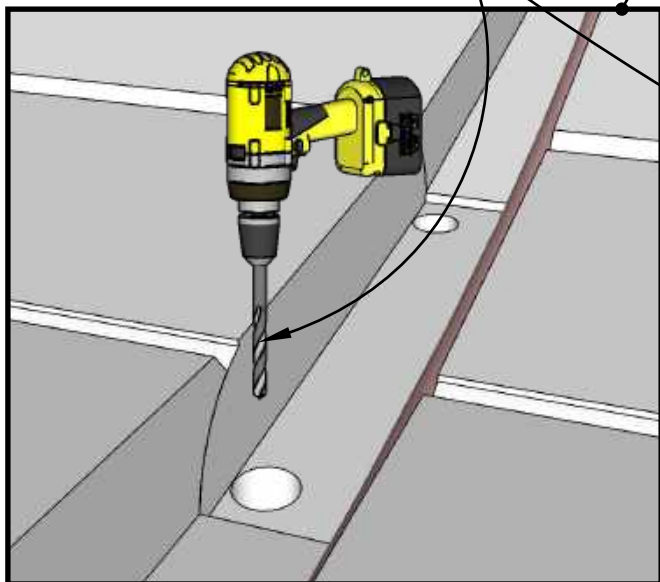


3A.

Sauna 280, Ø235

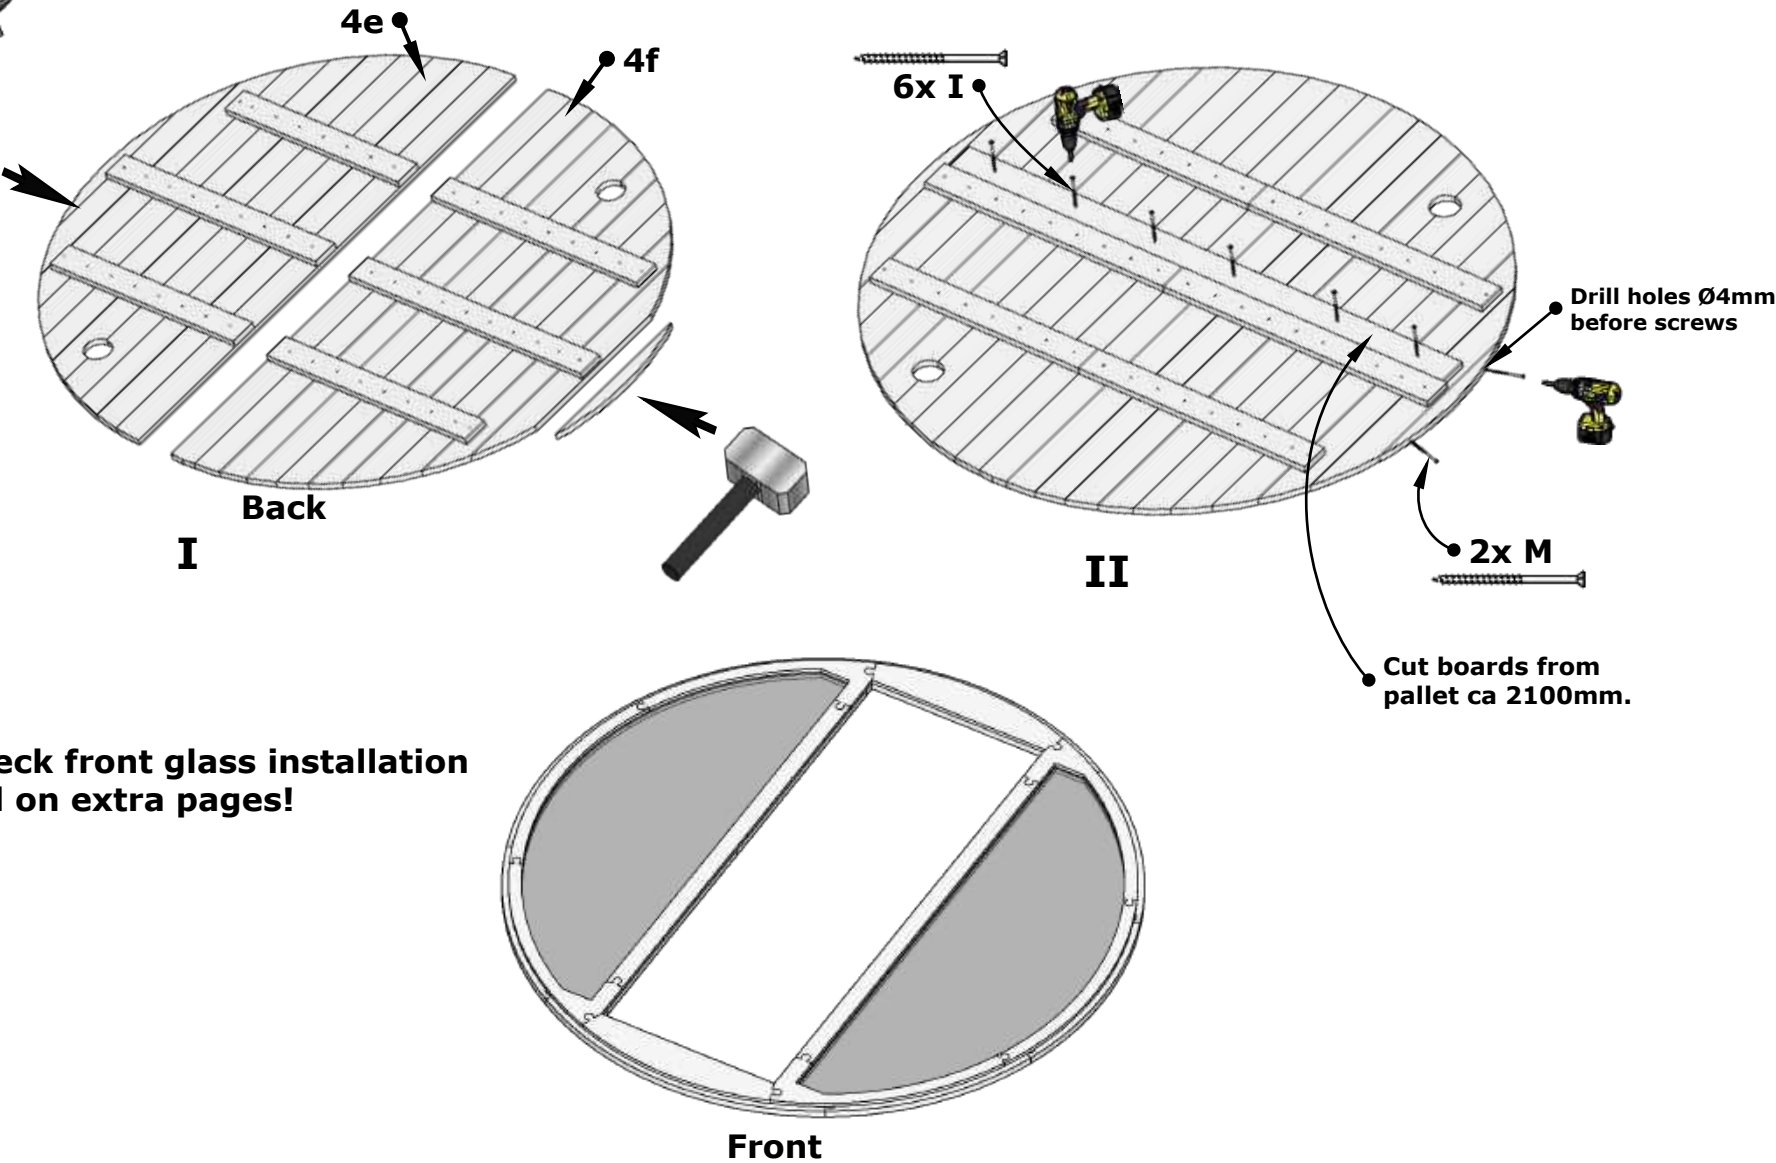



Sauna 280, Ø235

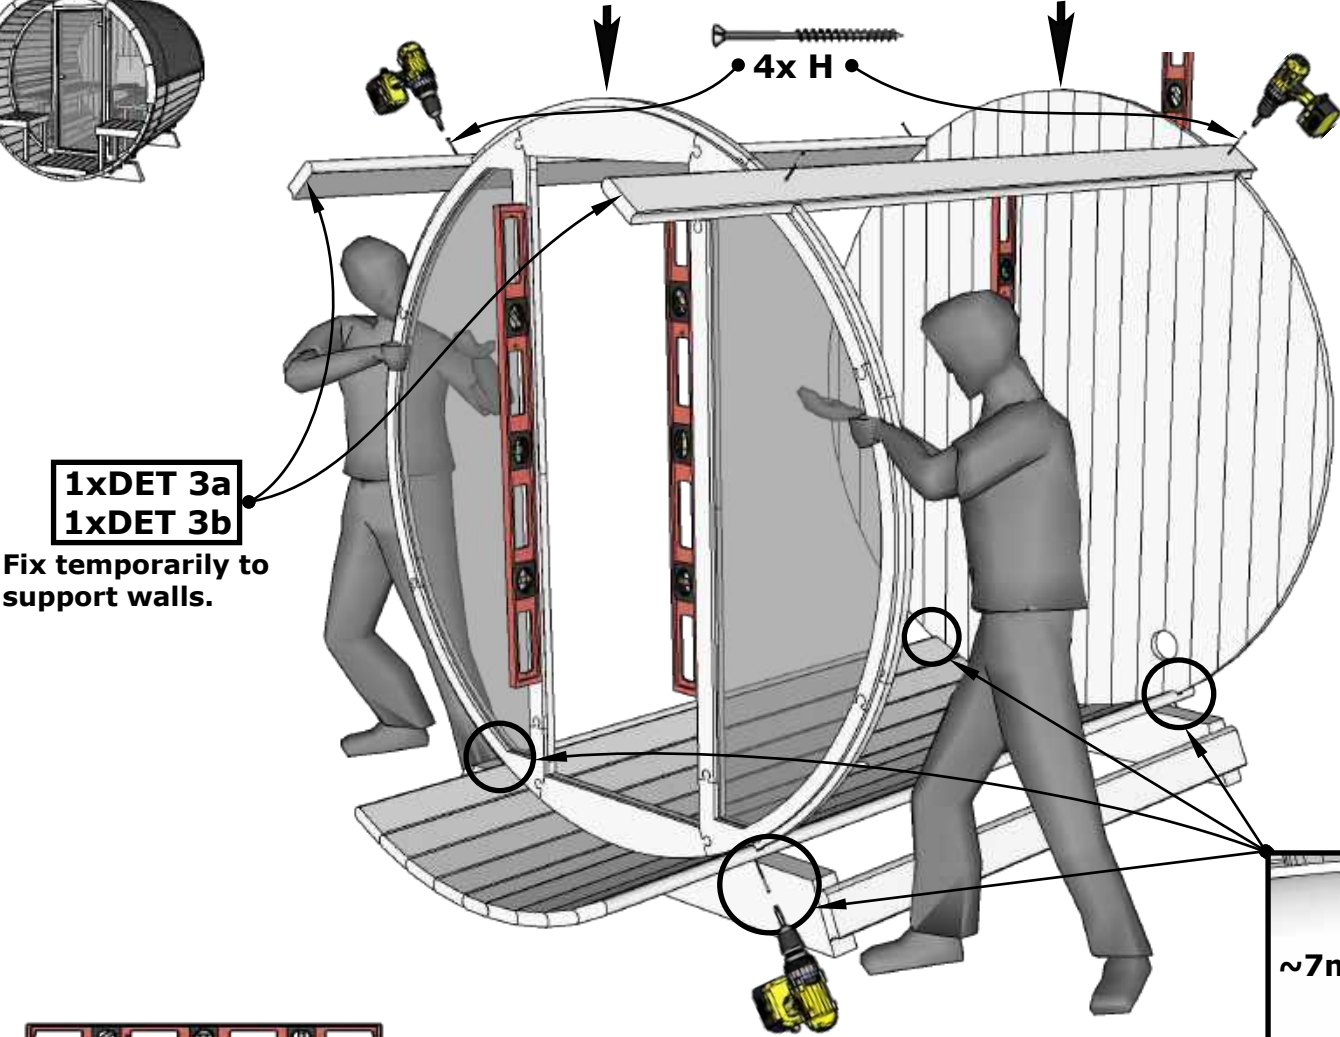

1xDET 3a
1xDET 3b
Fix temporarily to
support walls.

Use waterlevel



Important!
Keep distance!

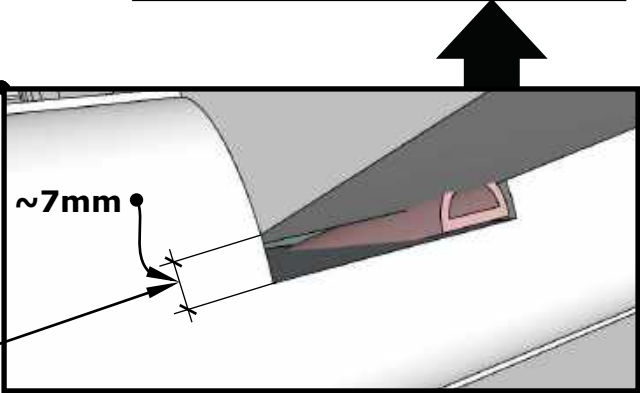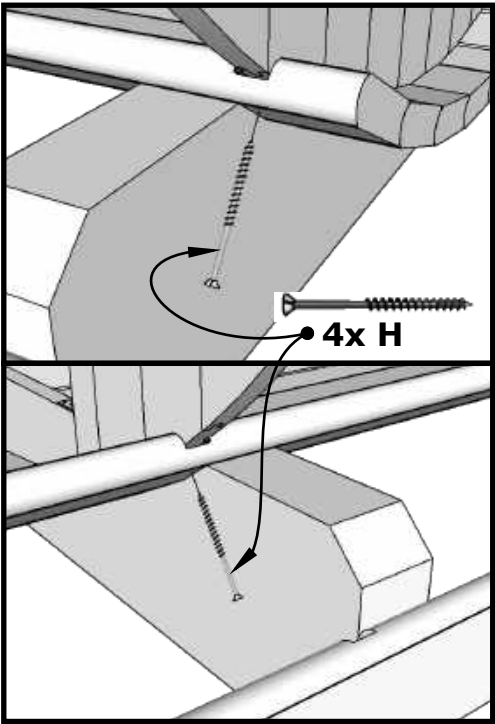


Sauna 280, Ø235




See page 6A

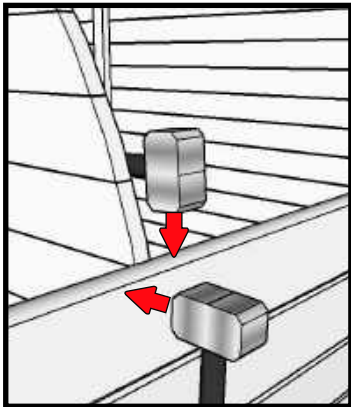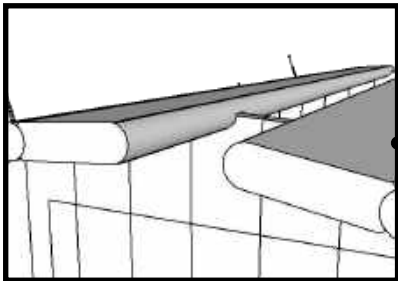

13x DET 3b
12x DET 3a

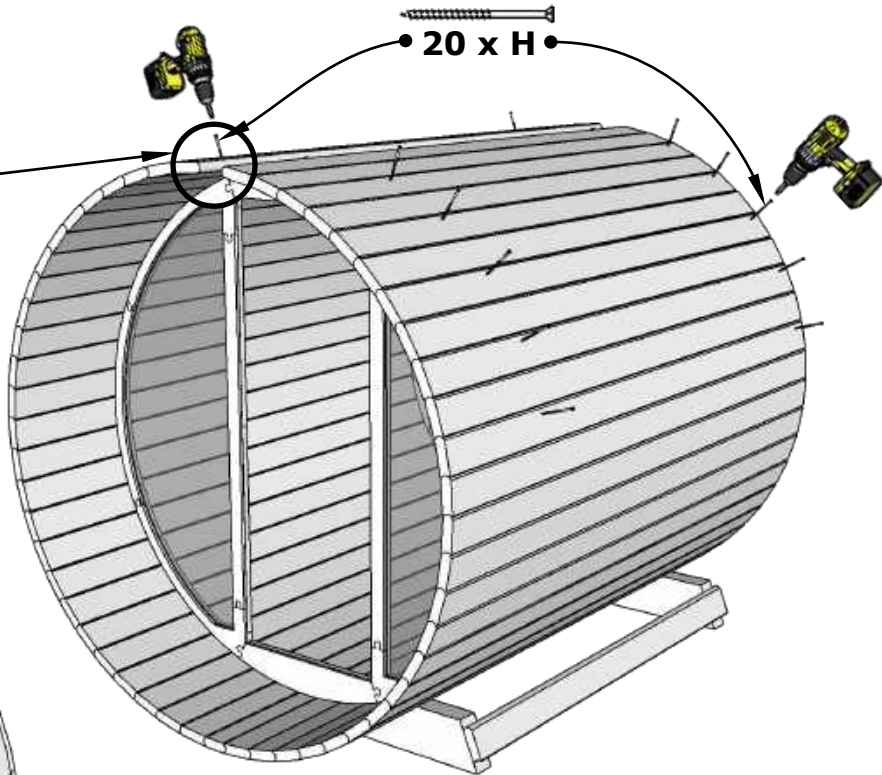






II

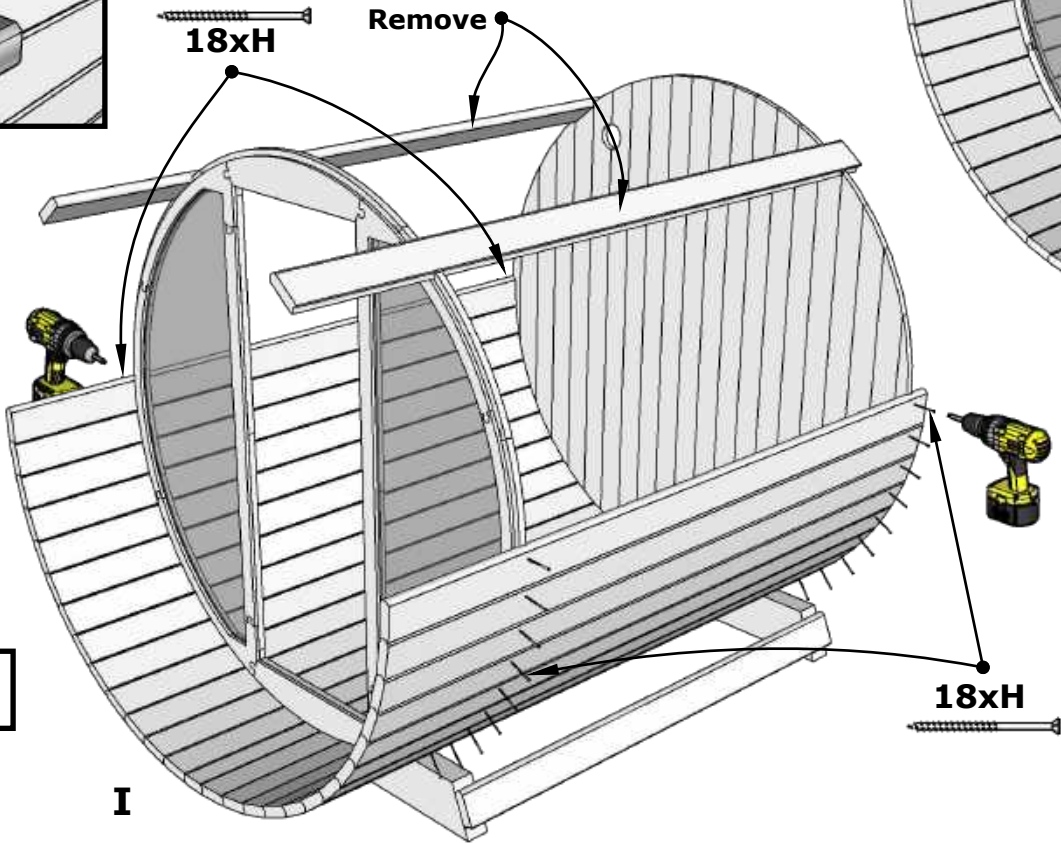

9x DET 3a
9x DET 3b


I

Sauna 280, Ø235

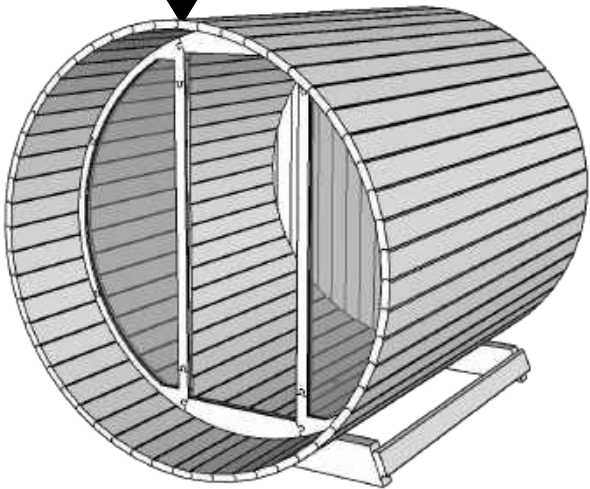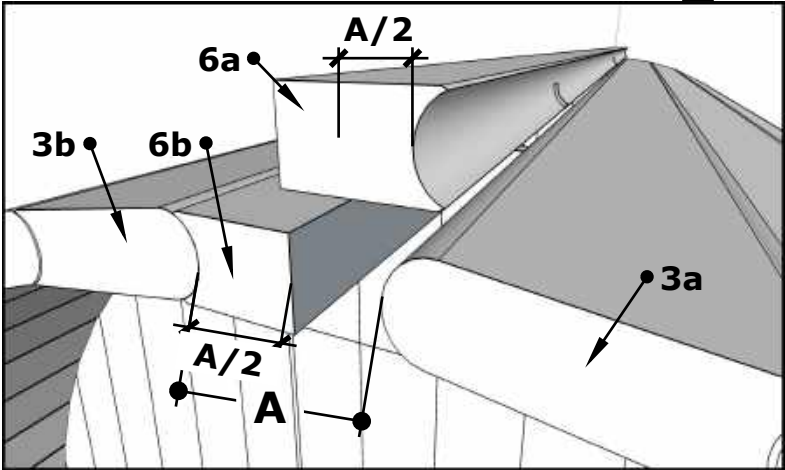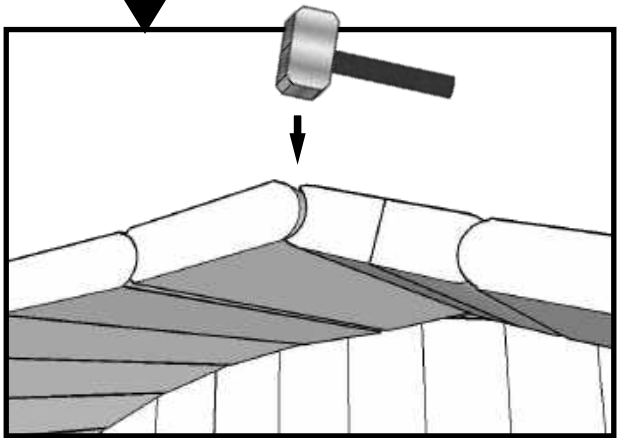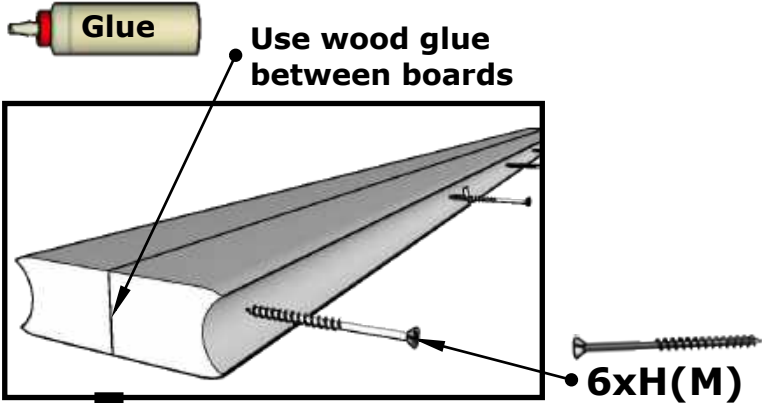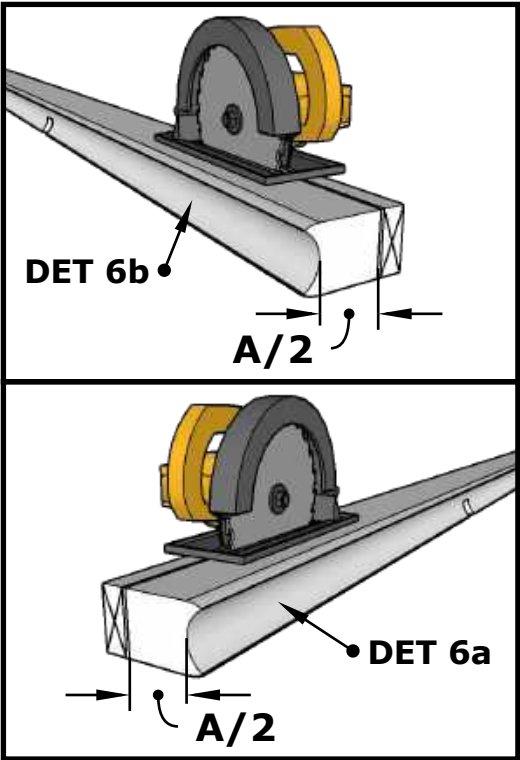


6A.

Sauna 280, Ø235

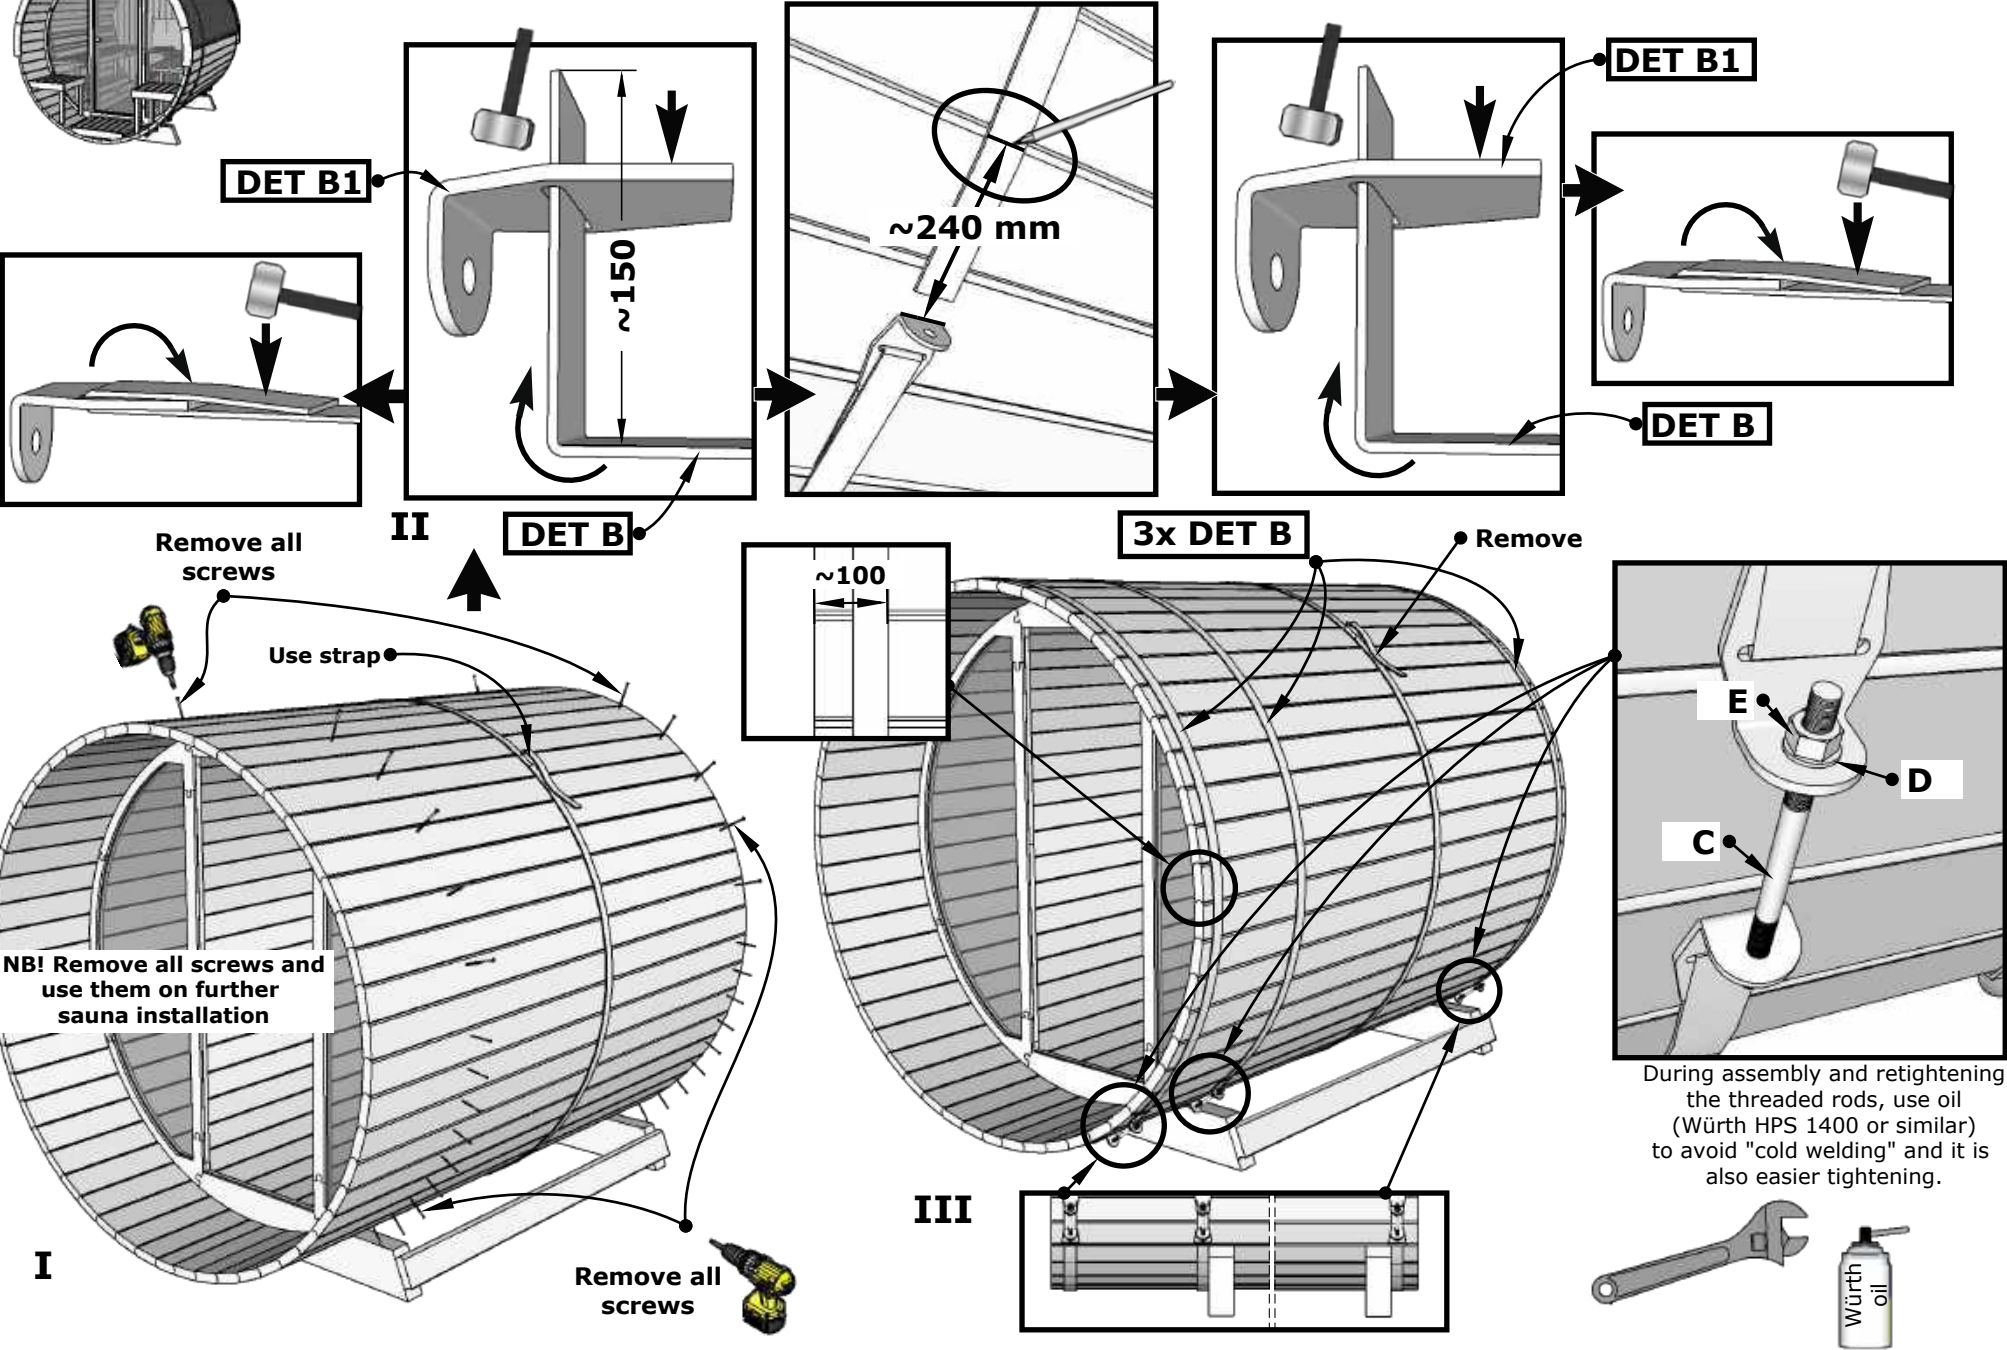


Sauna 280, Ø235

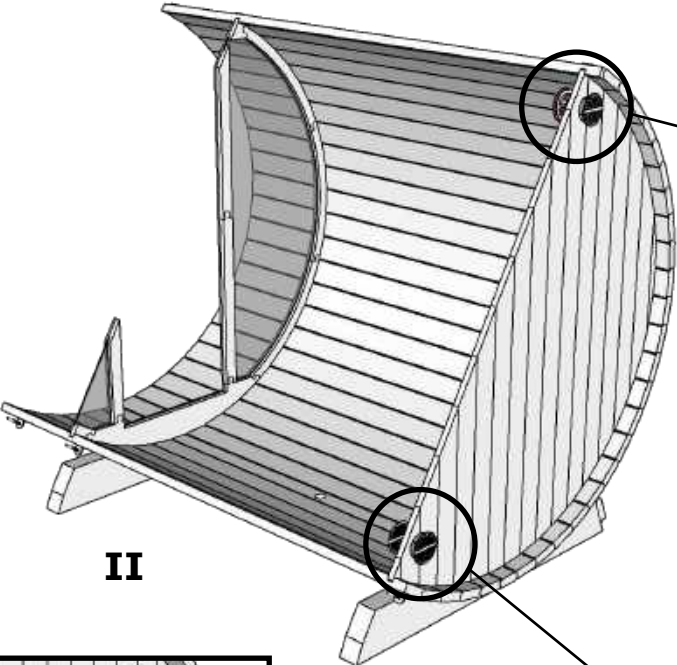


II

Back

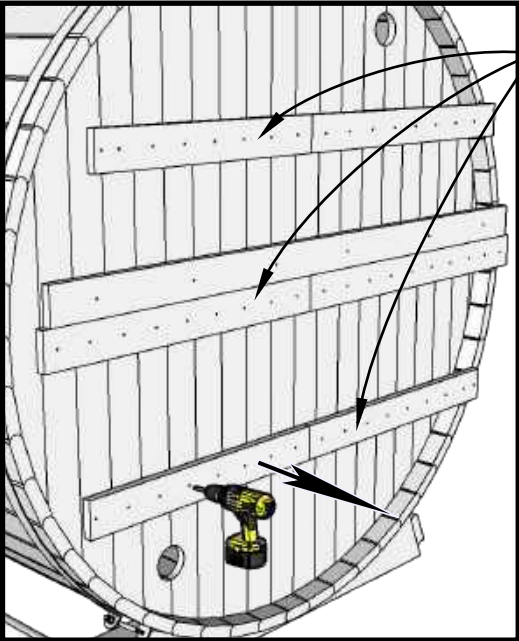

Remove all brackets

1xDET G

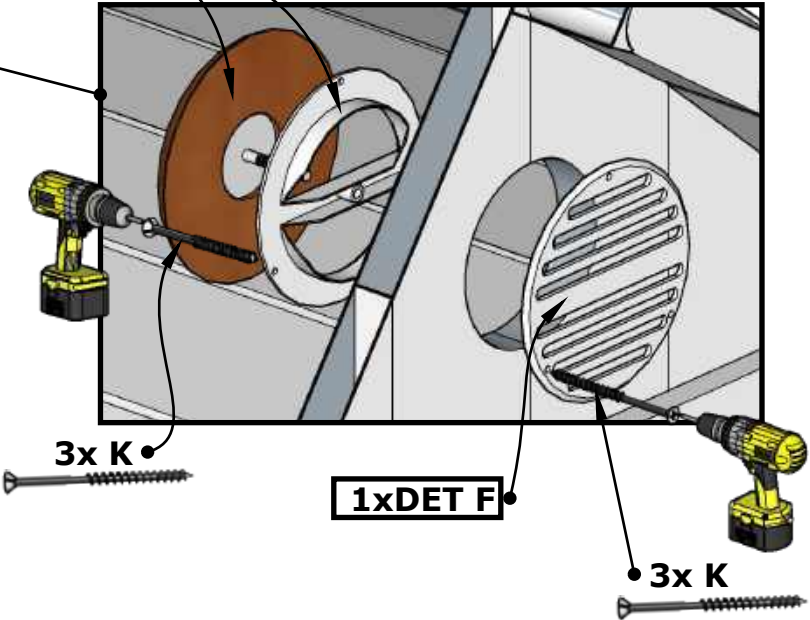


3x K

1xDET F

3x K




2xDET F

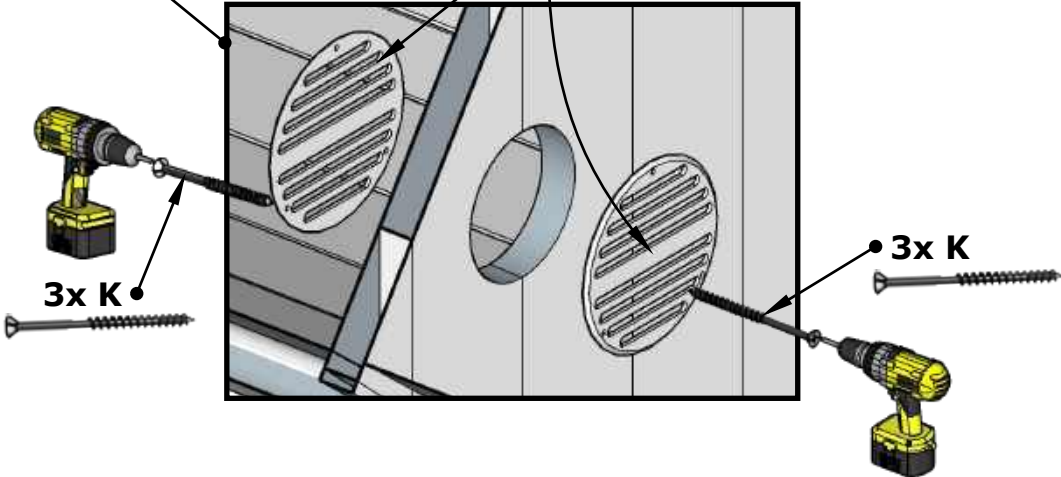



3x K

3x K



Sauna 280, Ø235

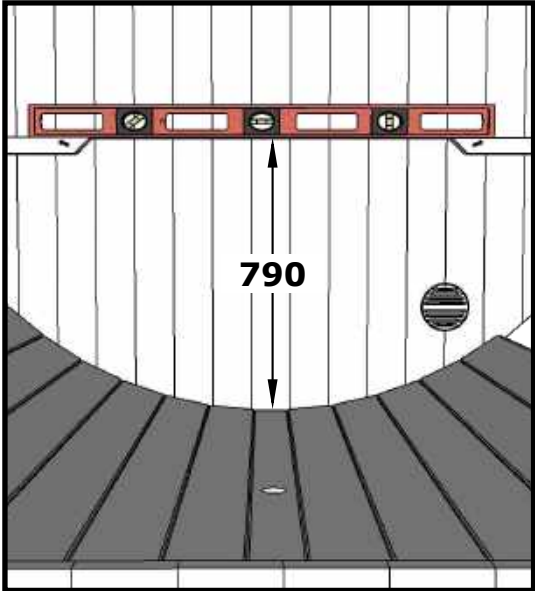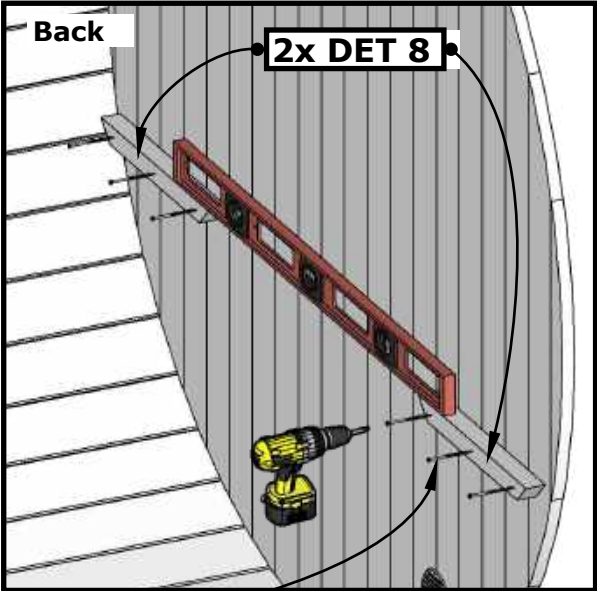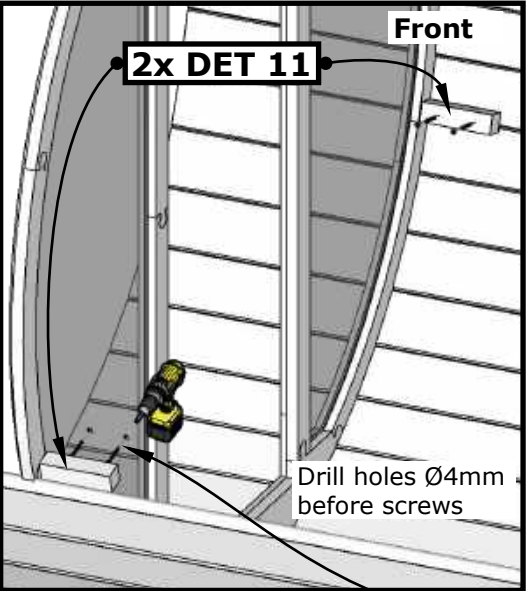


I

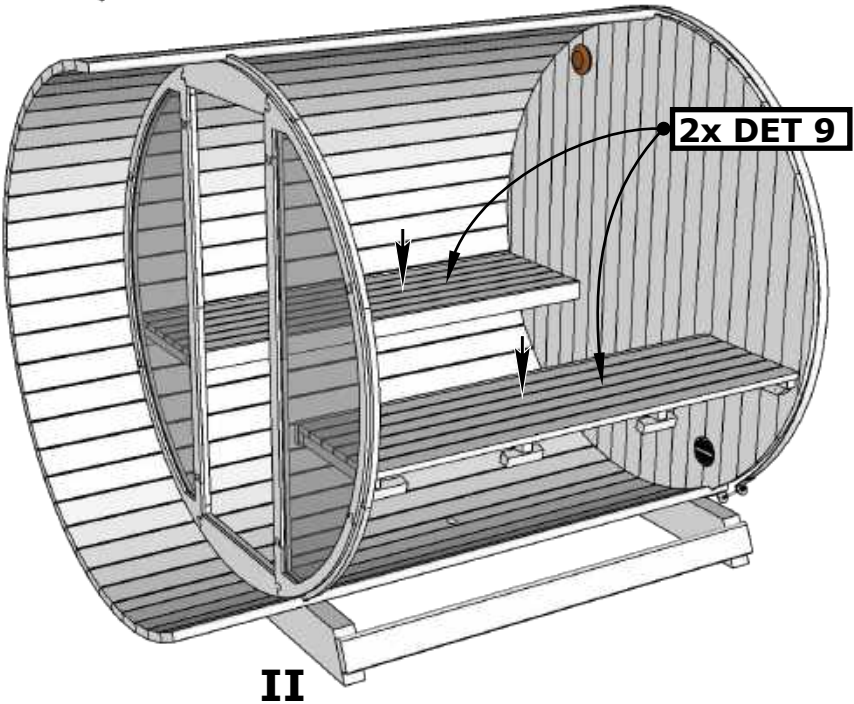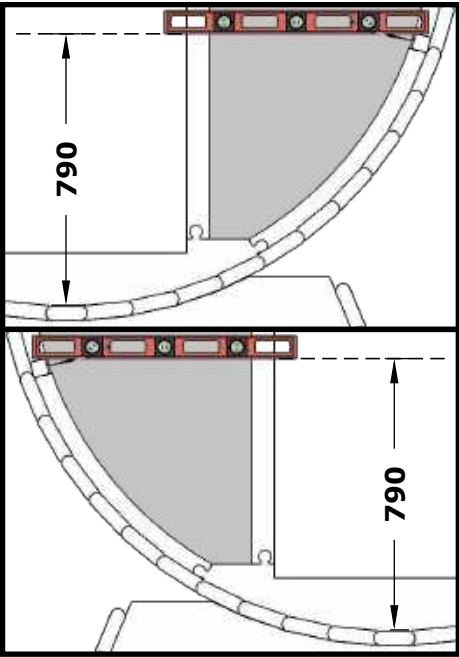


**NB! Be careful,
do not hit the glass.**

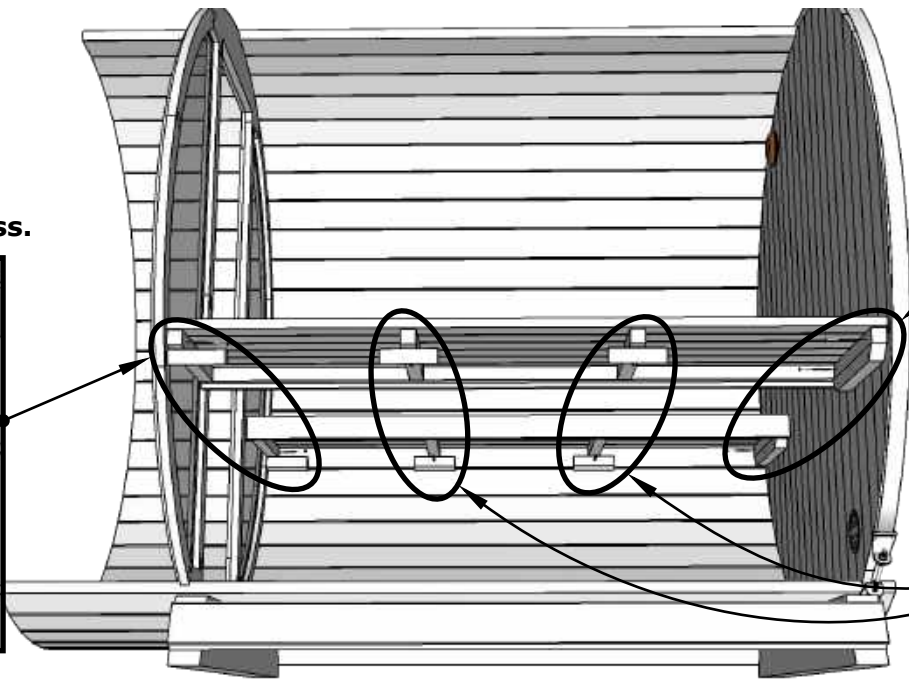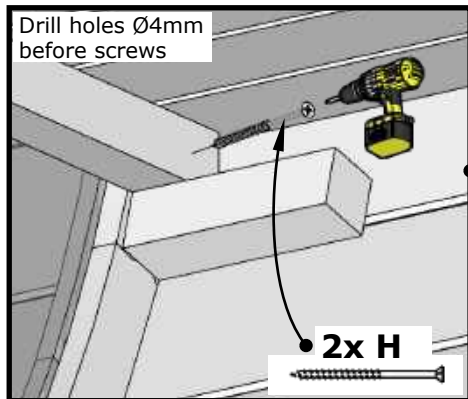

I

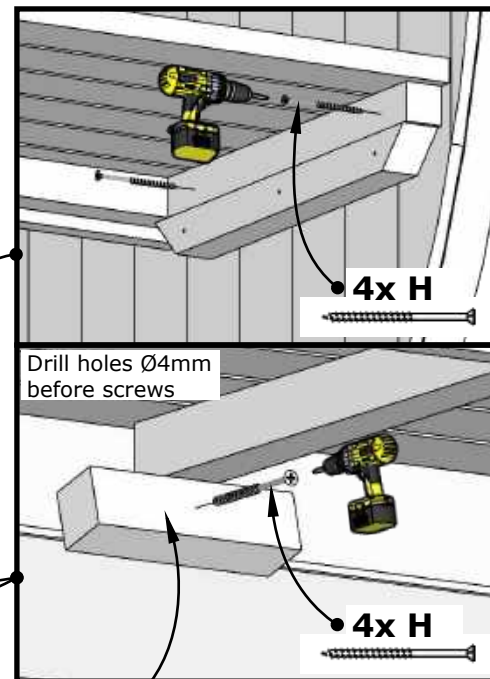

4x DET 11

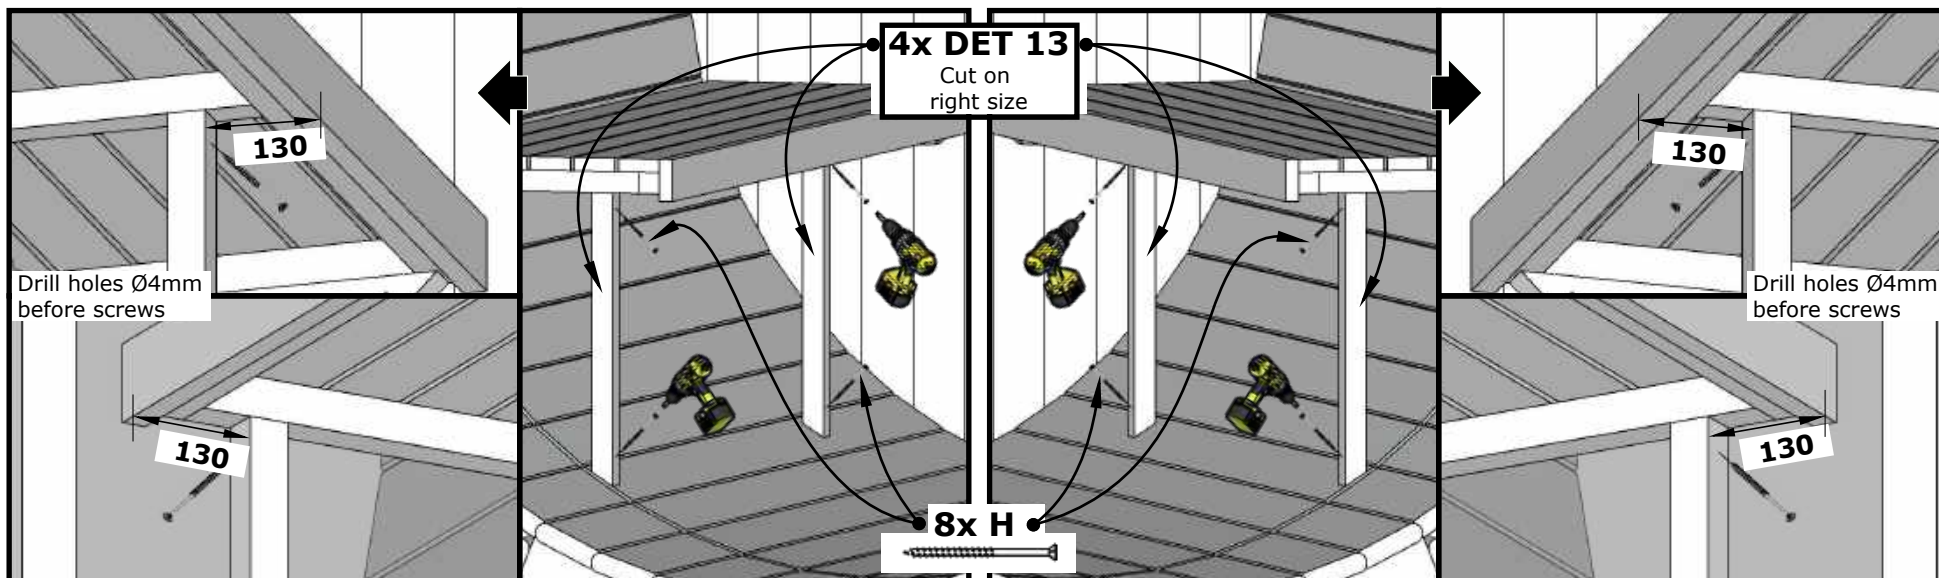


II

Sauna 280, Ø235



Drill holes Ø4mm
before screws

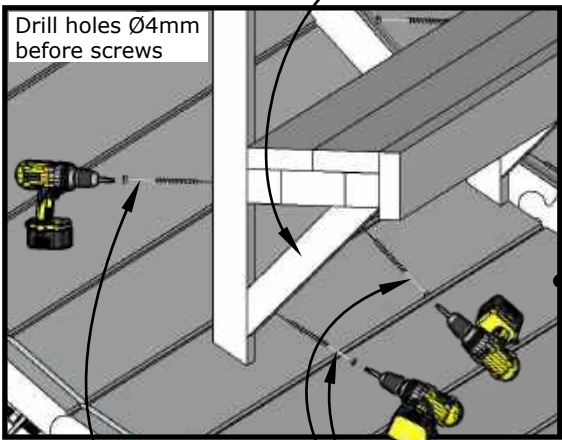

2x DET 15


4x M




8x H



Drill holes Ø4mm
before screws

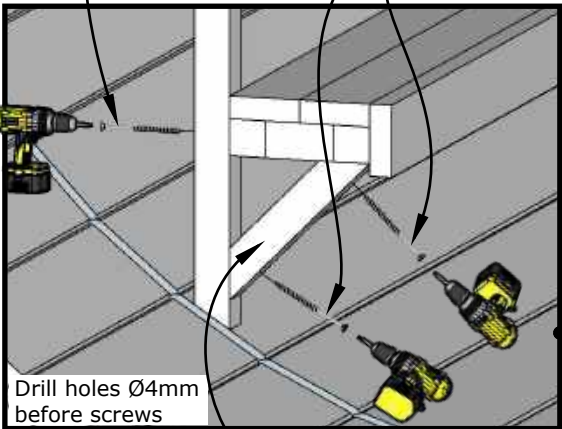


2x DET 15

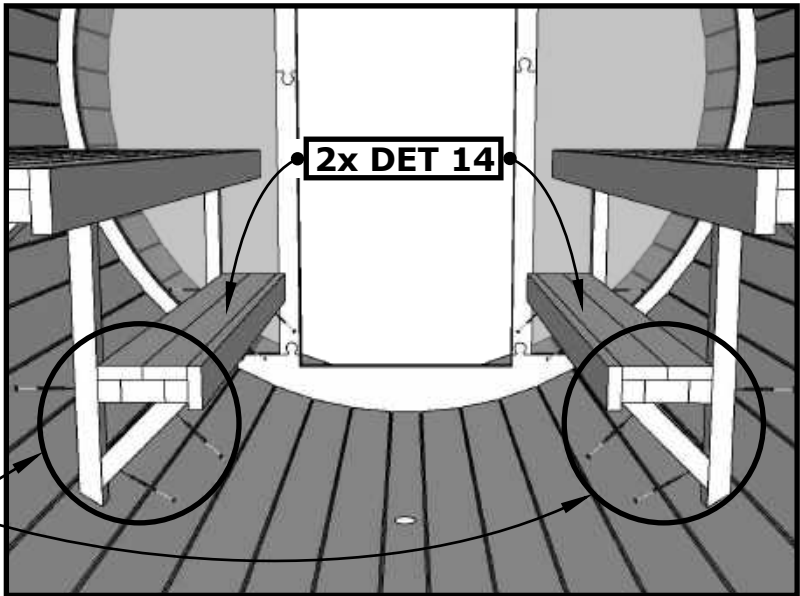


2x DET 14


I

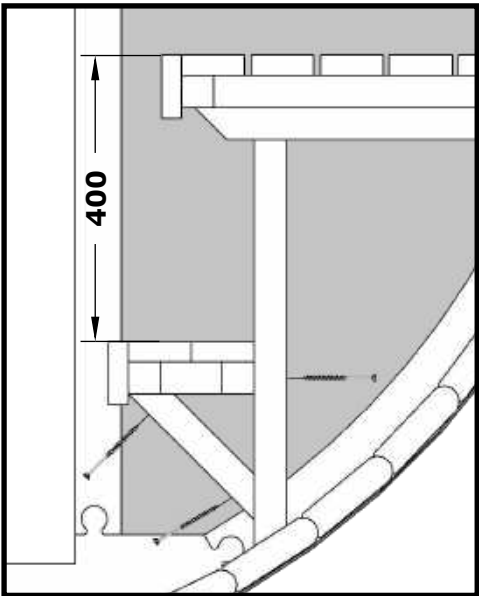

400

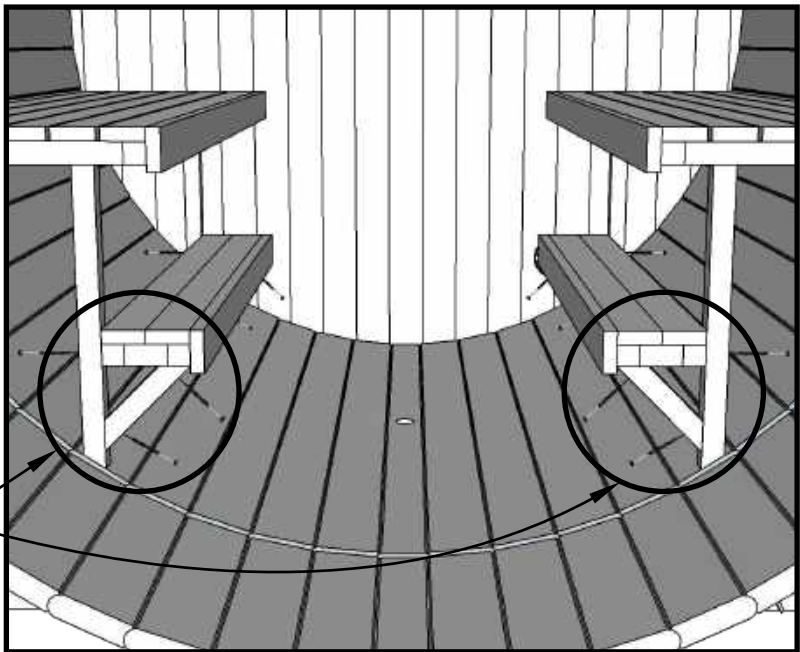





II

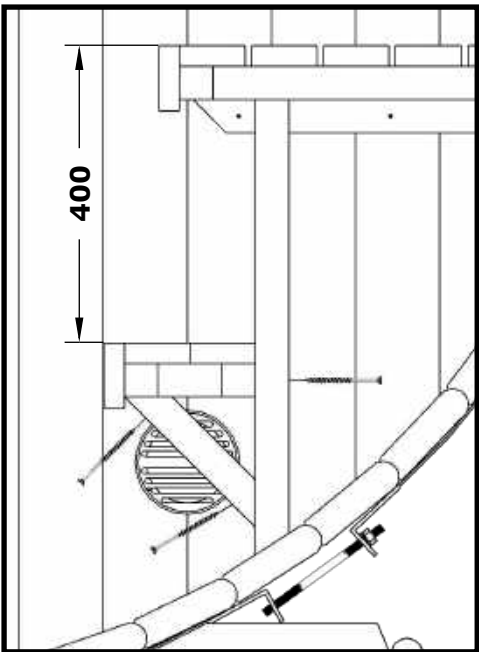

400





11.

Sauna 280, Ø235

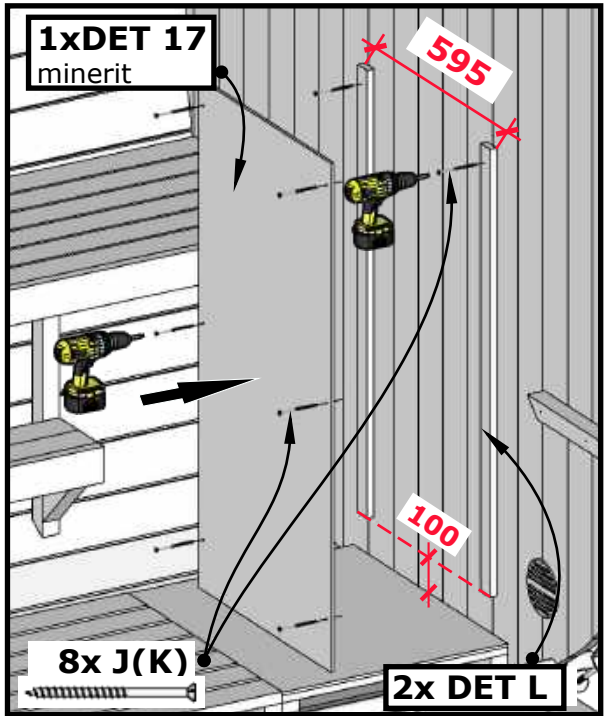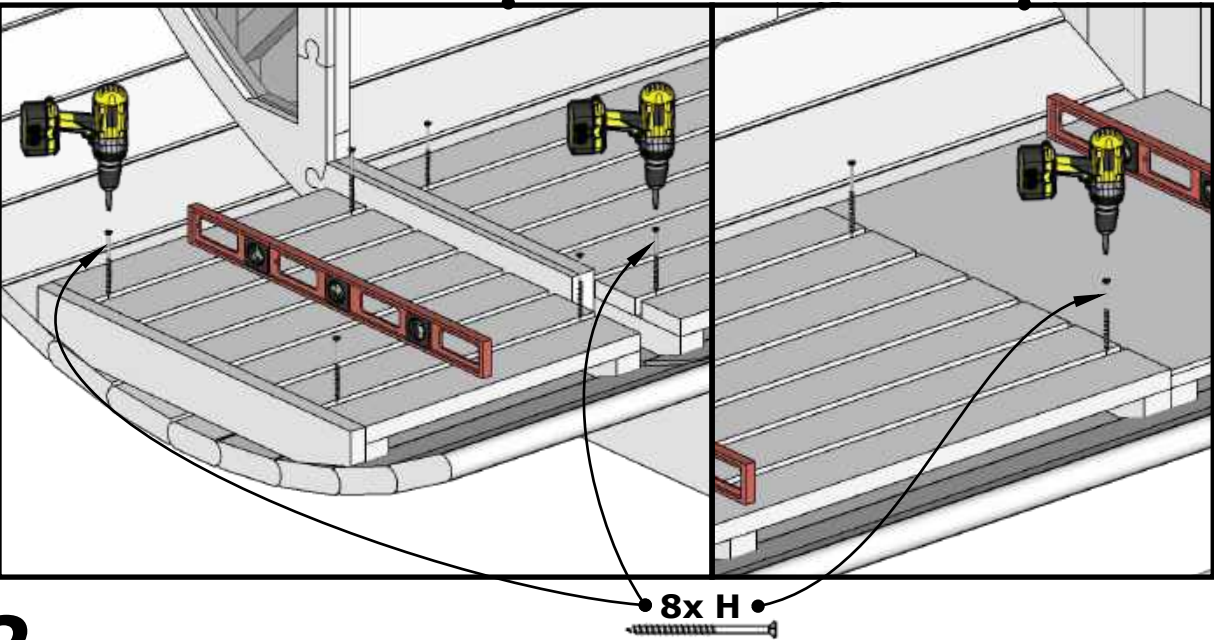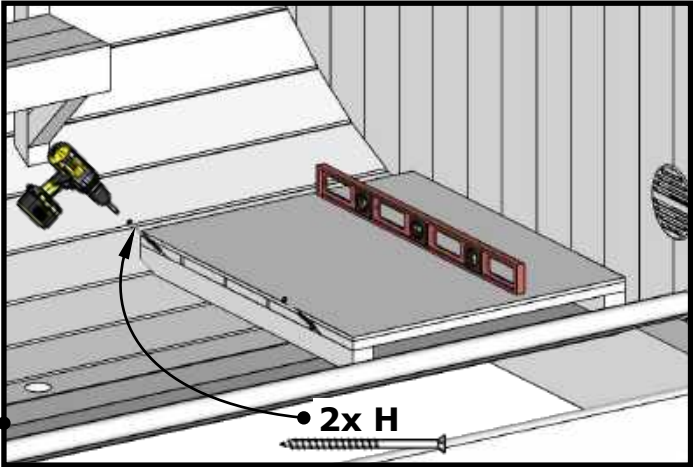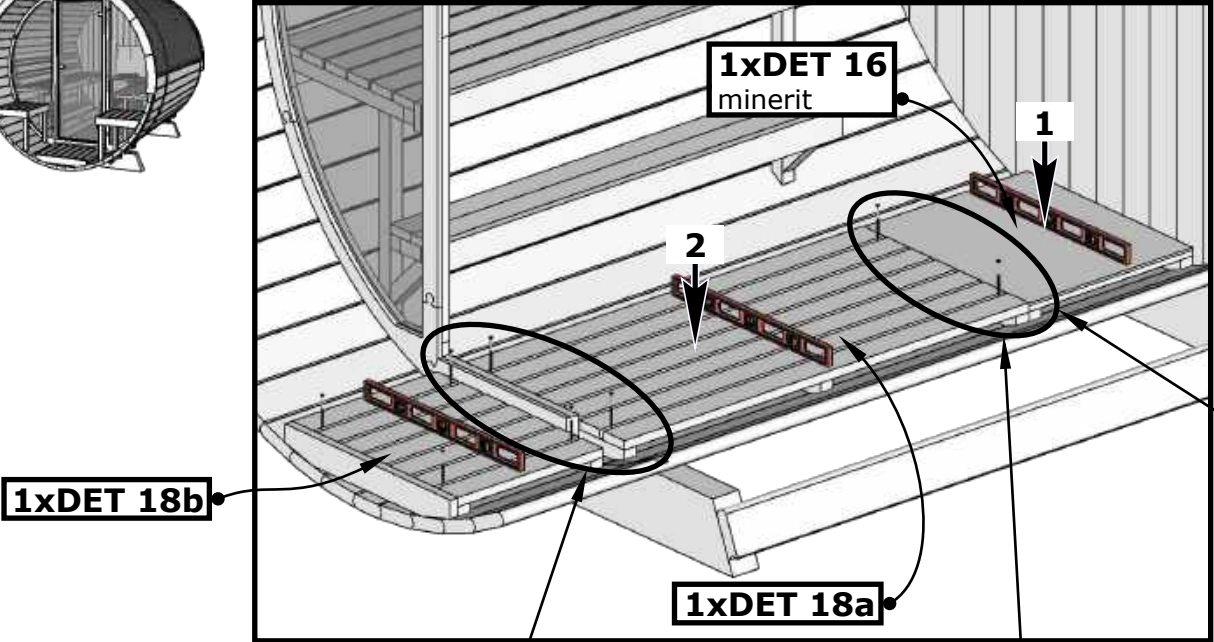

NB! If Your sauna equipped with electrical heater, fix DET 17 directly to the wall without DET L. Then use screws K.

Sauna 280, Ø235

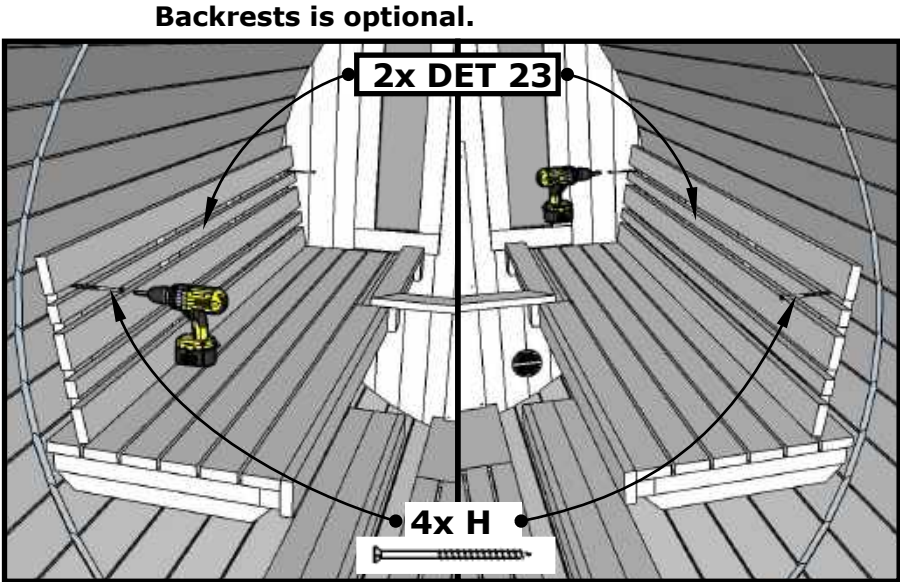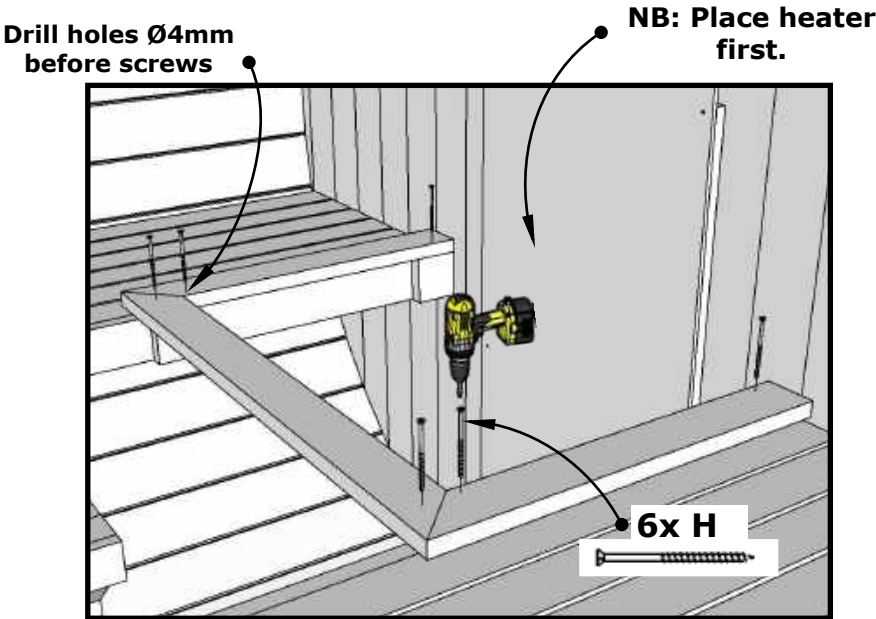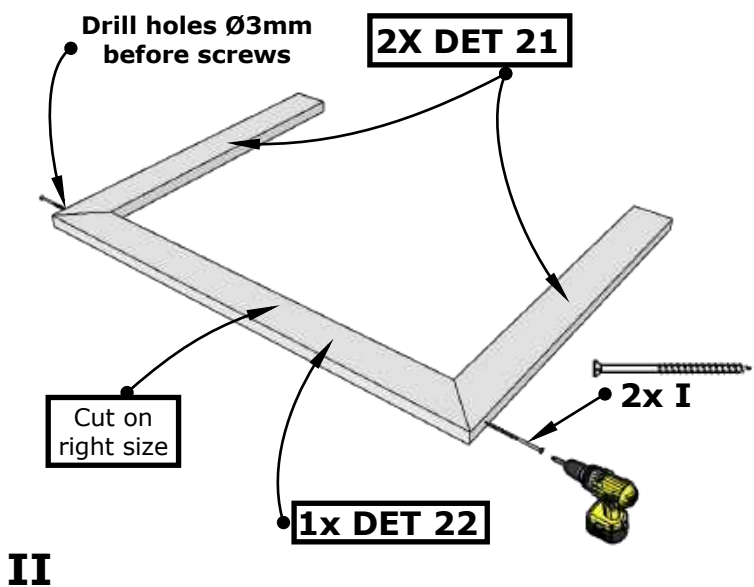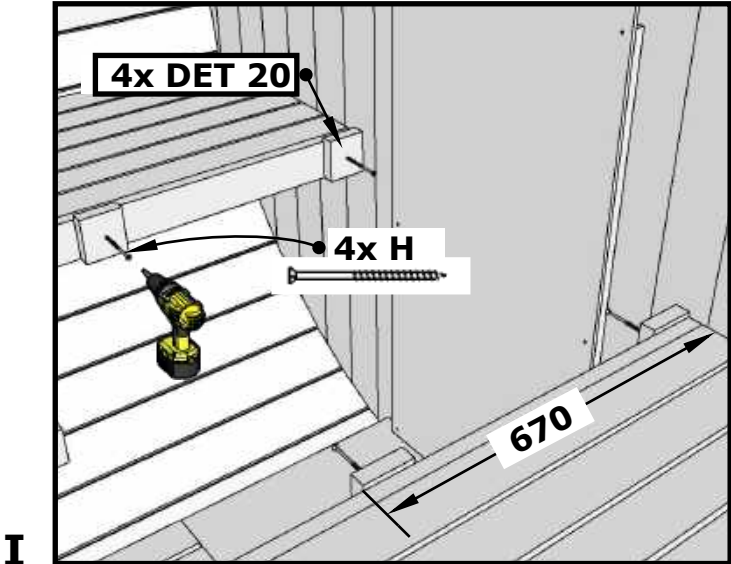


Sauna 280, Ø235




Use waterlevel for door installation.

2x DET 19a
2x DET 19b

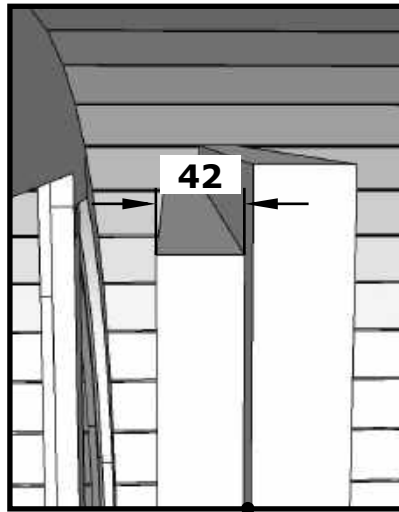


IV

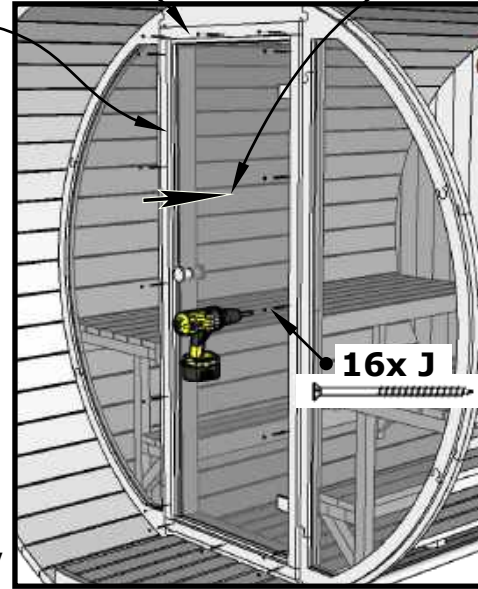

Push door against wall
and fix it from inside

V

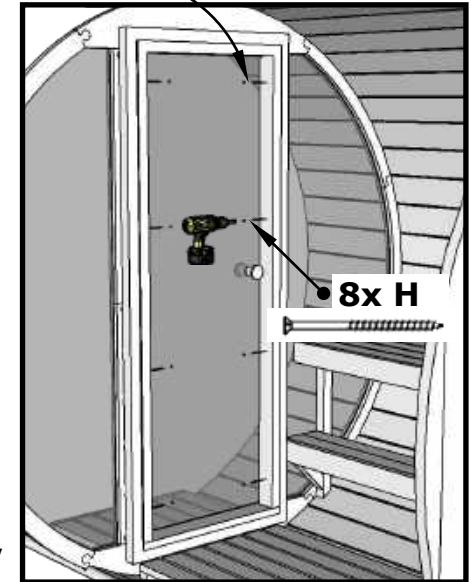


8x H

16x J




NB! Place door
from inside

2x M

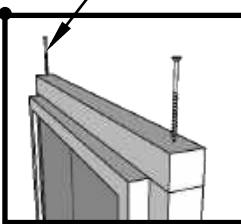


1x DET 19

2x DET 19c
2x DET 19d

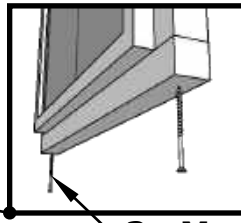


2x M


I

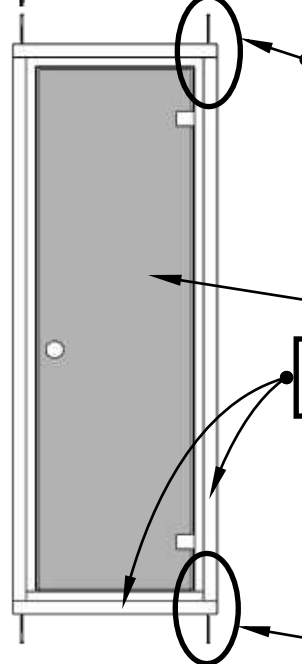

II

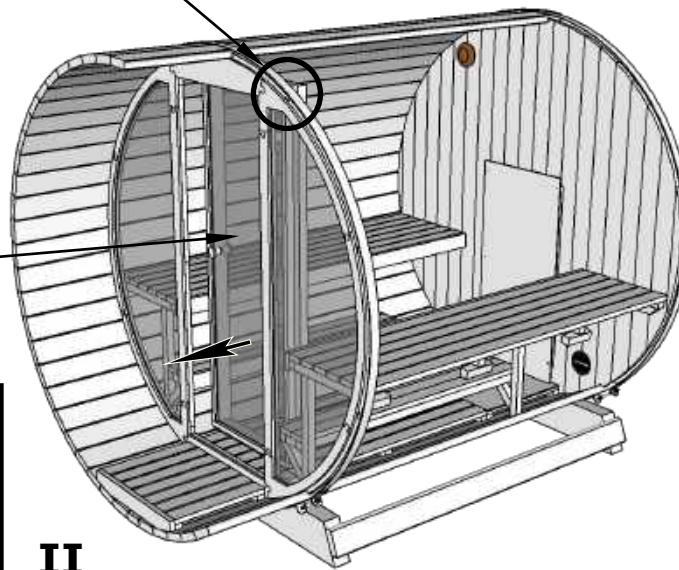


III

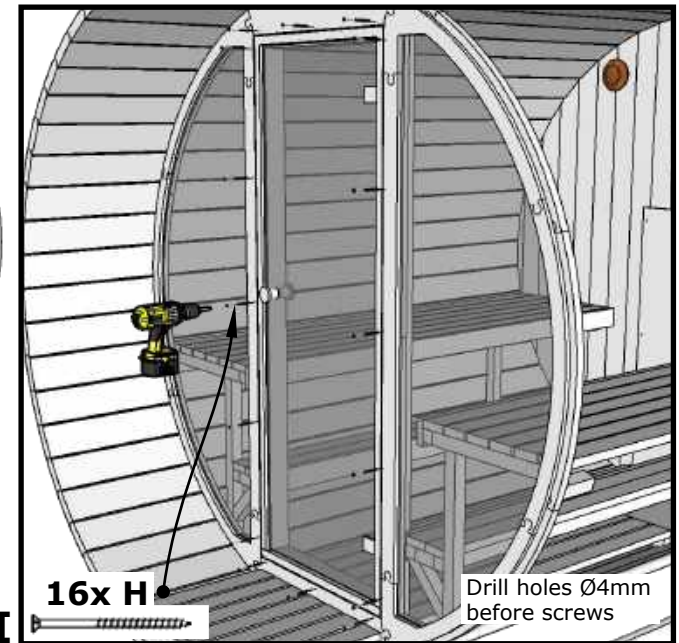

16x H

Drill holes Ø4mm
before screws




Sauna 280, Ø235

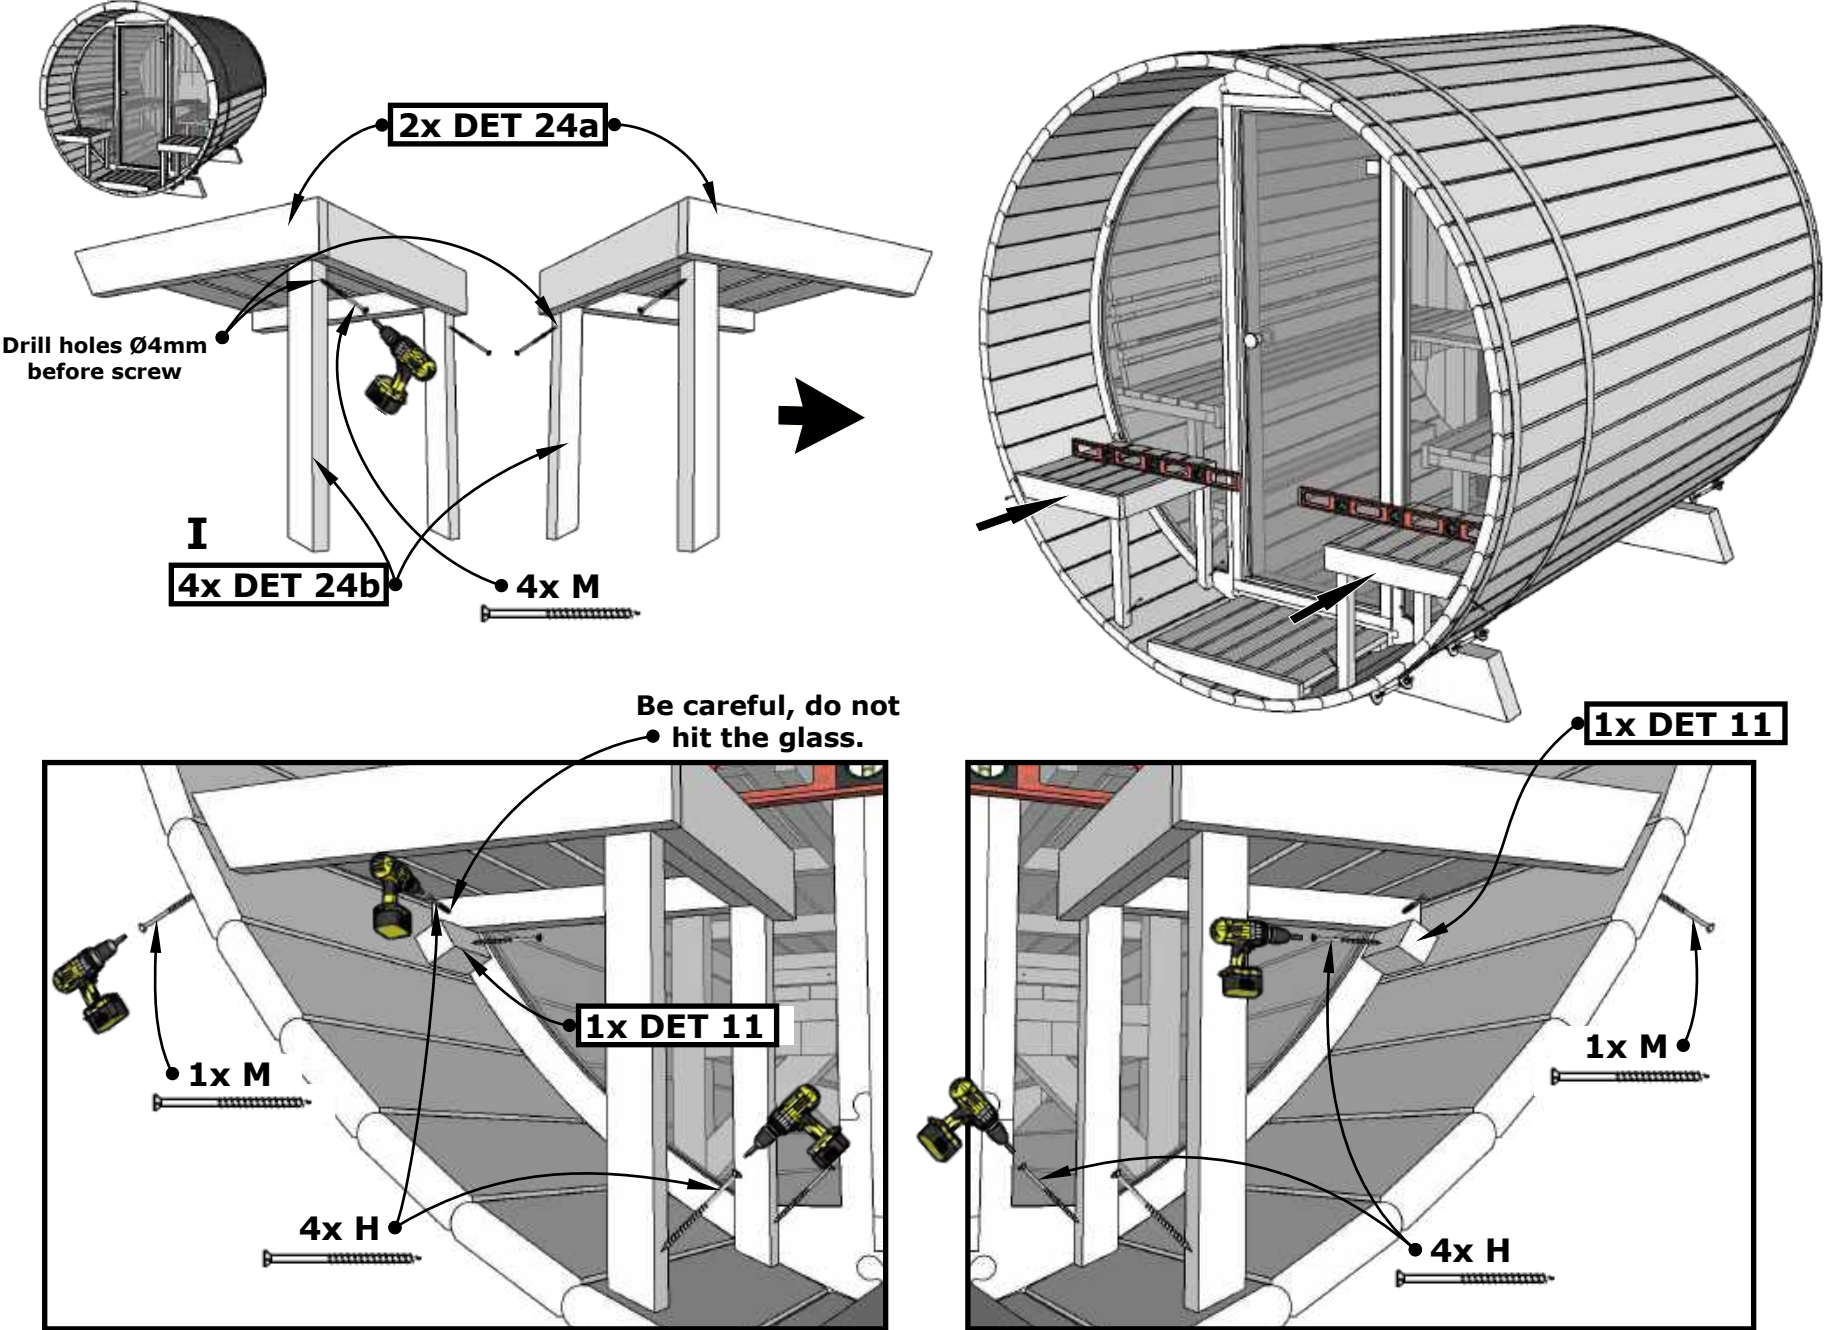

Sauna 280, Ø235



NB! Check also shingles installation manual inside shingles package!


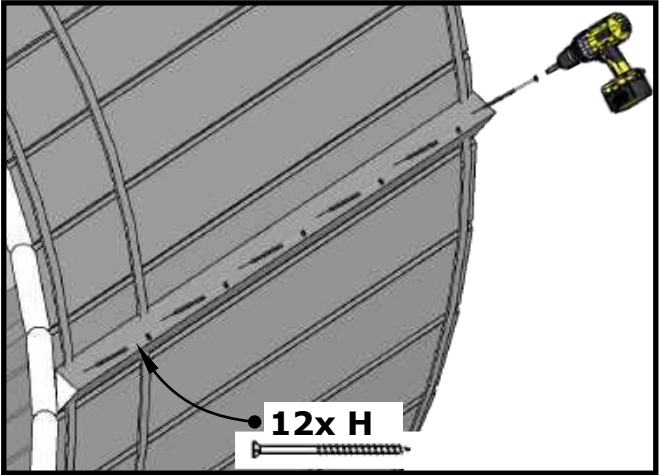
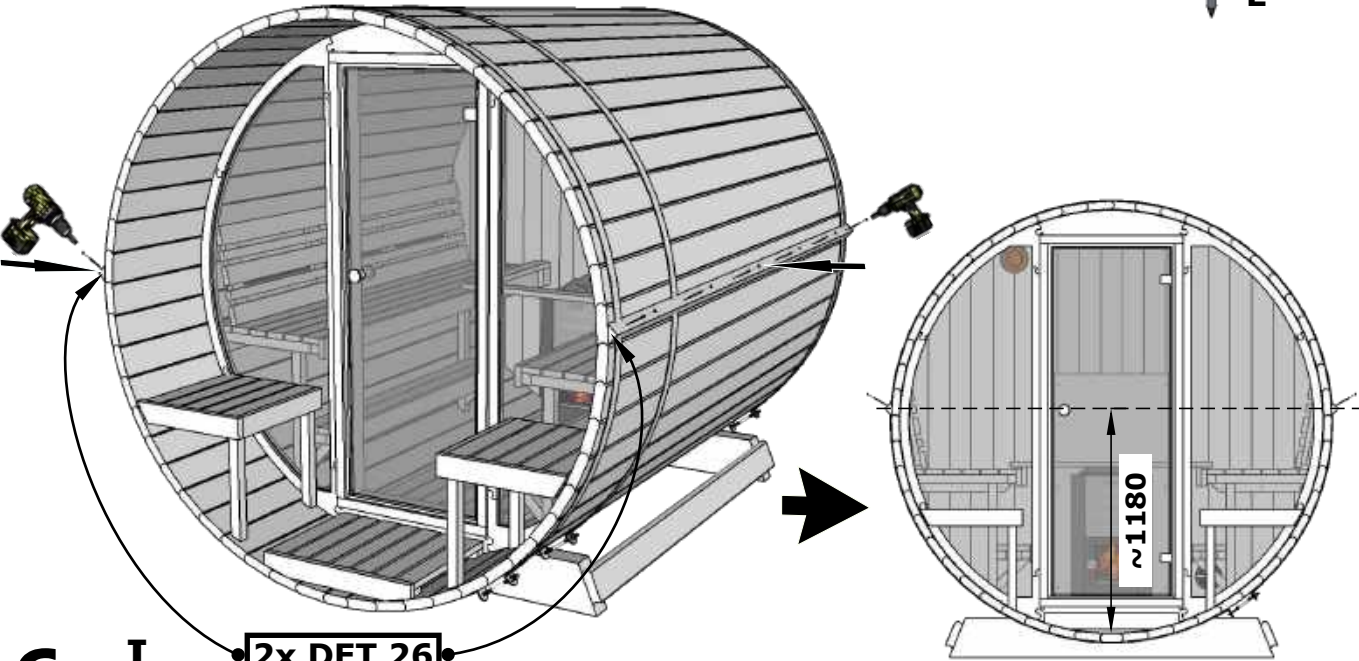
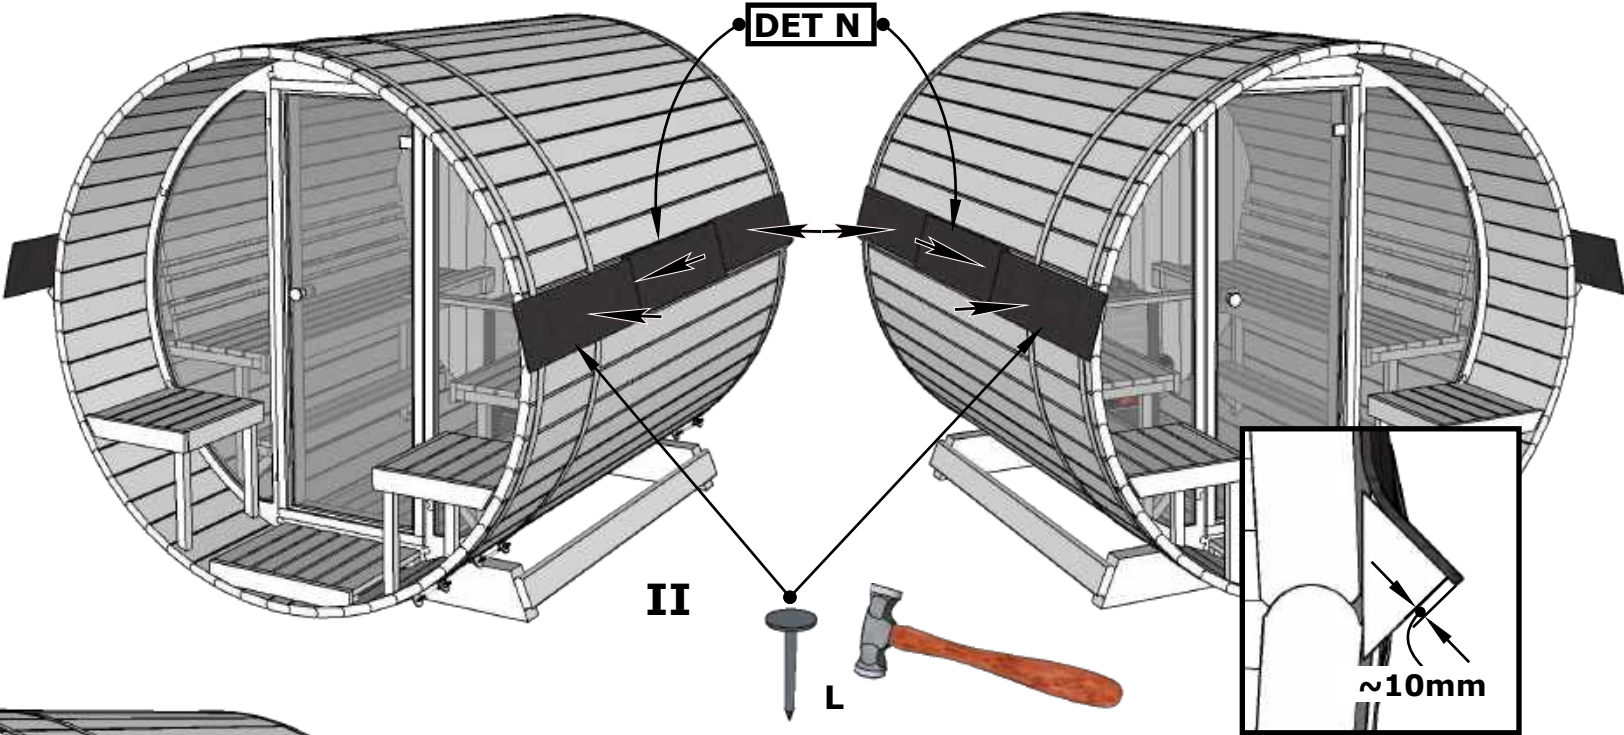


16. I 2x DET 26


Sauna 280, Ø235




NB! Check also shingles installation manual inside shingles package!

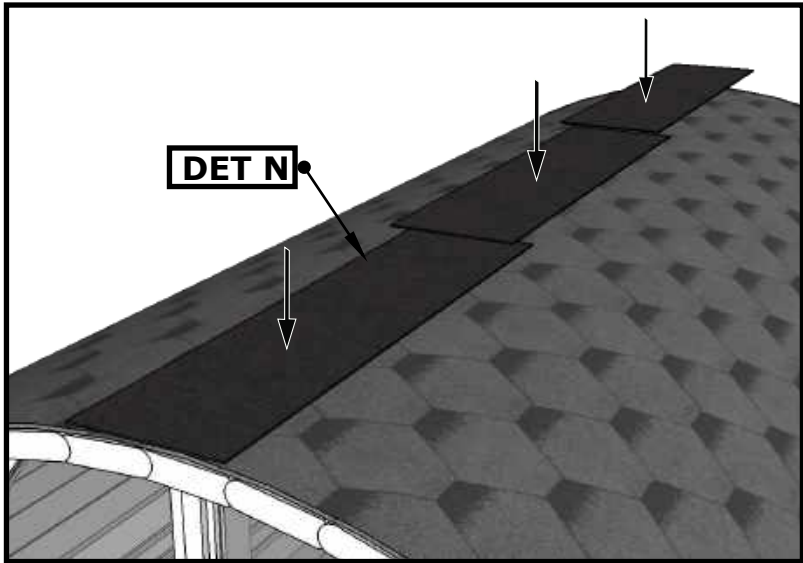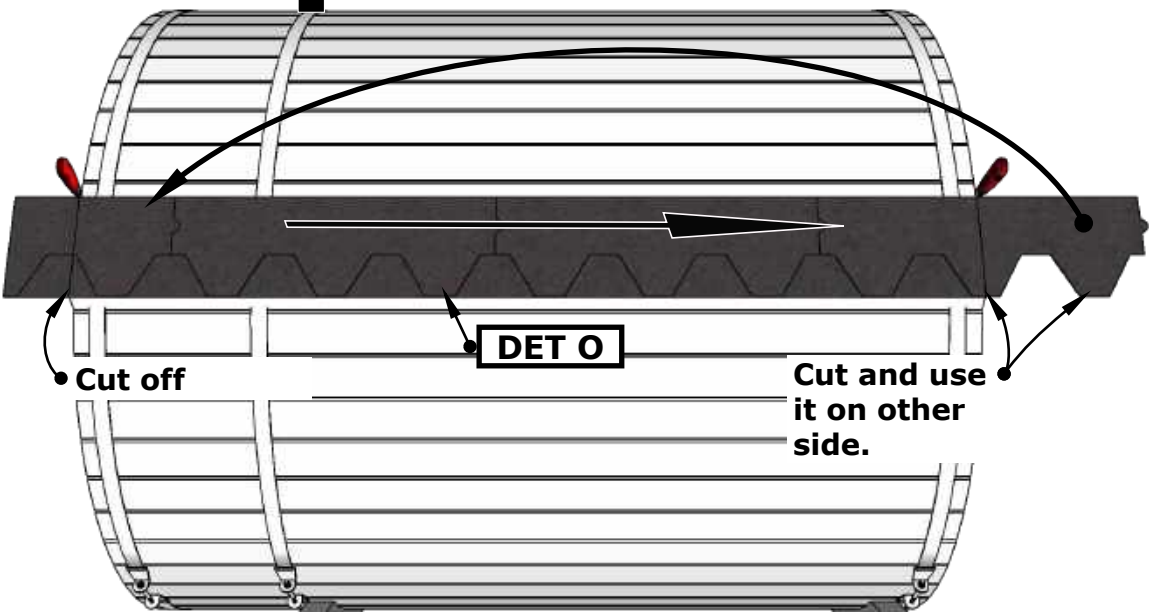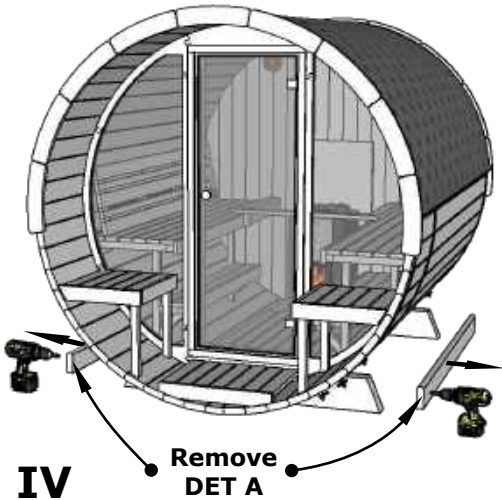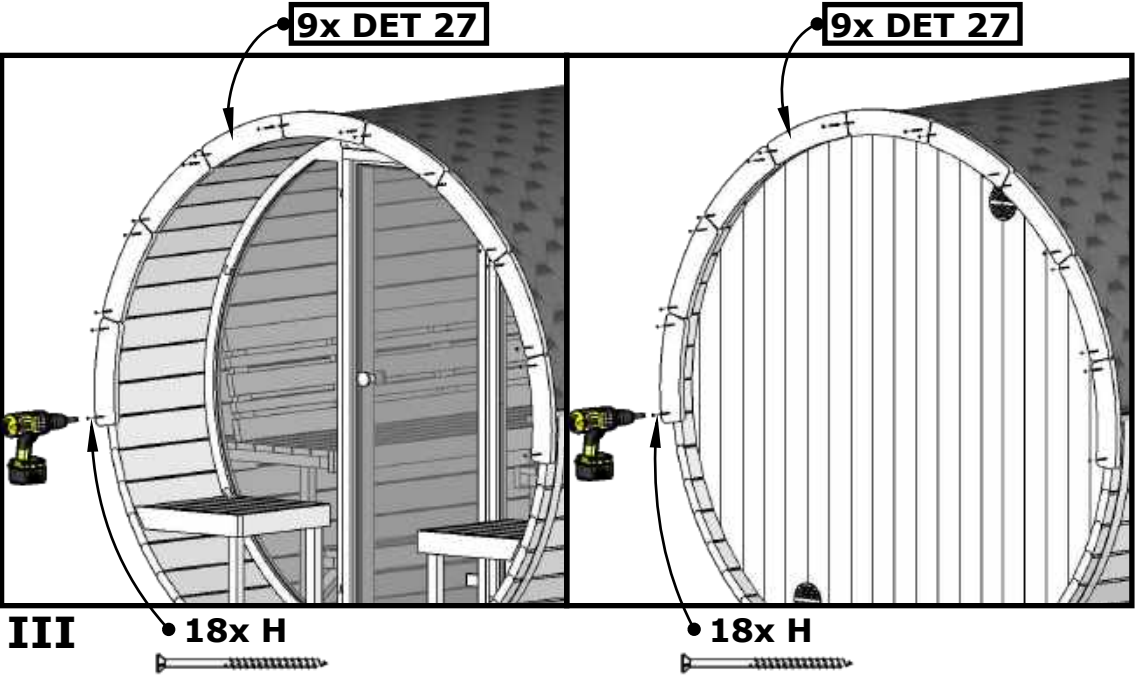


Glass Wall mounting Ø226

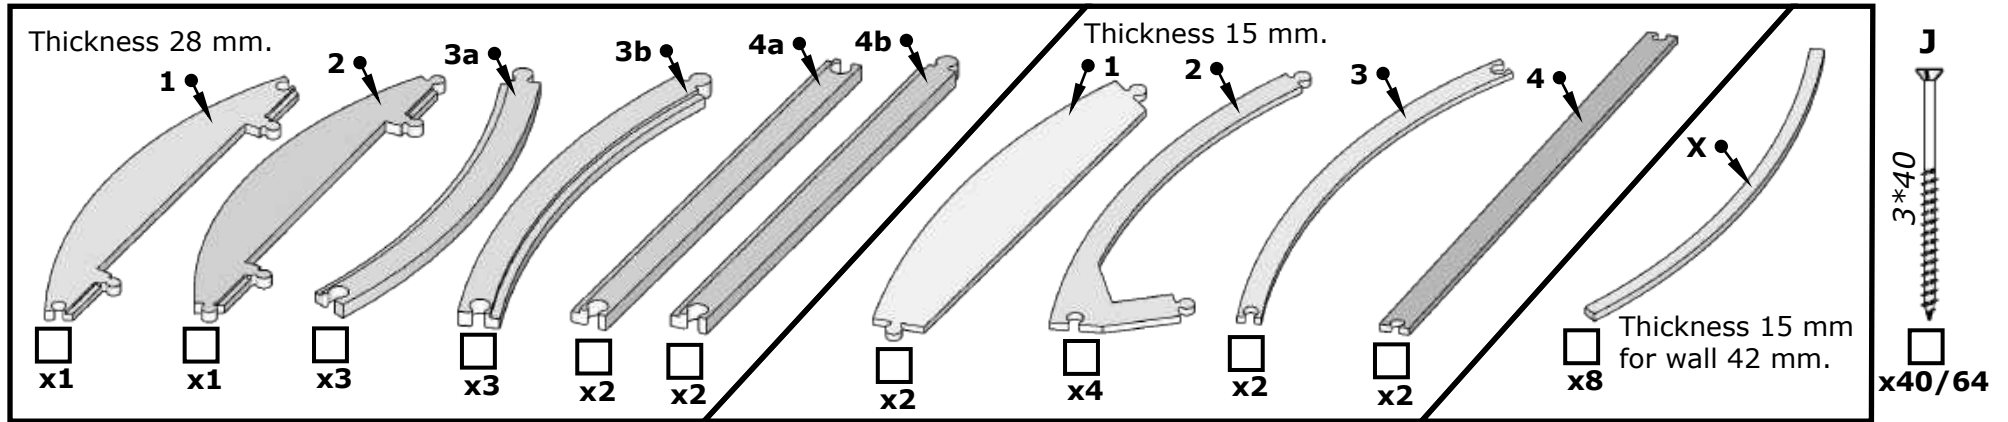


Baseframe 28mm.

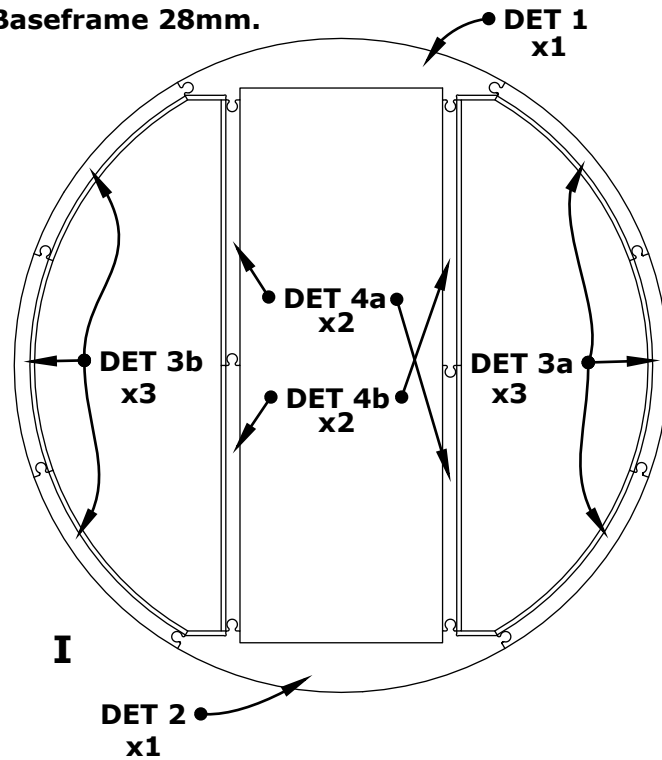



Use piece of wood to protect plywood

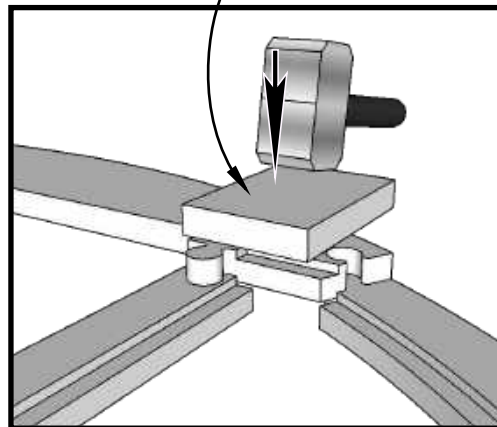



Apply waterproof silicone to the groove

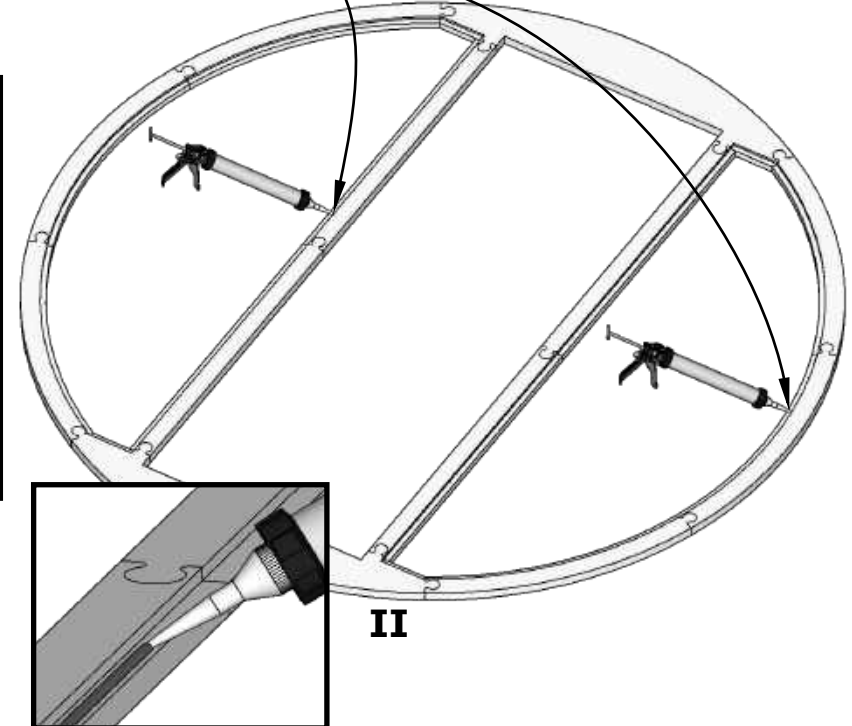


Glass Wall mounting Ø226

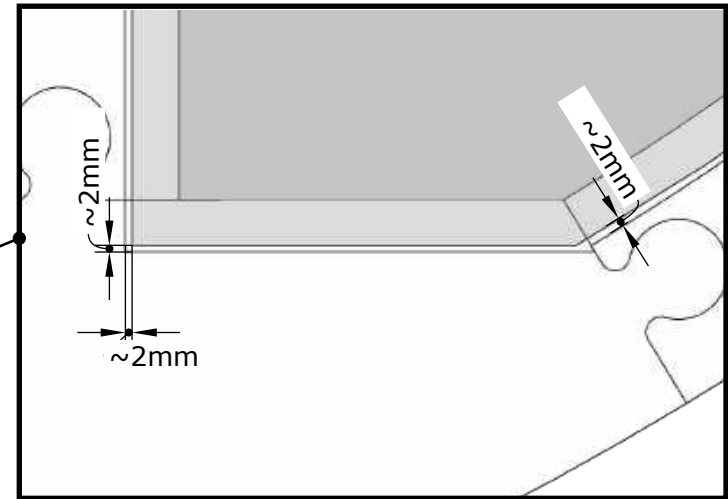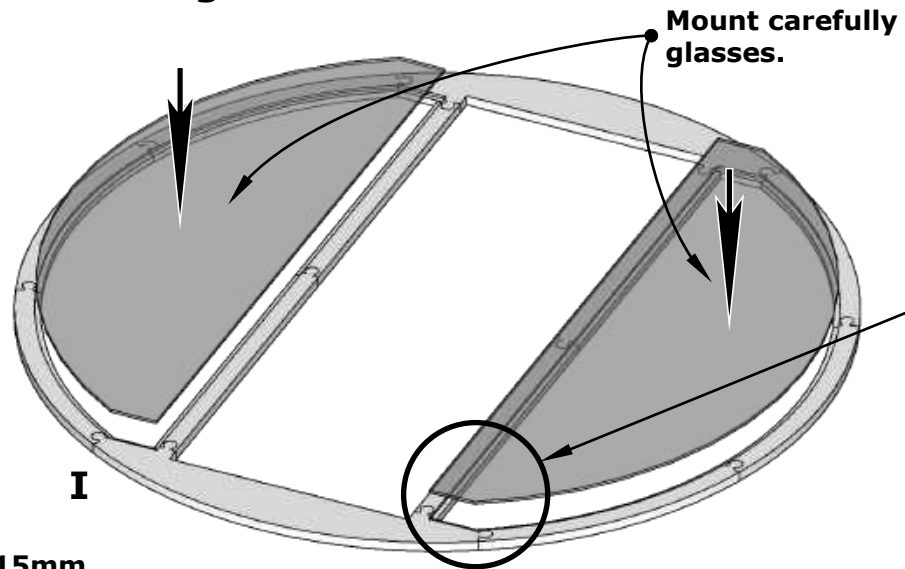

Coverframe 15mm.

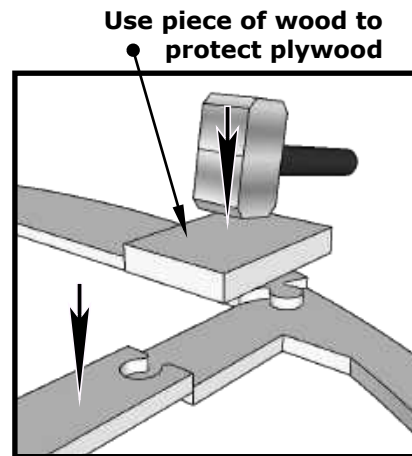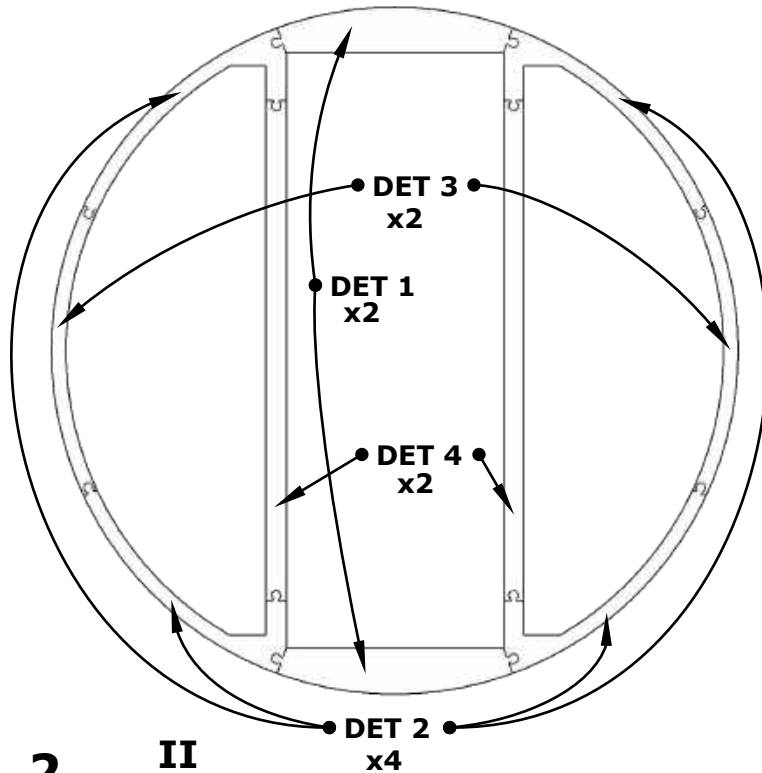

Apply waterproof silicone

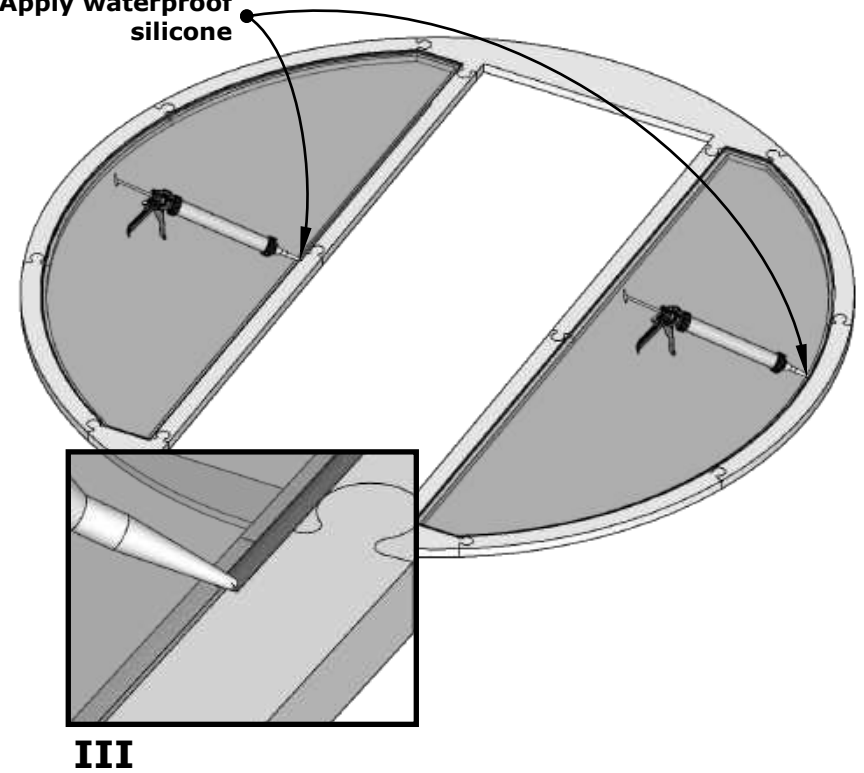

Glass Wall mounting Ø226

